Operating and Service Manual

LAB COPY

GOULD 481 RECORDER

GOULD

Electronics & Electrical Products

GOULD

MANUAL PART NO.
15-806687-01

GOULD 481 RECORDER

The information contained herein is the exclusive property of Gould Inc., except as otherwise indicated and shall not be reproduced, in whole or in part, without explicit written authorization from the company. The distribution of this material outside the company may occur only as authorized by the company in writing.

Additional copies of this publication may be ordered by contacting your local Gould representative.

All information contained in this manual is the latest product information available at the time of printing. The right is reserved to make changes at any time without notice.

PRINTED MAY, 1979
COPYRIGHT 1972

Gould Inc., Instruments Division
3631 Perkins Avenue, Cleveland, Ohio 44114

9TH PRINTING
PRINTED IN USA

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_06184

WARRANTY

CURRENT EQUIPMENT:

The Gould Instruments Division's products as shown in the Current Equipment Catalog are warranted for a period of one year from date of shipment to original purchaser. They are warranted to conform to the applicable published specifications in effect at the time of shipment, and to be free from any defects in material or manufacture when used with recommended Gould associated equipment and Gould chart paper. LIABILITY OF THE GOULD INSTRUMENTS DIVISION UNDER SUCH WARRANTY IS LIMITED TO SERVICING OR REPLACING DEFECTIVE PARTS EXCEPT PENS, STYLI, FUSES AND BATTERIES AND DOES NOT INCLUDE CALIBRATION AND MINOR MAINTENANCE AS OUTLINED IN GOULD OPERATING MANUALS. (Exception: The thermal pen in the 110 Strip Chart Recorder is guaranteed for life.) IN NO EVENT SHALL THE GOULD INSTRUMENTS DIVISION BE LIABLE UNDER ANY CIRCUMSTANCES, FOR ANY LOSS OF PROFITS OR OTHER CONTINGENT, CONSEQUENTIAL OR SPECIAL DAMAGES. Units are to be returned transportation prepaid by the buyer. The Gould Instruments Division will have the right of final determination of the cause and existence of a defect under this warranty. This warranty shall not apply to any products which have been subjected to misuse, improper installation, repair, alteration, neglect, accident, inundation, fire or operation outside their published maximum ratings. THE FOREGOING WARRANTY IS EXCLUSIVE AND EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS AND OF ANY OTHER OBLIGATION AND SHALL CONSTITUTE THE SOLE REMEDY OF THE BUYER AND SOLE LIABILITY OF THE SELLER.

REPLACEMENT PARTS: Same as above —— except ninety (90) days from date of shipment.

If a defect occurs:

1. Notify your nearest ID Service Center (see below), giving full details of the difficulty, and include the model number, type number, and serial number. On receipt of this information, service data or shipping authorization and instructions will be forwarded to you.
2. On receipt of the shipping authorization, forward the instrument prepaid to location indicated on shipping authorization.

Compliance with the above procedure will assure the earliest repair and return of your equipment.

SERVICE CENTERS

BOSTON
INSTRUMENTS DIVISION
129 Middlesex Turnpike
Burlington, Massachusetts 01803
Phone: (617) 272-0750

BAY AREA (CA)
INSTRUMENTS DIVISION
25936 Eden Landing Road
Hayward, CA 94545
Phone: (415) 887-1300

CHICAGO
INSTRUMENTS DIVISION
1001 Oakton Street
Elk Grove Village, Illinois 60007
Phone: (312) 640-4380

CLEVELAND
INSTRUMENTS DIVISION
3631 Perkins Avenue
Cleveland, Ohio 44114
Phone: (216) 361-3315

DAYTON
INSTRUMENTS DIVISION
4668 Gateway Circle
Kettering, Ohio 45440
Phone: (513) 433-9586

DENVER
INSTRUMENTS DIVISION
1500 West Hampden Avenue
Unit 100C
Englewood, Colorado 80110
Phone: (303) 781-4473

DETROIT
INSTRUMENTS DIVISION
23775 Northwestern
Southfield, Michigan 48075
Phone: (313) 355-0900

COLUMBIA, SC
INSTRUMENTS DIVISION
c/o W.A. Brown Instruments Inc.
1201 St. Andrews Road
Columbia, SC 29210
Phone: (803) 798-8070

HOUSTON
INSTRUMENTS DIVISION
10500 Northwest Freeway
Houston, Texas 77092
Phone: (713) 680-1121

HUNTSVILLE, AL
INSTRUMENTS DIVISION
c/o W.A. Brown Instruments Inc.
7917-C Charlotte Drive
Huntsville, Alabama 35802
Phone: (205) 883-8660

LANHAM, MD
INSTRUMENTS DIVISION
5900 Princess Garden Parkway
Lanham/Seabrook, Maryland 20706
Phone: (301) 459-7350

LOS ANGELES
INSTRUMENTS DIVISION
2525 Campus Drive
Irvine, California 92715
Phone: (213) 639-7301

ORLANDO
INSTRUMENTS DIVISION
c/o W.A. Brown Instruments Inc.
222 Weber Avenue
Orlando, Florida 32803
Phone: (305) 425-5505

PHILADELPHIA
INSTRUMENTS DIVISION
GSB Building
Belmont & City Line Avenue
Bala Cynwyd, Pennsylvania 19004
Phone: (215) 839-7066

PITTSBURGH
INSTRUMENTS DIVISION
Campbells Run Road
Parkway West
Pittsburgh, Pennsylvania 15205
Phone: (412) 923-2160

SADDLEBROOK
INSTRUMENTS DIVISION
74 Kenney Place
Saddle Brook, New Jersey 07662
Phone: (201) 845-0220

SEATTLE
INSTRUMENTS DIVISION
The Commons Bldg. Suite C-155
1200 112th Avenue NE
Bellevue, Washington 98004
Phone: (206) 453-8100

TORONTO
ALLAN CRAWFORD ASSOC., LTD
6503 Northam Drive
Mississauga, Ontario, Canada
Phone: 678-1500

EUROPE

GOULD INSTRUMENTS S.A.F.
57 rue St. Sauveur 91160
Ballainvilliers, France
Phone: 909-10-67

GOULD INSTRUMENTS DIVISION
Roebuck Road
Hainault, Essex, England
Phone: 01-500-1000

GOULD INSTRUMENTS DIVISION
Dieselstrasse 5-7
D-6453 Seligenstadt,
West Germany
Phone: 06182-3107

Gould instruments are individually tested and calibrated before shipment to assure dependability and verify their accuracy. To this procedure must be added an unseen ingredient of prime importance to you: The Gould concept of continuing service. Gould responsibility for each instrument sold covers far more than its delivery. Of equal concern is the equipment's suitability for its intended purpose, its correct installation, instruction of operating personnel — plus future servicing and maintenance. The Gould Field Service Department offers customers any or all of these services:

Field Service

- o Installation
- o Field maintenance
- o NBS Certification

Training

- o Instruction of operators
- o On-site training seminars
- o Formal Training courses

Service Contracts

- o Fixed Fee
- o Time and Material
- o Extended Warranty

Our Seal of Pride Gould Inc., Instruments Division, and its predecessor organizations tracing back to Charles F. Brush, have been preeminent in instrumentation development since the 1920's. Among Gould's many achievements is a series of the world's best performing, most versatile, and reliable direct writing recording systems.

Today, Gould recorders and signal conditioners are the overwhelming choice for recording analog signals in the most critical industrial, scientific, and biophysical measurement applications. Whether recording the faintest life signals of a patient in a hospital operating room or the most critical variables in the lab or on the production line, you can depend on the accuracy, faithfulness, clarity, and permanence of the traces made by a Gould recorder.

Innovative design, coupled with highest quality, are hallmarks of all Gould products.

The Field Service Engineer Gould field service engineers provide on-the-spot assistance whenever and wherever it is required. While every field service engineer is the product of intensive and thorough factory training, you will find that his greatest strength evolves from field experience and his knowledge of your objectives. He is aware of your problems, is willing and able to assist you in their solution, and is backed by the nation's most experienced organization in recording instrumentation.

Our field service engineers and technicians are daily engaged in the installation, testing, maintenance, repair and inspection of Gould recording systems all over the country. They can provide you with any information about our instruments you may require; if not, they will find the answer to your problem.

Overhaul and Repair Because we service only our own products, our customers can feel confident of prompt, effective results when they turn to Gould Factory Service Centers.

The repair service these centers provide is of particular appeal to those companies that do not operate an instruments repair facility of their own. By designating the nearest Gould Service Center as its maintenance depot, a Gould-equipped company is assured the best chance for continuity of recording instrumentation.

Many companies with their own repair facilities find it more convenient and more truly economical to have their Gould equipment repaired by service contract with the closest Service Center. In addition to enjoying fast turn-around, these companies are spared the expense of carrying an inventory of recorder parts, accessories, and supplies.

Calibration and Certification A small, quiet room in the Standards and Calibration Section at the Gould plant in Cleveland contains precision reference standards just one step removed from the prime reference measurement standards of the United States — at the National Bureau of Standards in Washington. Included in this room, which is temperature-controlled within one degree and has a constant relative humidity of 40%, are standards for voltage, frequency (derived from the atomic vibration of caesium), resistance, capacitance — in fact all basic parameters of electrical measurement. The room is maintained under stabilized conditions 365 days a year.

The calibration practice of all Gould Service Centers is directly traceable to the National Bureau of Standards. We can supply complete calibration for any Gould equipment, and we can also certify to manufacturer's specifications followed by a letter of certification when required.

Training The Gould field service engineer will hold short training courses either on the job or at his facility. On-the-job training is usually a brief, informal session with the people who will actually be operating the Gould equipment.

Formal classroom training is more complete: detailed information, a thorough review of underlying theory, training devices, demonstration of problem solving and examination of students to determine their understanding and proficiency is accomplished at our Cleveland plant.

Contracts Customer companies requiring temporary or permanent service are afforded contract arrangements by which agreed-upon maintenance, repair, upgrading and calibration services are performed on a routine basis. Service contracts are now in effect with a number of customers, affording substantial savings in time and money.

Owing to the various requirements of each customer, we do not reproduce here a standard, boilerplate agreement — which might contain too much or too little. Instead, we tailor each contract to a particular customer's needs. This practice has singlehandly produced substantial savings in time and money for others; and it can do the same for you.

An extended warranty is available at the point of sale allowing a regulated budget for the first two years of ownership. You may take advantage of this warranty within the first year of ownership at a percentage of the current listed price.

TABLE OF CONTENTS

I GENERAL INFORMATION

1.1 Introduction 1.1
1.2 Specifications 1.2
1.3 Supplies and Accessories 1.4

II INSTALLATION

2.1 General 2.1
2.2 Incoming Inspection 2.1
2.3 Power Requirements 2.1
2.4 Signal Connections 2.1
2.5 Internal Timer Installation 2.1
2.6 Accessory Event Markers 2.2
2.7 Portable Case Installation 2.2
2.8 Slide Mounting Kit 2.2

III OPERATION

3.1 General 3.1
3.2 Front Panel 3.1
3.3 Rear Panel 3.3
3.4 Recorder Set-Up and Operation 3.5

IV MAINTENANCE

4.1 General 4.1
4.2 Changing Chart Paper 4.1
4.3 Replacing Analog Pen 4.2
4.4 Replacing Event Pen 4.3
4.5 Replacing Penmotor Band Asm 4.4
4.6 Pen Pressure Measurement and Adjustment 4.5
4.7 Pen Lapping 4.6
4.8 Ink Cartridge Replacement 4.7
4.9 Pen Cleaning 4.9
4.10 Pen Lapping Procedures for Extended Life Pen, Model 11-2823-34 . . . . . 4.9
4.11 Schematics 4.10

V THEORY OF OPERATION

5.1 General 5.1
5.2 Drive Amplifier Network Assm 869223 . . . . . 5.1
5.3 Sensitivity (Attenuator) Control & Preamplifier Circuits 5.3

VI CALIBRATION

6.1 General 6.1
6.2 Test Equipment Required 6.1
6.3 Calibration Procedure 6.1

VII PARTS IDENTIFICATION

7.1 General 7.1

SECTION I

GENERAL INFORMATION

1.1 INTRODUCTION

The Gould 481 Recorder (Figure 1-1) is a general purpose analog recorder featuring eight 40mm analog channels, two event markers, 12 pushbutton-controlled chart speeds, and eight isolated preamplifiers with differential, floating, and balanced to guard inputs and sensitivities from one millivolt per division to 500 volts full scale. Frequency response is flat from d-c to 40 Hz full scale, to 100 Hz at 10 divisions (±2% of full scale).

Controls, including 13-step input signal attenuators, intermediate sensitivity, and pen position, are provided on the front panel for each analog channel. Adjustable internal electronic pen limits on the amplifiers prevent analog pen damage from excessive off-scale input signals.

A pressurized ink system enables pens to write dry, smudge-free traces. Disposable plastic ink cartridges can be replaced in minutes. If power is lost or chart paper supply is exhausted, the writing system stops immediately and ink is withdrawn from the pen tip back into the system. Ink "puddling" cannot occur.

A pen-position servo system, based on a frictionless transducer, assures extreme accuracy. Penmotor and transducer are fully enclosed and are immune to wear, time and dirt.

This rugged recorder is available with portable carrying case or slide adapter for rack mounting (refer to Para. 1.3, Supplies and Accessories).

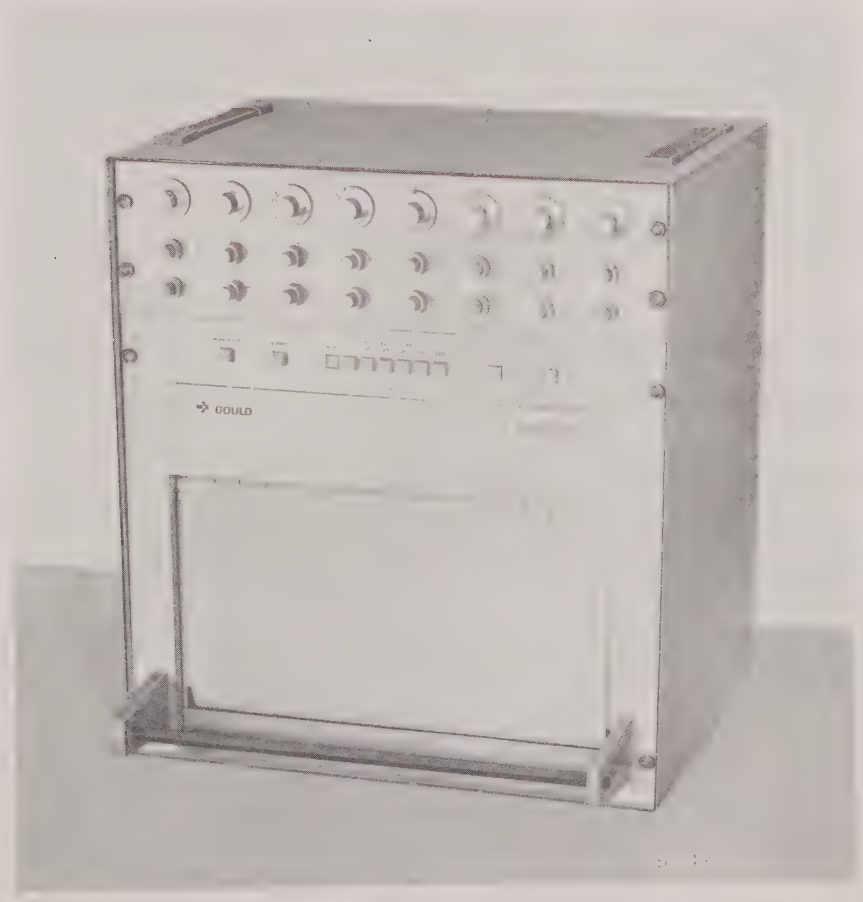

FIGURE 1-1 GOULD 481 RECORDER

1.2 SPECIFICATIONS

a. General

Number of Channels	8 analog and 2 event markers located between channels 1 & 2 and 7 & 8
Channel Span	40mm (50 divisions)
Trace Presentation	Rectilinear
Trace Width	0.01 in. nominal
Marking Method	Pressurized marking fluid
Marking Fluid Capacity	Three 1-oz cartridges (sufficient for one year of normal recording); replaceable throwaway cartridge
Chart Speeds	12 speeds pushbutton (electrically) selected: 0.05, 0.1, 0.25, 0.5, 1.0, 2.0, 5, 10, 25, 50, 100 and 200 mm/sec
Chart Speed Accuracy	±0.25%
Chart Length	High-contrast – 300 feet Reproducible – 450 feet
Chart Width	15 inches
Chart Divisions	50 divisions in 40 mm(wide), 1 mm(time)
Rewind	External – see Para. 1.3, Supplies and Accessories

b. Signal Inputs

Circuit	Differential, floating, and balanced to guard
Impedance	10 megohms balanced, 5 megohms each terminal to guard
Sensitivity	1 mv/div to 500 volts d-c full scale
In-Phase Rejection	80 dB at 60 Hz with maximum source unbalance of one kilohm at one mv/div sensitivity setting (decreasing on higher sensitivity settings)
Maximum Signal Input	500 volts d-c, or peak a-c (either input to ground)

Maximum Common Mode Voltage . . . . . a) 500 volts d-c or peak a-c at any attenuator setting between input terminals and case ground.

b) 5,000 times the VOLTS/DIV sensitivity setting up to a maximum of 500 volts between input terminals and guard

ATTENUATOR SETTING	MAX COMMON–MODE VOLTAGE
1 mv/div	5V d-c
2 mv/div	10V d-c
5 mv/div	25V d-c
10 mv/div	50V d-c
20 mv/div	100V d-c
All others	500V d-c

c. **Recorder Characteristics**

Deflection Non-Linearity . . . . . 0.5% of full scale

Frequency Response (peak-to-peak) . . . . . 50 divs ±1 div d-c to 40 Hz
10 divs ±1 div d-c to 100 Hz
10 divs ±1 div 3 dB down at 125 Hz

Noise . . . . . 0.2 div maximum

Stability, after 15 minute warm-up (excluding paper drift)

Zero with Time . . . . . ±0.1 div per 8 hours

Zero with Temperature . . . . . ±0.1 div per °C, 25° C, ±10° C

Zero with Line Voltage . . . . . ±0.05 div per volt ±10% line variation

Gain with Time . . . . . ±0.2% per 8 hours

Gain with Temperature . . . . . ±0.05% per °C, 25° C ±10° C

Gain with Line Voltage . . . . . ±0.05% per volt, ±10% line variation

Power Input . . . . . 115V a-c ±10%; 60 Hz, 300 watts (375 va) Model 15-6687-01
230V a-c ±10%; 50 Hz, 300 watts (375 va) (Model 15-6687-06)

Operating Temperature . . . . . 0° C to 55° C

Storage Temperature . . . . . –40° C to 85° C

Dimensions . . . . . Refer to outline drawing 282977

Weight . . . . . 110 lbs (approximate)

1.3 SUPPLIES AND ACCESSORIES

Analog Pen 11-2823-33

Extended Life Analog Pen 11-2823-34

Event Marker Pen 11-2873-20

Ink Cartridge, Blue 11-2730-01

Chart Paper

- High-Contrast – 300 feet (for use with or without Z-fold) 11-2983-300
- Reproducible – 450 feet 11-2983-40

Tools

- Pen Tubing Removal Tool 267528
- Pen Replacement Wrench (Multiple splined) 1-120922-2
- Pen Pressure Adjustement Wrench (Multiple splined) 1-120922-18
- Gram Gage (Pen pressure) 240601-910
- Band Replacement Tool 341409-915
- Band Replacement Wrench (Multiple splined) 1-120922-3
- Band Replacement Wrench (Hex) 245218-5

Portable Case Assembly 11-1115-31

Slide Mounting Kit (19 inch) 11-1202-21

External Chart Takeup 11-6402-06

Z-Fold Chart Paper Adapter 11-2271-21

Z-Fold Chart Paper 11-2983-300

Event Market Kits

- Left Hand Margin 11-6222-02
- Interchannel 11-6222-02
- Right Hand Margin 11-6222-01

One Second Timer . . . . . RA 2101-10

Signal Input Connectors (Analog) 234321

SECTION II

INSTALLATION

2.1 GENERAL

This section describes the inspection checks to be performed upon receipt of the Gould 481 Recorder and describes power requirements and signal connections. In addition, this section describes and illustrates installation of Event Marker Kits, External Chart Takeup, Portable Case Mounting, and Slide Mounting.

2.2 INCOMING INSPECTION

Perform the following procedures before operating the recorder.

1. Visually inspect unit for damage that may have occurred during shipment. Refer to warranty sheet in case of damage.

2. Remove packing material and tape from recorder.

NOTE: Do not attempt to operate this equipment before completing Section III, Operation.

2.3 POWER REQUIREMENTS

Connect power cable to correct power source listed below for applicable model.

Model No.	Power Source
15-6687-01	115 volts a-c±10%,60 Hz, 300 watts
15-6687-06	230 volts a-c±10%;50 Hz, 300 watts

2.4 SIGNAL CONNECTIONS

a. Analog

Inputs to analog channels should be made using a shielded two-conductor cable. (Belden 8422 or equivalent). Input connectors (part number 234321) are to be wired as follows:

Signal High	Pin 1
Signal Low	Pin 2
Shield (guard)	Pin 3

b. Event Markers

Event Markers may be actuated by an external switch closure (short) across terminals located on recorder rear connector panel.

Resistance of each event marker coil is 600 ohms at −32V d-c, connected from an internal source.

2.5 INTERNAL TIMER INSTALLATION (RA 2101-10)

To install one second timer, proceed as follows:

1. Prepare four timer leads by attaching a push-on terminal, Brush part number 265840-1 (Amp, Inc., number 60573-1).

NOTE: Crimping tool is AMP, Inc., of Harrisburg, Pa., part number 47042 (for terminal 60573-1).

2. Mount timer using two screws, lockwashers and hex nuts (supplied with timer). Refer to Figure 2-1 for timer location and connection of leads.

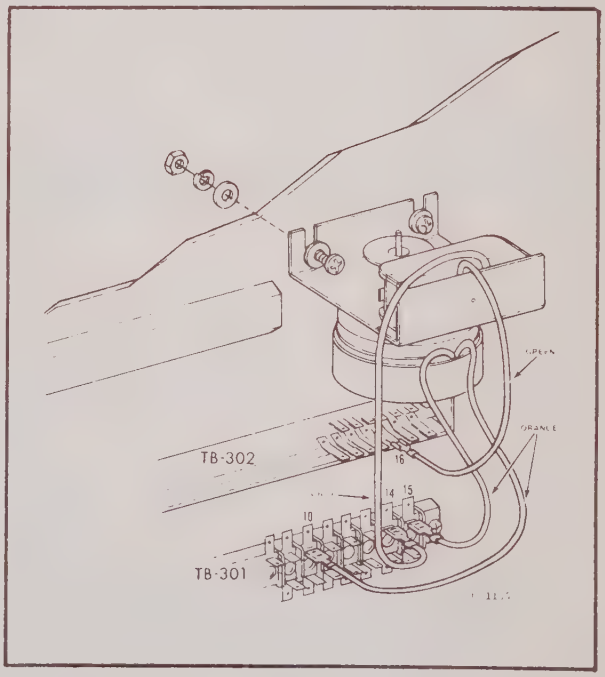

FIGURE 2-1 TIMER INSTALLATION

3. Connect timer leads as follows:

Orange	TB-301-15
Orange	TB-301-10
Grey	TB-301-14
Green	TB-302-16

Timer Model RA 2101-10 is an accessory, and although it may be factory installed, the timer output may be easily changed to actuate any desired event marker. Refer to Figure 2-2 and make connections as shown.

NOTE: Solid lines in Figure 2-2 do not indicate factory installed wiring. All wiring shown in Figure 2-2 must be installed as shown. Only one event marker may be connected at any time. These connectors are located behind rear connector panel.

2.6 ACCESSORY EVENT MARKERS

The Gould 481 Recorder may use up to seven event markers, two standard and five accessory. To aid in locating event markers, they are identified as follows:

Event Marker	Location	Deflection
A	Left Margin	Right
B	Between Analog 1 & 2(standard)	Right
C	Between Analog 2 & 3	Right
D	Between Analog 4 & 5	Right
E	Between Analog 6 & 7	Right
F	Between Analog 7 & 8(standard)	Right
G	Right Margin	Left

Event Markers A, B, C, D, E and F are Model 11-6222-02. Installation is described on drawing 669788. Event Marker G is model 11-6222-01. Installation is described on drawing 669693. Event Marker G cannot be used if chart paper Z-fold adapter is used, since ink trace may trigger folder mechanism.

2.7 PORTABLE CASE INSTALLATION

The Gould 481 Recorder may easily be adapted for use as a portable instrument using portable case, Model 11-1115-31. For complete installation instructions, refer to drawing 683014.

2.8 SLIDE MOUNTING KIT INSTALLATION

The Gould 481 Recorder is designed for installation in a 19" RETMA mounting rack. However, to provide greater ease in sericing, recorder may be mounted on pullout slides, using slide mounting kit, Model 11-1202-21. For complete installation instructions, refer to drawing 683000.

2.9 CHART TAKEUP INSTALLATION

External Chart Takeup, Model 11-6402-06 can be easily installed on the Gould 481 Recorder. For complete installation instructions, refer to drawing 669664.

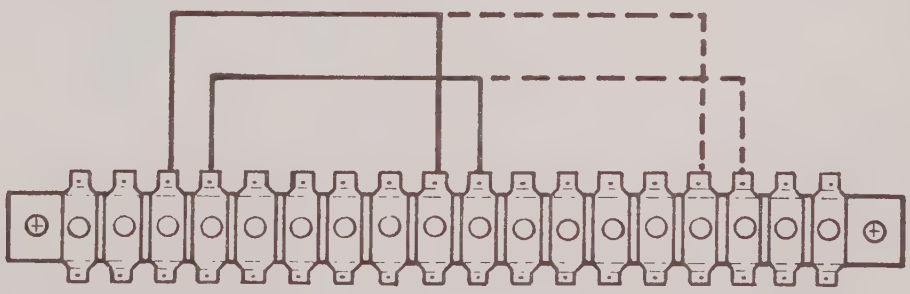

NOTES:
1. Typical connections for accessory timer.
2. Solid lines show connection to Event "E"
3. Dotted lines show connection to Event "B"
4. Timer must not be connected to more than one (1) event marker at any time

FIGURE 2-2 EVENT MARKER - TIMER INTERCONNECTIONS

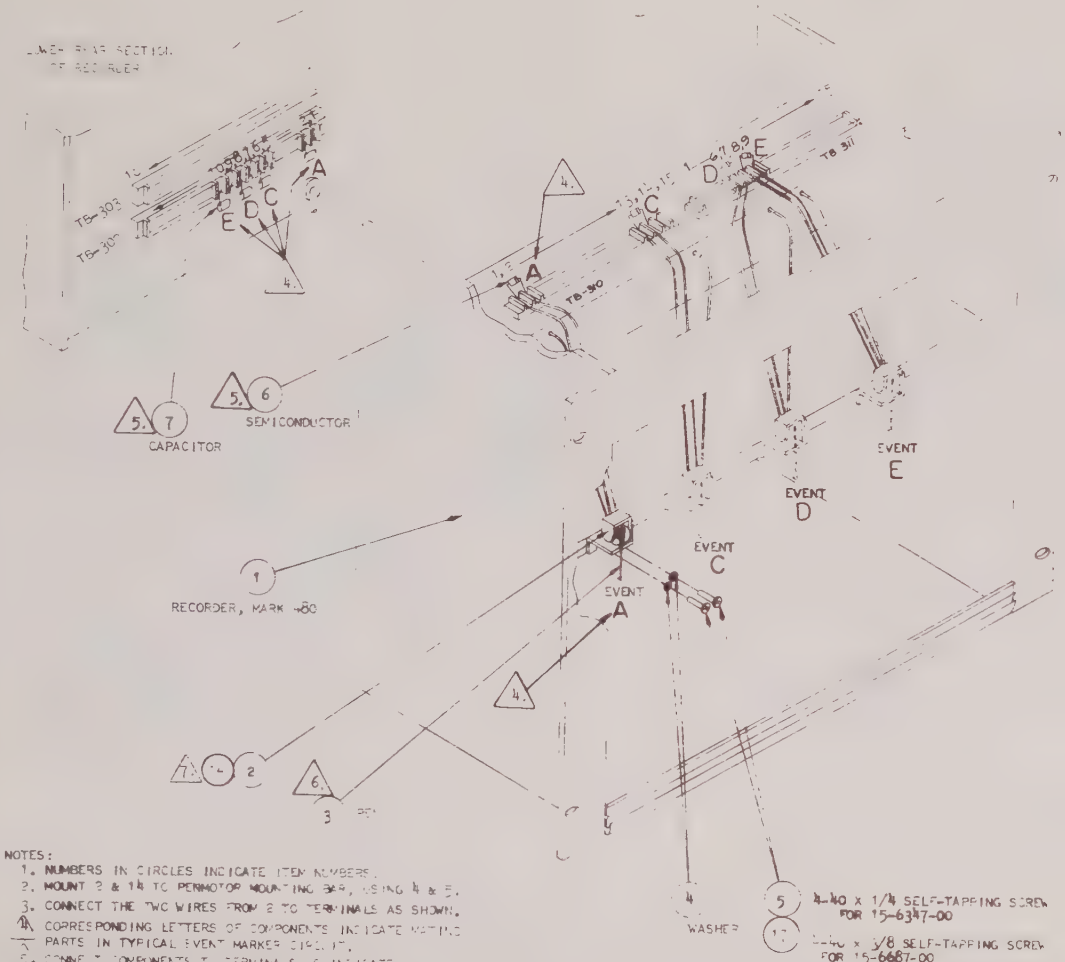

NOTES:
1. NUMBERS IN CIRCLES INDICATE ITEM NUMBERS.
2. MOUNT 3 & 14 TO PERMOTOR MOUNTING BAR, USING 4 & 5.
3. CONNECT THE TWO WIRES FROM 2 TO TERMINALS AS SHOWN.
4. CORRESPONDING LETTERS OF COMPONENTS INDICATE MATING PARTS IN TYPICAL EVENT MARKER CIRCUIT.
5. CONNECT COMPONENTS TO TERMINALS AS INDICATED.
6. MOUNT 3 TO CHASSIS AS SHOWN. REMOVE AND DISCARD FACTORY SUPPLIED PLASTIC CAP, CONNECT INK TUBE AS SHOWN.
7. ITEM 6 IS TO BE ASSEMBLED BETWEEN EVENT MARKER BRACKET & PEN MOTOR BAR.
8. REFER TO 2 WIRING DIAGRAM EVENT MARKER TO 15-6681-00.

Information contained herein is considered proprietary to GOULD INC., INSTRUMENT SYSTEMS DIVISION Release of this information is to facilitate the servicing and maintenance of Gould equipment only

Under no circumstances shall this information be transmitted reproduced, disclosed to, or used by any person or organization other than those engaged in such activities without the express written consent of GOULD INC., INSTRUMENT SYSTEMS DIVISION

REVISIONS		
SYM	DESCRIPTION	DATE
A-1	ADDED ITEM 14 & RE NOTE 2, DCN 12524 E.D.	4-23-69
B1 B2	EVENT "D" WAS TERM. 8 & 9 EVENT "E" WAS TERM. 9 & 10 DCN 12558 & 12658	2-2-70 SHARIZ
C-1	ADDED NOTE 7, E.BROD DCN 14732	
D-1	ADDED PG. 2, ITEMS 15 & 16 AND NOTE 8 DCN 15050	3-25-71
E-1	PG. 2, REV. WIRE CALLOUT ON TB-303 DCN 15117 EP	7-7-71
F-1	ADDED ITEM-17 & NOTE 8 DCN 15967	BROD 9-18-71

Gould Inc.
Instrument Systems Division
Cleveland, Ohio 44114 U.S.A.

NO	BRUSH PART NO	DESCRIPTION	QUAN
30			
29			
28			
27			
26			
25			
24			
23			
22			
21			
20			
19			
18			
17	13-262716-4006	SCREW, SELF-TAPPING	2
16	15-6063?-00	MANUAL, OPERATING	-
15	15-63-7-00	RECORDER, MARK 480	-
14	280050	SPACER	1
13	269789	SCHEMATIC	1
12	669788	SHIP. LIST & INSTALL. INST.	1
11	422615	ENVELOPE, MANUAL	-
10	15-6056C7-00	MANUAL, OPERATING	-
9	2-0273-1	BAG, PLASTIC	1
8	222640	CARD, CONCEALED DAMAGE	1
7	10-241145-224	CAPACITOR	1
6	231887	SEMICONDUCTOR	1
5	13-262716-4004	SCREW, SELF-TAPPING	2
4	11-19?-304	WASHER, FLAIN	2
3	11-2873-29	PEN ASSY	1
2	11-6221-02	EVENT MARKER KIT	1
1	12-6687-00	RECORDER, MARK 480	-

SHIPPING LIST

DRAWN	DATE	SHIPPING LIST & INSTALLATION INSTRUCTIONS	
VAUGHN	EP		
CHECKED		CODE IDENT NO. 96795	SIZE G
APPROVED			669788

Form 25 167

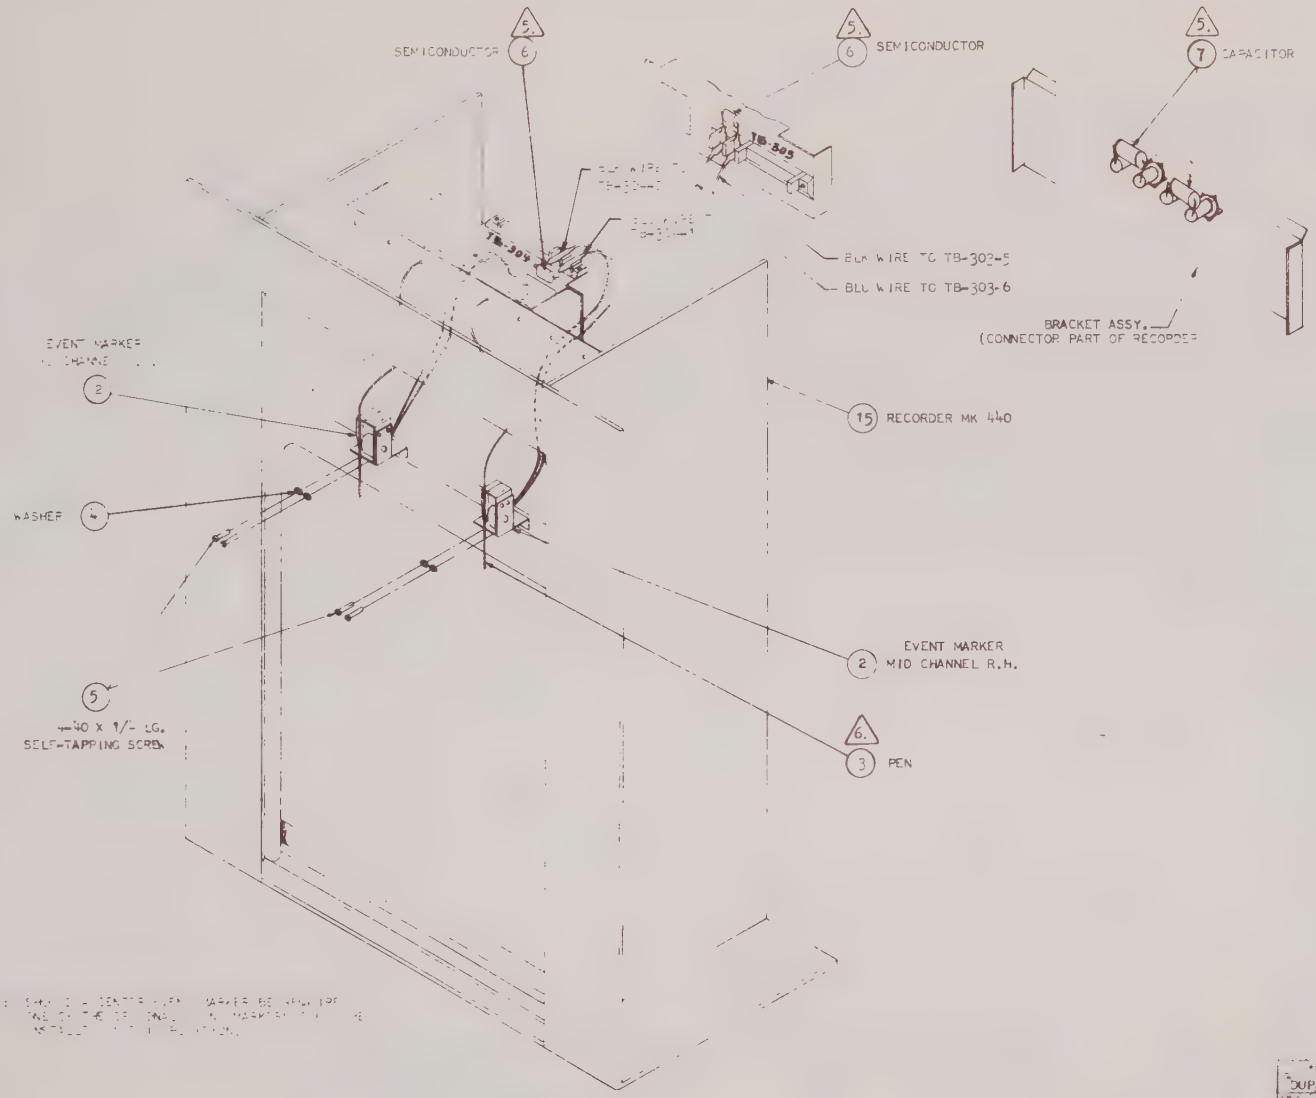

NOTE:

REVISIONS

SYM	DESCRIPTION	DATE

Gould Inc.
Instrument Systems Division
Cleveland, Ohio 44114 U.S.A.

DUPAL

SHIPPING LIST & INSTALLATION INSTRUCTIONS

229788

96795

229788

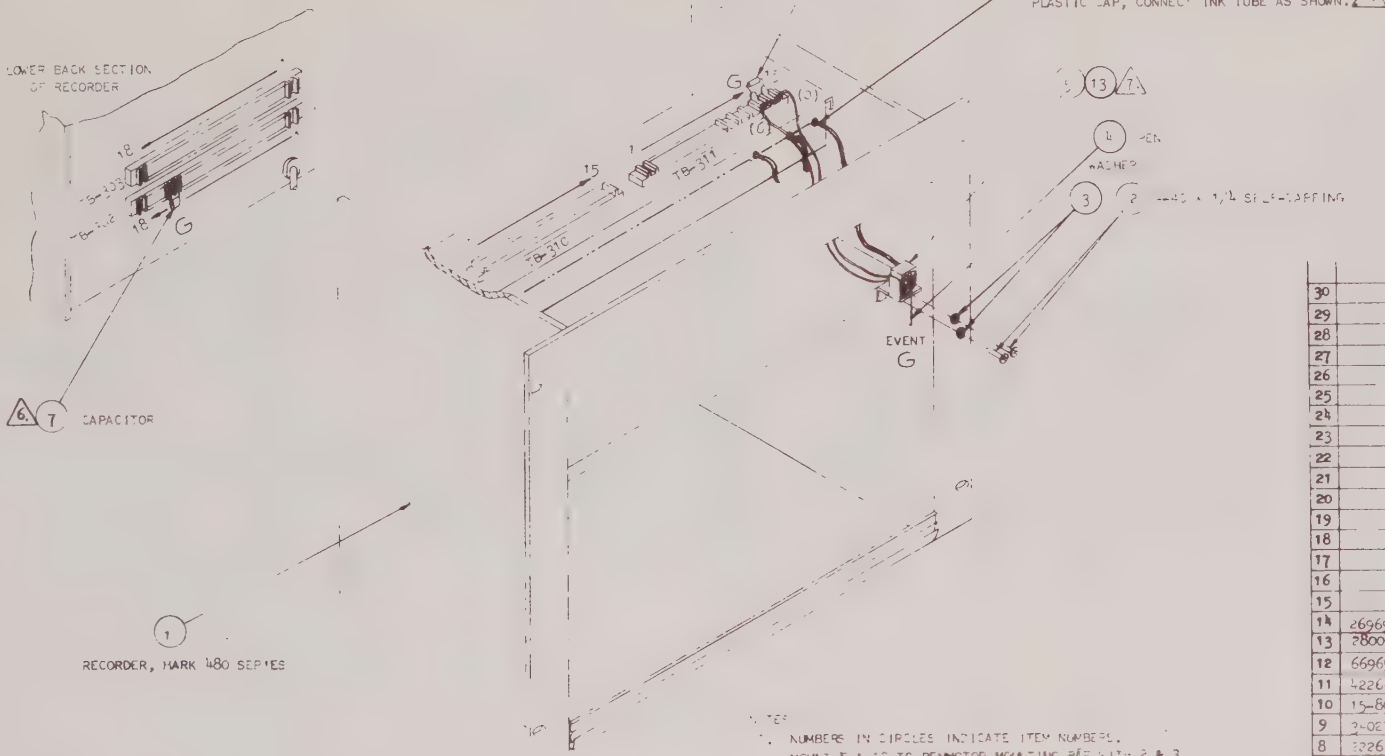

NOTES

1. NUMBERS IN CIRCLES INDICATE ITEM NUMBERS.
2. MOUNT 5 & 13 TO PENMOTOR MOUNTING BAR WITH 2 & 3.
3. CONNECT TWO WIRES FROM 5 TO TB-311, TERMINALS 14 & 15 AS SHOWN.
4. MOUNT 4 TO 5.
5. CONNECT 6 TO TB-311, TERMINALS 14 & 15 (SOLDER AS SHOWN.
6. MOUNT 7 TO TB-302, TERMINALS 13 & 14 (SOLDER AS SHOWN.
7. ITEM 7 TUBE ASSEMBLIES BETWEEN EVENT MARKER & PEN MOTOR BAR.

REVISIONS		
SYM	DESCRIPTION	DATE
A-1	ADDED ITEM 13 & REV NOTE 2. ECO 12524 EP	12-23-69
B-1	ADDED ITEM 14 NOTE 7 PER ECO 13736	

NO	PART NO	DESCRIPTION	QTY
30			
29			
28			
27			
26			
25			
24			
23			
22			
21			
20			
19			
18			
17			
16			
15			
14	26969-	SCHEMATIC	1
13	280050	SPACER	1
12	669693	SHIP. LIST & INSTALL. INST.	1
11	4226-2	ENVELOPE, MANUAL	1
10	15-806687-00	MANUAL, OPERATING	-
9	24-0272-1	BAG, PLASTIC	1
8	32260	CARD, CONCEALED DAMAGE	1
7	10-24115-224	CAPACITOR	1
6	231887	SEMICONDUCTOR	1
5	11-6222-01	KIT ASSY, EVENT MARKER	1
4	11-2873-2	PEN ASSY	1
3	1-118195-04	WASHER, PLAIN	2
2	1-262716-00	SCREW, SELF-TAPPING	2
1	11-6637-00	BASE	-

SHIPPING LIST

DRAWN	DATE	NAME	SHIPPING LIST & INSTALLATION INSTRUCTIONS
VAUGHN	12/69	EF	
CHECKED			
WEIGAND	12/69		
ENGR. APPR.			
9679C			
SCALE			669693
G			

669693

Gould Inc.
Instrument Systems Division
Cleveland, Ohio 44114 U.S.A.

Information contained herein is considered proprietary ... GOULD INC. INSTRUMENT SYSTEMS DIVISION ... Under no circumstances shall this information be duplicated, reproduced, published by, or used for any purpose or in connection with, than those expressly authorized by agreement with GOULD INC. INSTRUMENT SYSTEMS DIVISION

REVISIONS			
SYM	DESCRIPTION	DATE	APPROVAL
B-3	REDRAWN NO CHANGES	9/12/74	

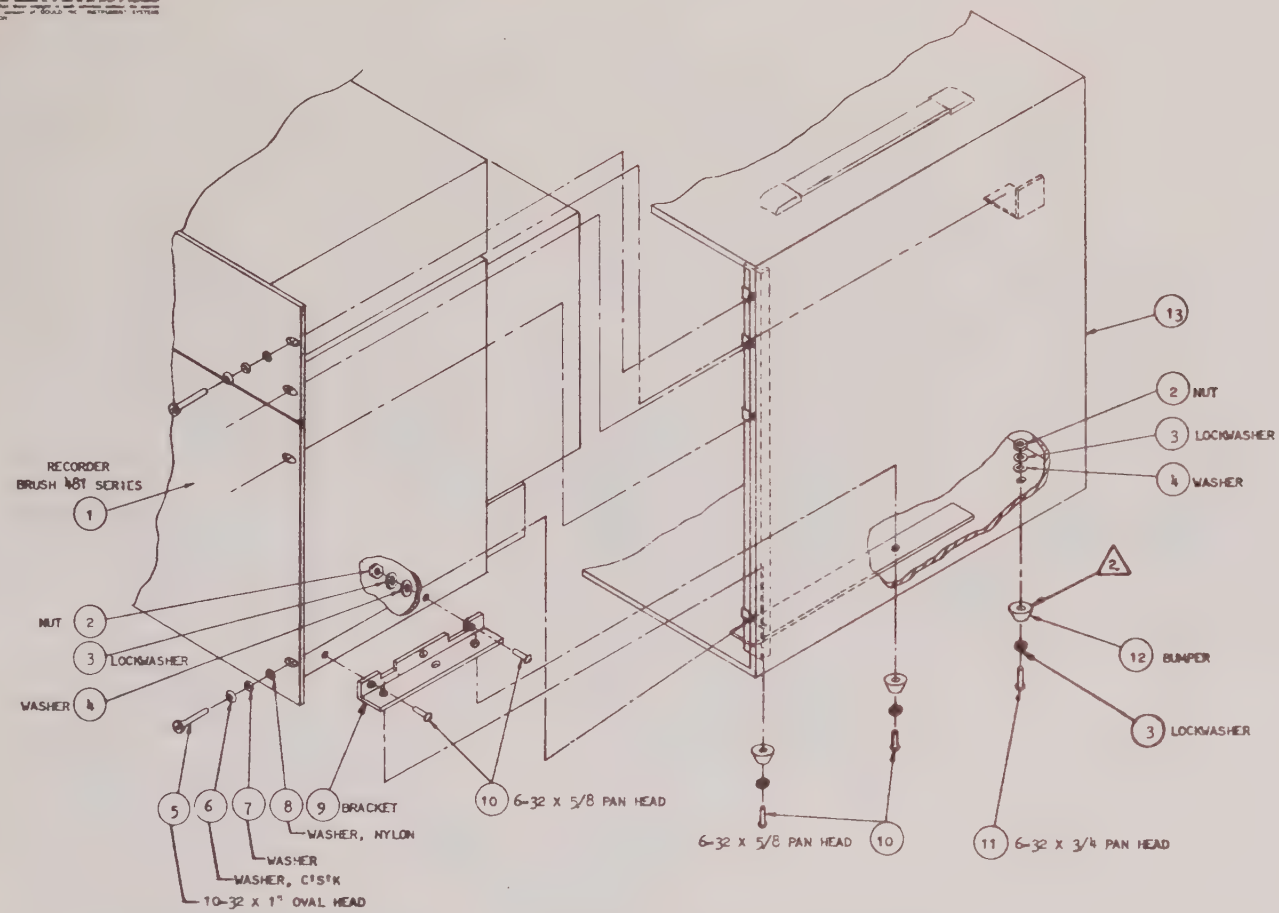

NOTES:
1. NUMBERS IN CIRCLES INDICATE ITEM NUMBERS.
2. ASSEMBLE THE TWO REAR FEET, 12, AND FOUR BRACKETS, 9, BEFORE 1 IS INSERTED INTO 13.
3. INSERT 1 INTO 13, THEN ASSEMBLE FRONT FOUR FEET, 12, TO SECURE UNIT AS SHOWN.
4. INSTALLATION TYPICAL OF BOTH SIDES.

NO	BRUSH PART NO	DESCRIPTION	QUAN
30			
29			
28			
27			
26			
25			
24			
23			
22			
21			
20			
19			
18			
17	683014	SHIP. LIST & INSTALL INST.	1
16	222640	CARD, CONCEALED DAMAGE	1
15	422642	ENVELOPE, MANUAL	-
14	15-806687-01	MANUAL, OPERATING	-
13	11-[illegible]5-31	CASE ASSEMBLY	1
12	264083	BUMPER	6
11	31-[illegible]3318-621	SCREW, PAN HEAD	2
10	31-[illegible]3218-621C	SCREW, PAN HEAD	8
9	285119	BRACKET	2
8	128967-1	WASHER, PLAIN - NYLON	8
7	126138-5	WASHER	8
6	31-120650-10	WASHER, CISIK	8
5	31-121534-0216	SCREW, OVAL HEAD	8
4	11-118195-305	WASHER, PLAIN	6
3	11-216741-429	LOCKWASHER, SPRING	12
2	31-[illegible]3238-62	NUT, HEX	6
1	[illegible]-6687-01	RECORDER, BRUSH 48	-

SHIPPING LIST

DR	9/12/74	NAME	Gould Inc. Instruments Systems Division Cleveland Ohio 44114 U.S.A.
CHECKED	9/12/74	SHIPPING LIST & INSTALLATION INSTRUCTIONS	
ENG APPR	9/12/74	CODE IDENT 96795 SIZE G	DWG NO 683014

683014

TK

REPRO 669755 REVISIONS			
SYM	DESCRIPTION	DATE	APPROVAL
00	PHOTO-REPRO/J.UDOVIC NO CHANGE		2/24/76
A1	REVISED PER REISSUE DCN 23244 D.BAILEY	3/1/78	

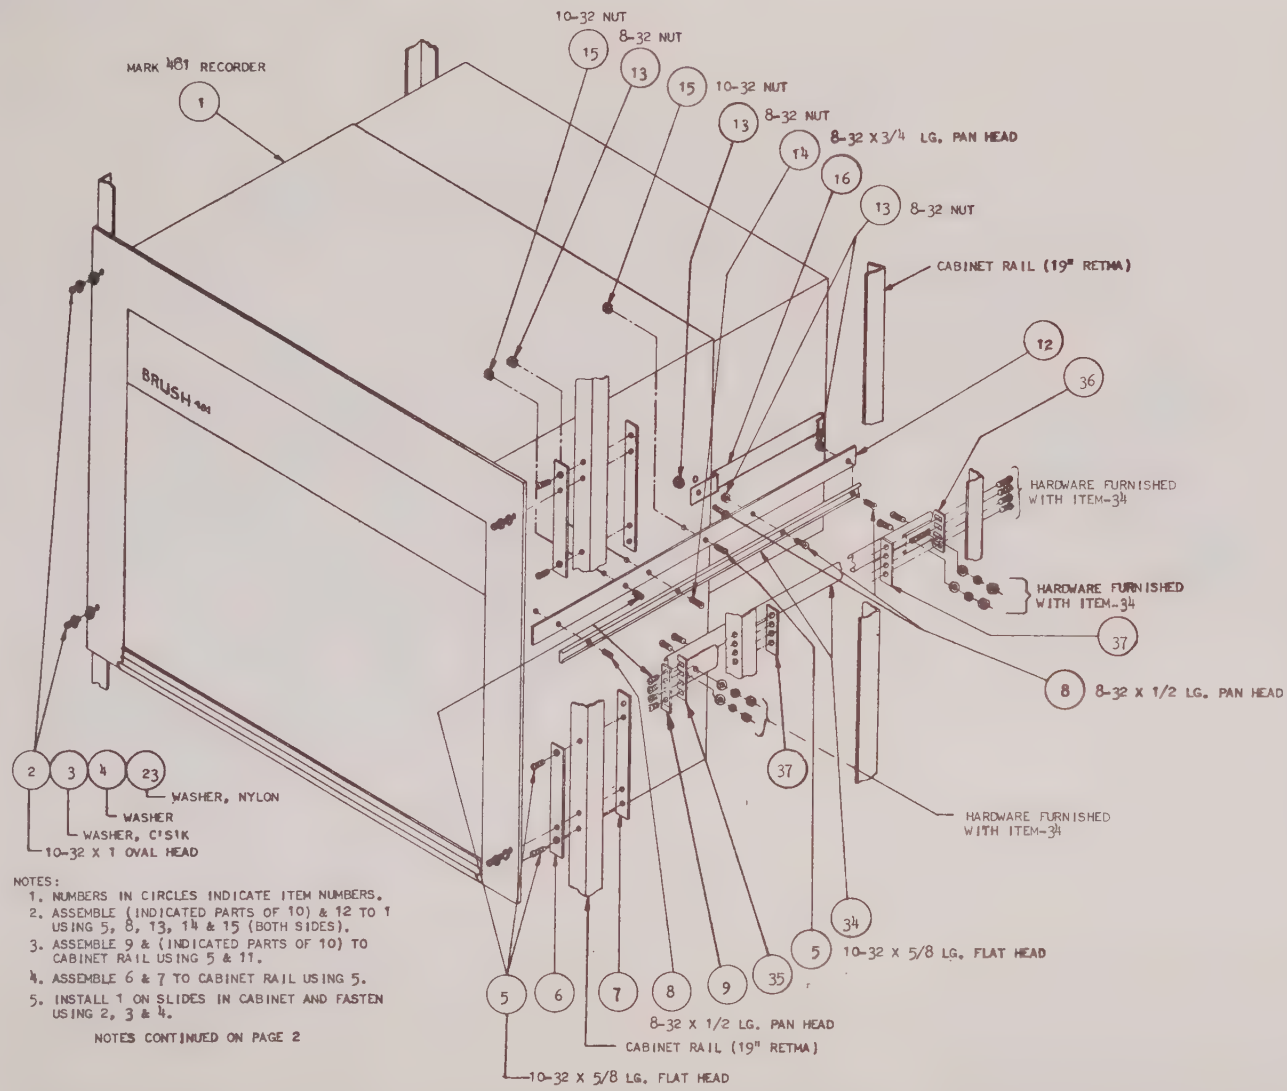

NOTES:
1. NUMBERS IN CIRCLES INDICATE ITEM NUMBERS.
2. ASSEMBLE (INDICATED PARTS OF 10) & 12 TO 1 USING 5, 8, 13, 14 & 15 (BOTH SIDES).
3. ASSEMBLE 9 & (INDICATED PARTS OF 10) TO CABINET RAIL USING 5 & 11.
4. ASSEMBLE 6 & 7 TO CABINET RAIL USING 5.
5. INSTALL 1 ON SLIDES IN CABINET AND FASTEN USING 2, 3 & 4.

NOTES CONTINUED ON PAGE 2

NO	BRUSH PART NO.	DESCRIPTION	QUAN
	SHIPPING LIST		
30	31-119998-02	NUT, HEX.	4
29	345982	SLIDE, REAR R.H.	1
28	345983	SLIDE, REAR L.H.	1
27	246200	NUT, BAR	4
26	345984	SUPPORT	2
25	31-119918-0200	SCREW, PAN HD.	1
24	31-121534-0220	SCREW, OVAL HD.	4
23	128967-1	WASHER, PLAIN, NYLON	4
22	683000	SHIP.LIST & INSTAL.INST.	1
21	422642	ENVELOPE, MANUAL	-
20	15-806687-01	MANUAL, OPERATING	-
19	CABINET	19" RETMA	-
18	11-1202-21	KIT ASSY., RACK MTG.	1
17	222640	CARD, CONCEALED DAMAGE	1
16	269737	SPRING, RACK LOCK	1
15	243898-02	NUT, ASSEMBLED LOCKWASHER	4
14	31-119918-8212	SCREW, PAN HD.	2
13	243898-82	NUT,ASSEMBLED LOCKWASHER	7
12	269623	SPACER, SLIDE	2
11	31-119918-0210	SCREW, PAN HD.	8
10			
9	265678	SPACER, CENTER	2
8	31-119918-8208	SCREW, PAN HD.	5
7	269625	NUT PLATE	4
6	269624	SPACER	4
5	31-119920-0210	SCREW, FLAT HEAD	14
4	126138-9	WASHER, NYLON	8
3	31-120650-10	WASHER, C'SIK, HOLLOW	8
2	31-121534-0216	SCREW, OVAL HEAD	4
1	15-6687-01	MARK 481 RECORDER ASSY.	-

BY	DATE	NAME
KISNER	2/20/76	
V.L.L.	2/24/76	
MCCAHAN	2/24/76	

SHIPPING LIST & INSTALLATION INSTRUCTIONS

Gould Inc Instrument Systems Division Cleveland Ohio 44114 U.S.A.

CODE IDENT 96795 SIZE G DWG. NO 683000

information contained herein is considered proprietary to GOULD INC., INSTRUMENT SYSTEMS DIVISION. Release of this information is to facilitate the servicing and maintenance of Gould equipment only.

Under no circumstances shall this information be transmitted, reproduced, disclosed to or used by any person or organization other than those engaged in such activities without the express written consent of GOULD INC. INSTRUMENT SYSTEMS DIVISION

REPRO 649982 REVISIONS

SYM.	DESCRIPTION	DATE	APPROVAL

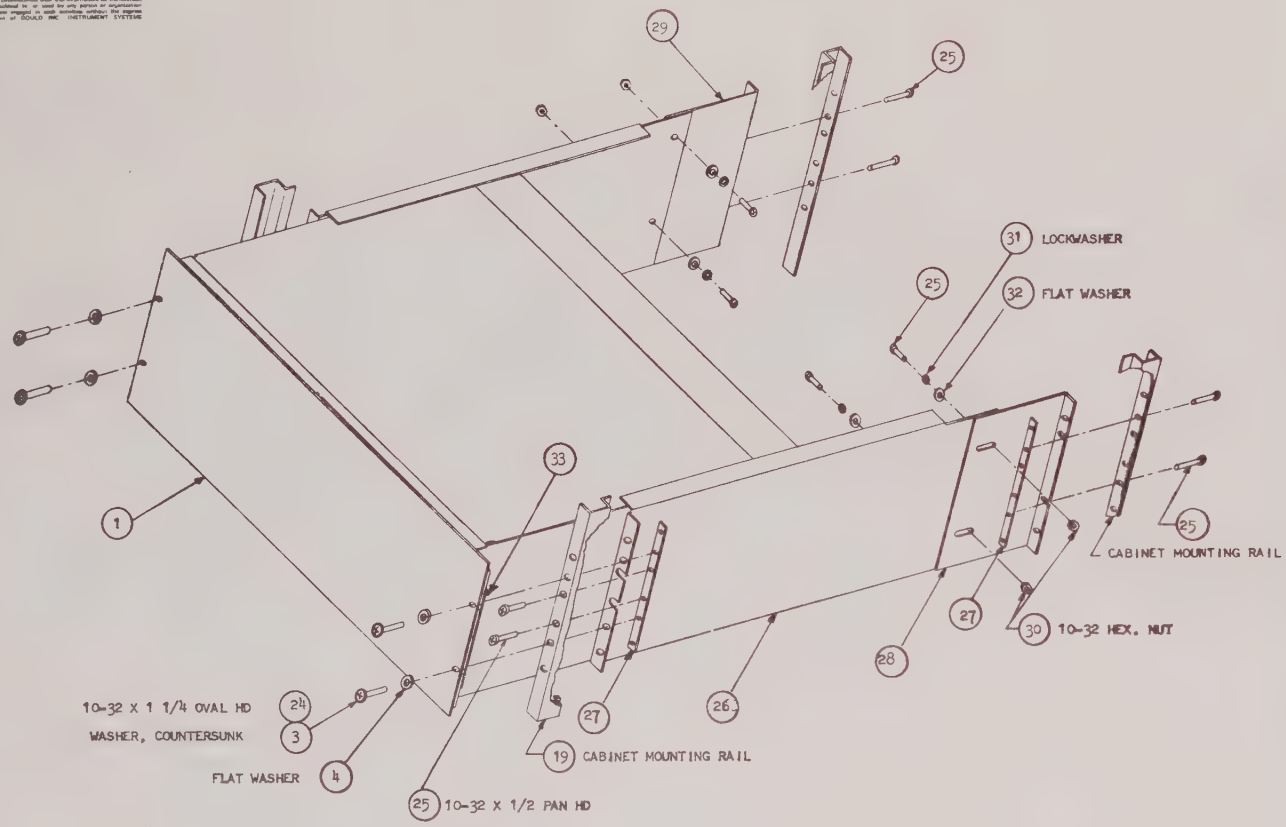

CTD. NOTES:

6. ASSEMBLE 26 & 27 TO 19 USING 25.
7. ASSEMBLE 27 & 28 TO 19 USING 25.
8. ASSEMBLE 26 & 28 USING 25, 30, 31 & 32.
9. OPPOSITE SIDE: REPEAT NOTES 6, 7 & 8.
10. INSTALL 1 IN CABINET & FASTEN BOTH SIDES WITH 24, 3 & 4.

NO.	BRUSH PART NO.	DESCRIPTION	QTAN
37	269569-4	BAR NUT	4
36	269569-3	REAR BRACKET	2
35	269569-2	FRONT BRACKET	2
34	269569-1	SLIDES, PAIR	1
33	219562	PLATE, SPACER	2
32	1-118195-309	WASHER	4
31	1-216741-430	LOCKWASHER, SPRING	4

SHIPPING LIST

BY	DATE	NAME	SHIPPING LIST & INSTALLATION INSTRUCTIONS	Gould Inc Instrument Systems Division Cleveland, Ohio 44114 U.S.A.	
DR KISNER	3/9/72				
" V.L.	3/9/72				
CH MCCAHAN	3/9/72	CODE IDENT 96795	ISSUE CODE G	DWG. NO. 683000	PAGE 2 OF 2

Form 75 3-71

Information contained herein is considered proprietary to GOULD INC., INSTRUMENT SYSTEMS DIVISION. Release of this information is to facilitate the servicing and maintenance of Gould equipment only.

Under no circumstances shall this information be transmitted, reproduced, disclosed to, or used by any person or organization other than those engaged in such activities without the express written consent of GOULD INC., INSTRUMENT SYSTEMS DIVISION.

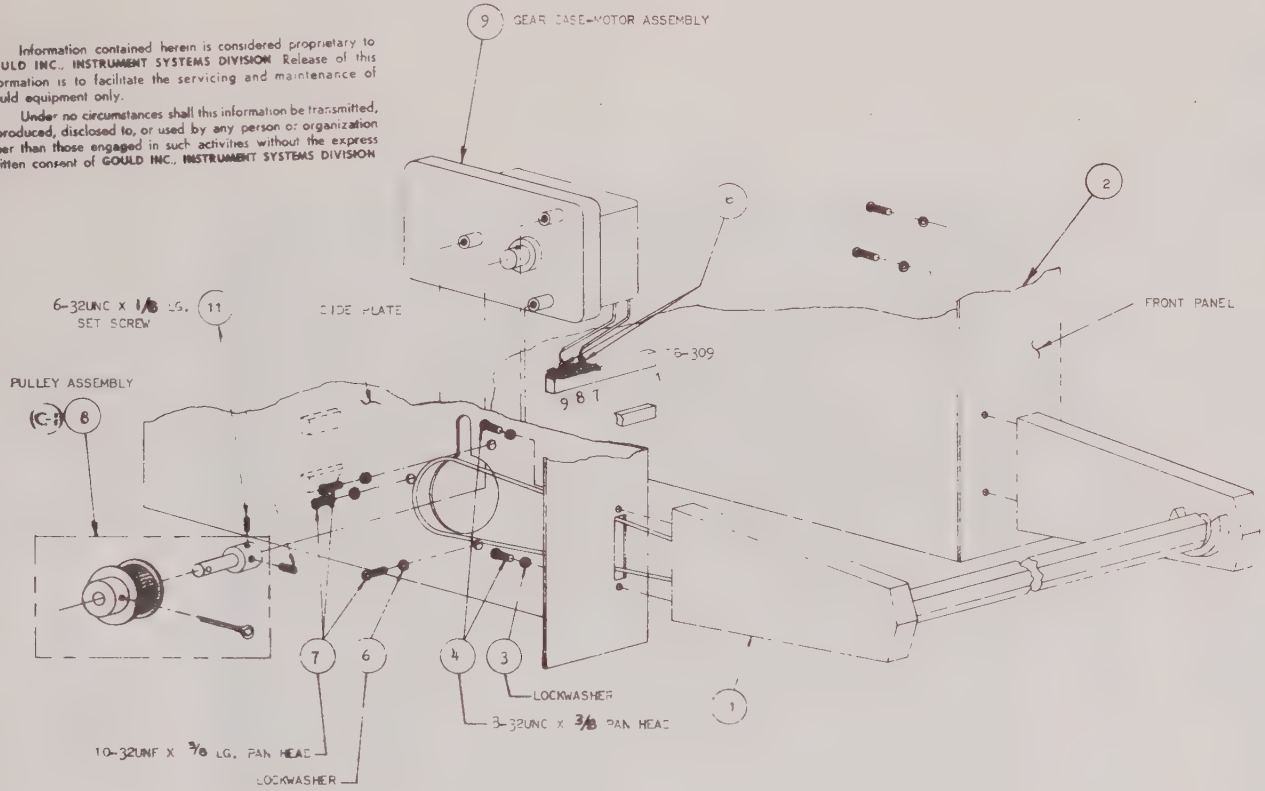

NOTES:
1. NUMBERS IN CIRCLES INDICATE ITEM NUMBERS.
2. ASSEMBLE ARMS OF 1 TO FRONT PANEL USING 3 & 4.
3. ASSEMBLE MOTOR USING 6 & 7.
4. ASSEMBLE 8 (PULLEY ASSEMBLY) TO MOTOR SHAFT USING 11.
5. CONNECT MOTOR LEADS TO TB-309, TERMINALS 7 & 9 (EITHER LEAD TO EITHER TERMINAL).

REVISIONS

SYM	DESCRIPTION	DATE
A-1	REMOVED ITEM 5	2/25/70
A-2	ADDED ITEM 16	
A-3	WAS 6;1-216741-430; LOCKWASHER, SPRING;3 PER DCN 12756 D.SALVATORE	
B-1	ITEM 7 WAS 31-119918-0208 DCN 12831 D.SALVATORE	5-16-70
C-1	REVISED PICTORALLY IT. 8 DCN 15423	D.M.L. 12-3-70

NO	PART NO	DESCRIPTION	QTY
30			
29			
28			
27			
26			
25			
24			
23			
22			
21			
20			
19			
18			
17			
16	265840-2	TERMINAL, LUG	2
15	669664	SHIP. LIST & INSTALL. INST.	1
14	422642	ENVELOPE, MANUAL	1
13	15-806687-00	MANUAL, OPERATING	-
12	222640	CARD, CONCEALED DAMAGE	1
11	31-119923-6208	SCREW, SET	2
10			
9	747033	GEAR CASE-MOTOR ASSY	1
8	680147	PULLEY ASSY	1
7	31-119918-0206	SCREW, PAN HEAD	2
6	10-120053-104	LOCKWASHER, EXT.T	3
5			
4	31-119918-6206	SCREW, PAN HEAD	4
3	1-216741-425	LOCKWASHER, SPRING	4
2	15-6687-00	RECORDER MK-480	-
1	11-6432-06	CHART TAKE-UP ASSY	1

669664

SHIPPING LIST

Gould Inc.
Instrument Systems Division
Cleveland, Ohio 44114 U.S.A.

BROD/ LEP

SHIPPING LIST & INSTALLATION INSTRUCTIONS

96795 C

669664

SECTION III

OPERATION

3.1 GENERAL

This section describes and illustrates the controls on the Gould 481 and also provides instructions for proper operation.

3.2 FRONT PANEL

NOTE: Item numbers listed below correspond to circled numbers in Figure 3-1.

1 SENSITIVITY . . . . . Provides 13 step attenuation of input signal from one millivolt per division to 10 volts per division, and off.

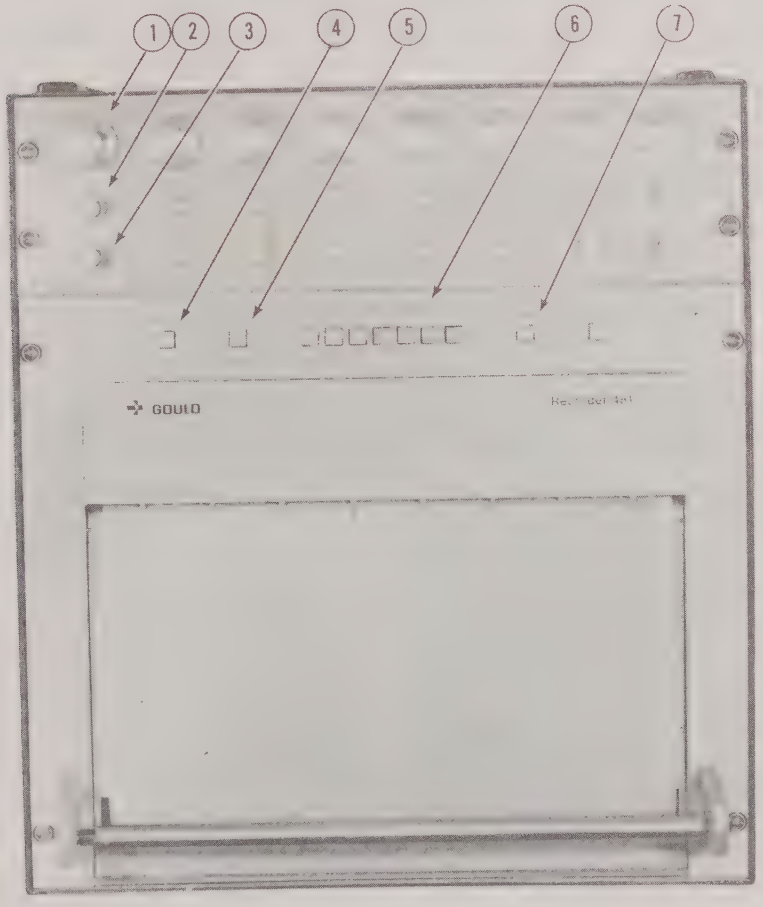

bi 1452

FIGURE 3-1 FRONT PANEL CONTROLS

2 SENSITIVITY X1 . . . . . Provides intermediate sensitivities between the fixed settings of the stepped SENSITIVITY control. When in the full clockwise (detent) position, the sensitivity is fixed as indicated on the stepped SENSITIVITY control.

When rotated counterclockwise, the sensitivity is less than indicated on stepped SENSITIVITY control to a maximum ratio of 2.5 to 1. This control is fitted with a locking nut to prevent inadvertent turning.

NOTE: This is a variable control, but not calibrated.

3 POSITION . . . . . Permits pen positioning anywhere within the channel and thus allows either edge of channel, or any point in between, to be used as zero signal position. This control is fitted with a locking nut to prevent inadvertent turning.

4 MARK EVENT switch . . . . . Two momentary switch permit manual marking of an event. When left MARK EVENT button is depressed the left event marker (event B located between analog channels 1 and 2) will deflect to right. When right MARK EVENT button is depressed the right event marker (event F located between analog channels 7 & 8) will deflect to right.

NOTE: The event marker pens will remain deflected until the MARK EVENT button is released.

5 POWER switch . . . . . Controls a-c power to recorder. Depress button to turn recorder on or off. An internal lamp illuminates the pushbutton when recorder is on.

6 CHART SPEED MM/SEC switch . . . . . Permits selection of twelve chart speeds and STOP. When in STOP position chart drive mechanism and ink supply is off, and pens will not respond to input signals. Depressing any chart speed button activates recorder at selected chart speed. Chart speeds may be changed at any time without impairing writing quality.

7 ÷ 100 . . . . . With button depressed, all chart speeds are divided by 100. Speeds are 0.05, 0.1, 0.25, 0.5, 1 and 2 mm/sec. Chart speeds, including ÷ 100 may be changed at any time without impairing writing quality.

3.3 REAR PANEL

NOTE: Item numbers listed below correspond to circled numbers in Figure 3-2.

8	Analog Input Receptacle	Provides signal inputs to each recording channel. (Silk-screened numbers correspond to channel numbers.) Refer to Para. 2.4a for connections.
9	Preamplifier Balance Control	Used during calibration of recorder (Refer to Section VI, Calibration).
10	TIMER	Activates optional internal one second timer accessory, Model RA 2101-10. Timer output may be jumpered to any standard or accessory event marker input terminal as shown in Figure 2-4.
11	Event Marker Input Jacks	Two jacks (one pair for each channel) which permit remote actuation of event marker. Placing a short between these two jacks will deflect the event marker. Pen will remain deflected until short is removed. **NOTE: When using internal timer with any event marker, be sure remote input jacks are disconnected.**
12	AUX	Convenience outlet, switch on with main POWER switch.
13	Fuses	For recorder and auxiliary outlet.

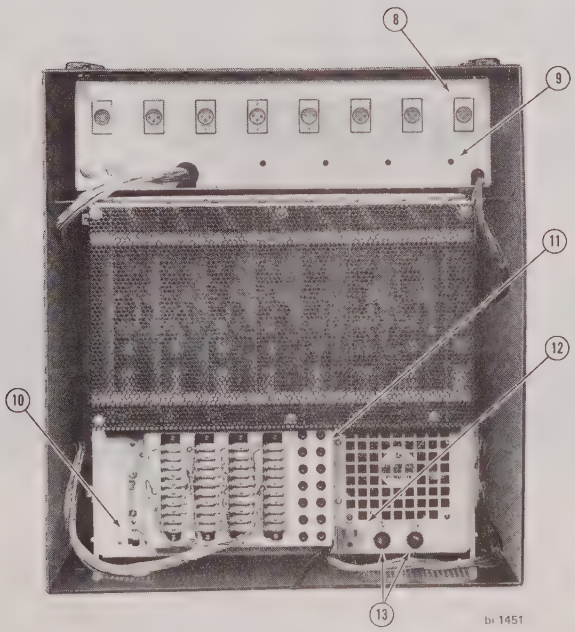

FIGURE 3-2 REAR PANEL

NOTE: Item numbers listed below correspond to circled numbers in Figure 3-3.

14 Schematic Number . . . . . This schematic number, with the revision letter indicated, must correspond with the number and revision letter of the schematic found in the rear of this manual.

15 Name Plate . . . . . Lists the complete Model number and serial number of the unit. Input voltage and frequency requirements, along with total unit power consumption are also listed.

NOTE: Always refer to unit Model number (i.e., 15-6687-01) when requesting information or service.

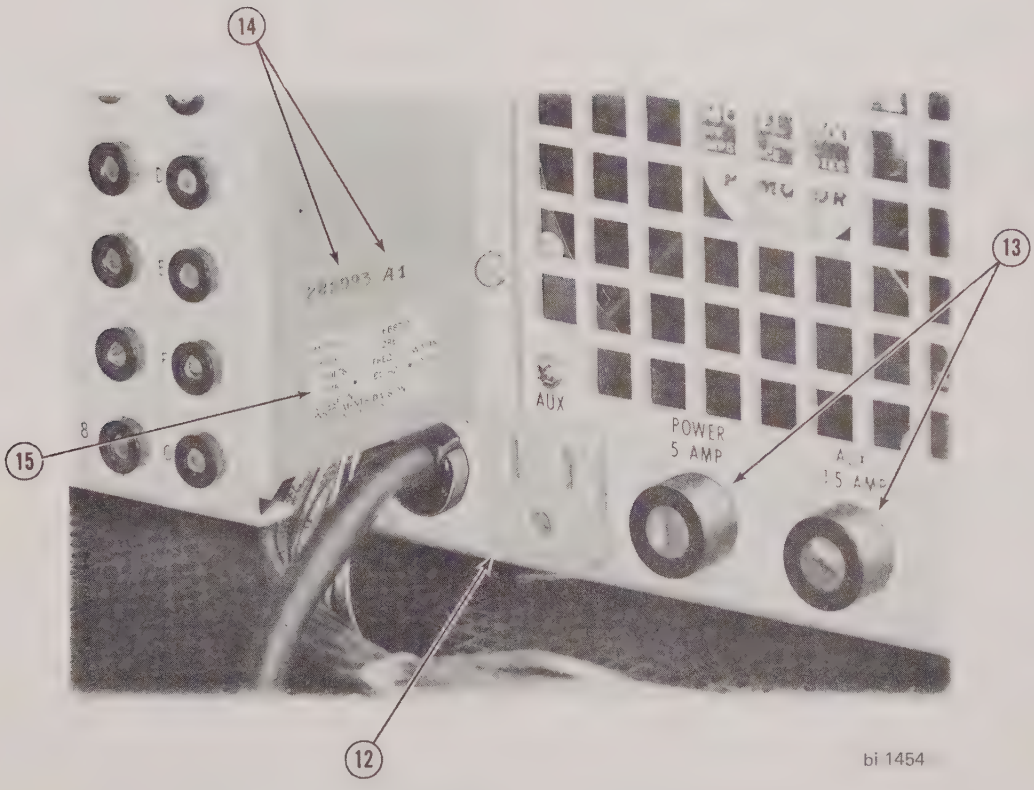

FIGURE 3-3 REAR PANEL

3.4 RECORDER SET-UP AND OPERATION

CAUTION: CHECK TO BE SURE ALL PROCEDURES IN SECTION II, INSTALLATION, HAVE BEEN PERFORMED.

When preparing the Gould 481 Recorder for operation, be sure to observe all of the following steps:

1. With unit disconnected and all signal inputs disconnected, open writing table by pulling up on pull bar (see Figure 3-1) and be sure adequate paper for operation is on supply roll, and that it is properly threaded. (See threading diagram on side of writing table). If paper supply is exhausted or improperly threaded, refer to Para. 4.2 for complete instructions on changing chart paper. Close writing table firmly.

2. Check to be sure ink valves for all pens are in full ON position.

3. Connect unit to proper voltage and frequency as indicated on unit nameplate.

4. Depress POWER switch and observe that the POWER switch button is illuminated.

5. Depress 5 MM/SEC chart speed button and operate recorder to insure good ink flow on all channels. If no writing is present after first one foot of paper, refer to Para. 4.8 and check ink cartridges for adequate ink.

6. Now connect desired analog and event signals as described in para. 2.2.

7. Set preamplifier SENSITIVITY control in OFF position.

8. Turn preamplifier SENSITIVITY X1 control to full clockwise position (detent) and secure with locking knob.

9. Position pen at exact chart center or any other desired signal-zero location with POSITION control. Lock in place.

10. Switch SENSITIVITY control to a range that will permit maximum deflection without going beyond chart edge.

11. Chart deflection will be proportional to the SENSITIVITY control setting for voltage being recorded.

12. Select a chart speed that will best display the signal with respect to recording frequency.

13. Unit is now ready for operation.

SECTION IV

MAINTENANCE

4.1 GENERAL

This section describes and illustrates removal, installation and adjustment procedures that can normally be preformed by the operator.

4.2 CHANGING CHART PAPER

This paragraph describes and illustrates the procedures for changing the chart paper.

a. Removal

1. Press chart speed STOP button.
2. Turn recorder OFF.
3. Grasp pull bar (Fig. 4-1) on bottom of writing table and pull out and up to place writing table in open position.

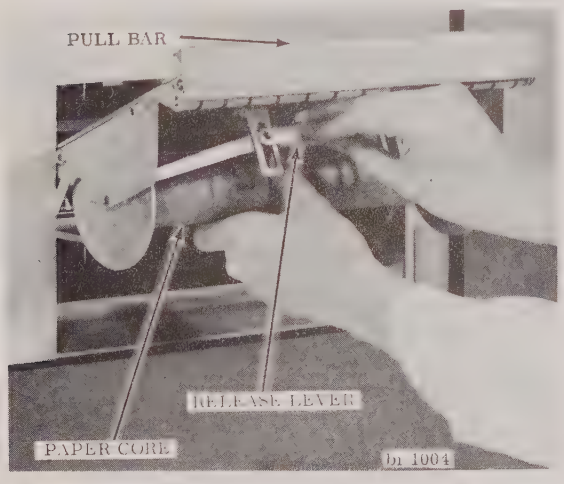

FIGURE 4-1 REMOVING PAPER SUPPLY ROLL

4. Hold paper supply roll and pull down on paper supply release lever (Fig. 4-1) and remove paper supply roll.
5. Unscrew left flange from paper supply shaft, remove and discard paper core. (Fig. 4-2)

b. Installation

1. Slide new paper roll onto paper supply shaft, making sure notches in paper core mate with guide pins in right flange. (Fig. 4-2)
2. Screw left flange onto paper supply shaft so flange is snug against paper edge.

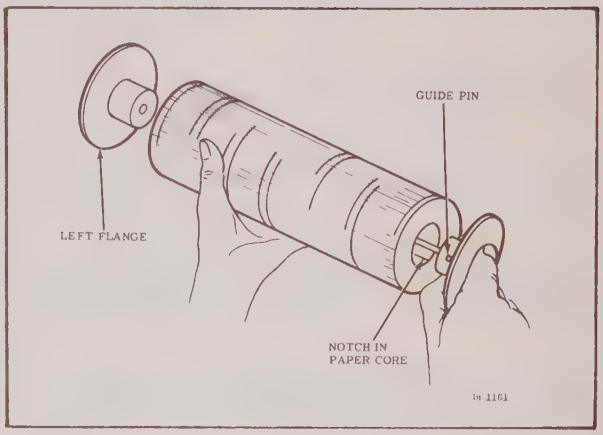

FIGURE 4-2 CHANGING CHART PAPER

3. Insert paper supply roll shaft with paper into writing table assembly (Fig. 4-3) and push up release lever to lock shaft into position.

CAUTION: CHECK TO BE SURE SHAFT IS SEATED IN WRITING TABLE ASSEMBLY AND SHAFT ROTATES FREELY.

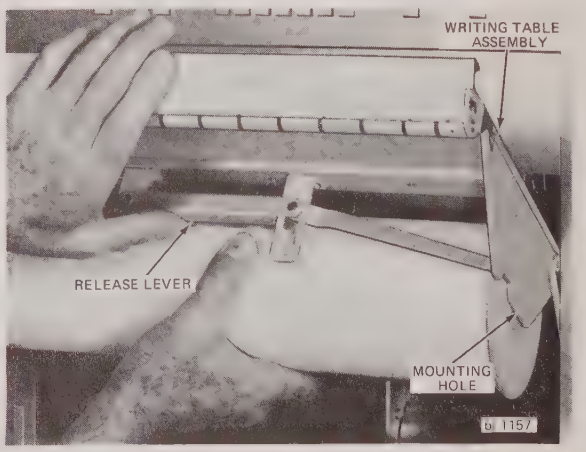

FIGURE 4-3 INSTALLING PAPER SUPPLY ROLL

4. Feed paper over writing bar, through slot in front of writing table, behind pressure roll and out front of writing table assembly (Fig. 4-4). Refer to paper threading diagram on side of writing table assembly.

CAUTION: USE CARE DURING PAPER THREADING NOT TO DAMAGE PENS.

5. Slowly close writing table assembly while gently pulling on paper. When friction resists

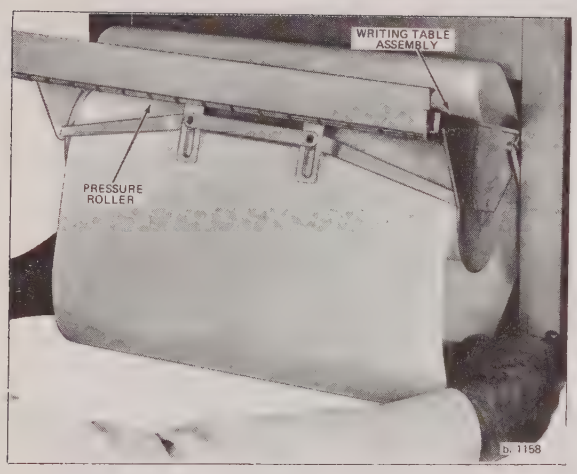

FIGURE 4-4 THREADING PAPER

rotation of paper roll, pull paper taut, center on writing table, and close writing table.

NOTE: Check to be sure writing table is properly engaged by pressing on both sides of writing table.

6. Turn recorder on and operate at 100 millimeters per second to run out about two feet of chart paper to align chart paper.

4.3 REPLACING ANALOG PEN

This paragraph describes and illustrates removal, installation and adjustment of analog pens.

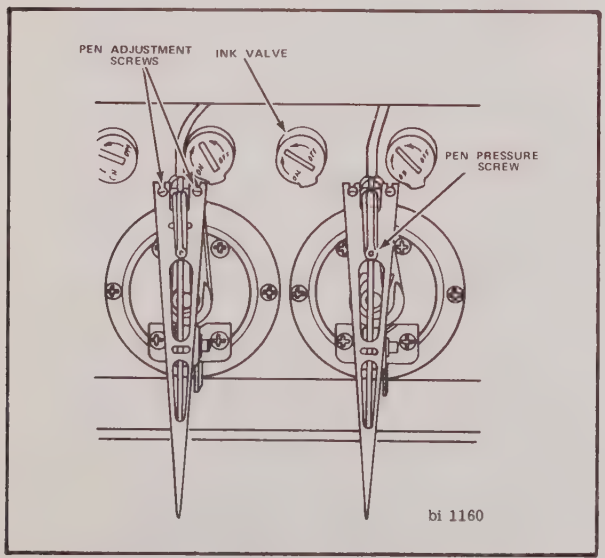

FIGURE 4-5 REPLACING PEN

NOTE: Replace and adjust only one pen at a time.

a. Removal

1. Press chart speed STOP button and turn recorder OFF.

2. Raise pen access cover by pulling out on bottom of access cover.

3. Use a flat-blade screwdriver and rotate individual ink valve button to OFF position (Fig. 4-5).

4. Use pen tube replacement tool (part number 267528) and gently remove pen ink tube from manifold nipple (Fig. 4-6).

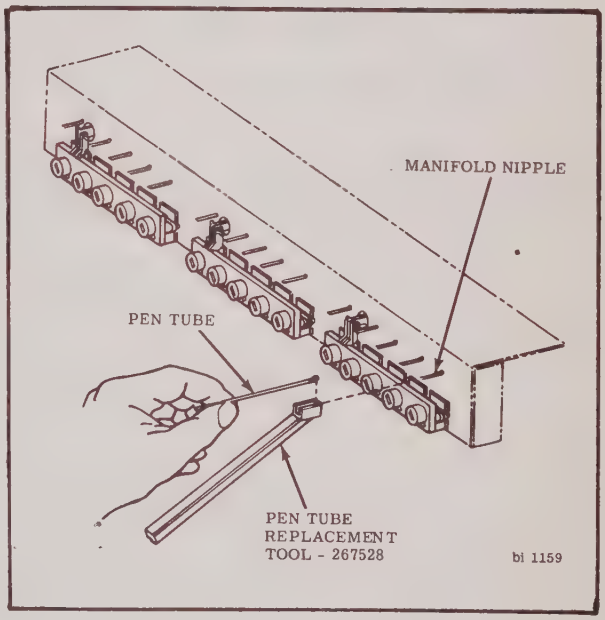

FIGURE 4-6 REPLACING PEN

5. Use pen replacement wrench (part number 1-120922-2) and loosen set screw one-half turn through access hole in side of penmotor drive-arm shaft (Fig. 4-7) and remove wrench.

NOTE: Do not loosen set screw more than one-half turn or pen cannot be removed from shaft.

6. Remove pen from penmotor drive arm shaft.

b. Installation

1. Carefully slide replacement pen onto penmotor drive arm shaft.

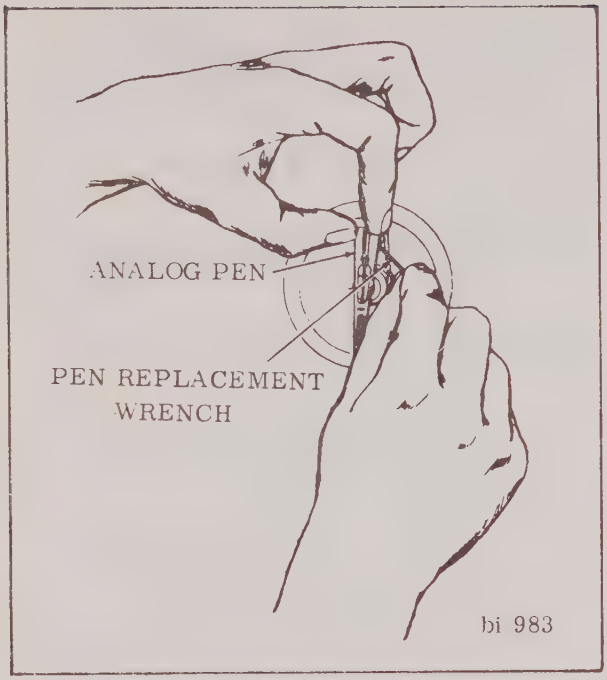

FIGURE 4-7 REPLACING ANALOG PEN

2. Align screw in pen hub with access hole in drive arm shaft and "snug up" set screw using pen replacement wrench, (part number 1-120922-2). Remove wrench.

NOTE: Set screw should be tightened to create friction, but loose enough to allow pen to be rotated in penmotor hub.

3. Install pen tube (3.3" long) between pen and manifold using pen tubing replacement tool (Fig. 4-6).

4. Use flat-blade screwdriver and turn individual ink valve to ON position.

5. Turn recorder ON, and operate recorder at 5 mm/sec.

6. Lift pen slightly to allow ink to bleed through pen tip.

7. Press recorder chart speed STOP button and turn recorder OFF.

8. Gently grasp pen near hub and move pen across entire chart width (40 mm).

9. If ink trace is not parallel to a horizontal time line, gently turn pen in penmotor drive arm until trace is parallel to time line.

10. Tighten set screw securing pen in penmotor drive arm shaft and remove wrench.

11. If pen tip is not on same time line as other analog pens, loosen two pan head adjustment screws (Fig. 4-5) and slide pen up or down until all pen tips are on the same time line, and tighten screws.

12. Check pen pressure and adjust if required. (see Para. 4.6)

NOTE: The following steps pertain to Pen, Model 11-2823-33 only. For instructions on Extended Life Pen, Model 11-2823-34, refer to Para. 4.10.

13. New pen must be lapped before proceeding. Carefully raise pen tip just enough to slide a small strip of emery paper (3M wet or dry **Tri-m-ite paper, Grit M600, Gould part number 669234) under pen tip.**

14. **Move pen back and forth five or six times.**

CAUTION: MAKE SURE THAT EMERY PAPER IS HELD FLAT AGAINST THE CHART PAPER TO INSURE PROPER LAPPING OF PEN.

15. Remove emery paper, operate recorder at 5 mm/sec and check pen for dryness.

16. If writing is not dry, proceed with normal pen lapping as described in Para. 4.8.

17. Lower pen access cover.

4.4 REPLACING EVENT PEN (MODEL 11-2873-20)

This paragraph describes and illustrates removal and installation of the event marker pen.

a. Removal

1. Press chart speed STOP button and turn recorder OFF.

2. Raise pen access cover by pulling out on bottom of access cover.

3. Use a flat-blade screwdriver and rotate individual ink valve button to OFF position.

4. Use pen tube replacement tool (part number 267528) and gently remove pen ink tube from manifold nipple (Fig. 4-6).

5. Loosen two adjustment screws attaching pen to event marker and remove pen from event marker.

b. Installation

1. Slide replacement pen onto event marker and align pen tip on vertical grid line and on same time line as analog pens.

2. Tighten two screws attaching pen to event marker.

3. Install pen tube (4.5" long) between pen and manifold using pen tubing replacement tool (Fig. 4-6).

4. Use flat-blade screwdriver and rotate event marker ink valve button to ON position (Fig. 4-5).

5. Turn recorder ON and operate recorder at 5 mm/sec.

6. Lift pen slightly to allow ink to feed through pen tip.

7. Check pen pressure and adjust if required (Para. 4.6).

8. New pen must be lapped before proceeding. Carefully raise pen tip just enough to slide a small strip of emery paper (3M wet or dry Tri-m-ite paper, Grit M-600, Gould part number 669234) under pen tip.

9. Move emery paper up and down five or six times, parallel to division lines.

CAUTION: MAKE SURE THAT EMERY PAPER IS HELD FLAT AGAINST THE CHART PAPER TO INSURE PROPER LAPPING OF PEN.

10. Remove emery paper, operate recorder at 5 mm/sec and check pen for dryness.

11. If writing is not dry, proceed with normal pen lapping as described in Para. 4.7.

12. Lower pen access cover.

4.5 REPLACING PENMOTOR BAND ASM

NOTE: Drive arm assembly is a non-replaceable part of the penmotor. If drive arm is broken or damaged in any way, entire penmotor must be replaced.

The penmotor band assembly (Gould part number 680294) should not be removed unless broken. Because the band tension is critical, a band replacement tool (part number 341409-915) must be used to replace band assembly.

NOTE: Penmotor need not be removed from recorder.

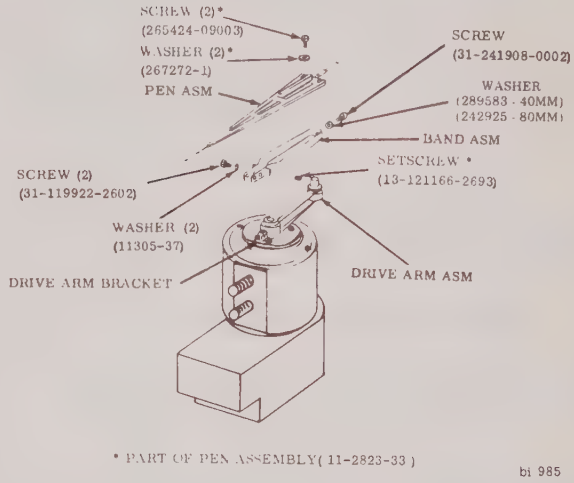

FIGURE 4-8 PENMOTOR BAND ASSEMBLY

a. Removal (Fig. 4-8)

1. Remove analog pen (Para. 4.3).

2. Remove socket-head screw and band clamping (curved) washer that secures band assembly to drive arm (use wrench 1-120922-3).

3. Remove two socket-head screws and lock washers securing band to drive arm bracket (use wrench 245218-5). Discard damaged band assembly.

CAUTION: TO PREVENT DAMAGE TO THE NEW BAND ASSEMBLY, CHECK TO BE SURE DRIVE ARM AND BRACKET ARE FREE OF NICKS, DIRT, INK BEFORE INSTALLING NEW BAND ASSEMBLY.

4. Position new band assembly around drive arm hub. Align mounting holes with tapped holes in drive arm bracket and install two screws and lock washers. Do not tighten screws.

NOTE: Check to be sure curved portion of washer is positioned to conform to the radius of the drive arm hub. Use care not to nick or scratch band assembly.

5. Carefully install band clamping washer and socket-head screw.

6. Inspect band for proper positioning around drive arm hub so that equal pressure is maintained on top and bottom of band assembly.

7. Install band tool on penmotor and thread knurled thumb screw into drive arm bracket. (See Figure 4-9)

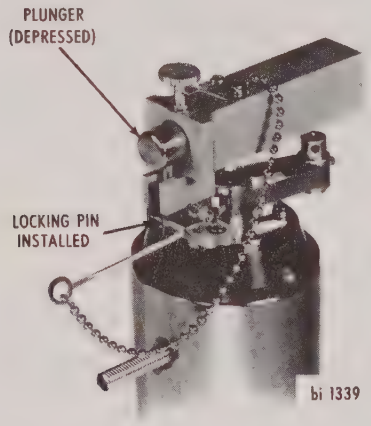

FIGURE 4-9 BAND TOOL MOUNTING

8. Depress plunger and insert locking pin into two small holes of band assembly, making certain plunger is behind locking pin.

9. Tighten two screws in drive arm bracket, loosen one quarter-turn, move drive arm back and forth several times to center band assembly and tighten screws.

10. Move drive arm back and forth several times to center band assembly on drive arm and tighten socket-head screw securing band assembly to drive arm.

NOTE: Do not tighten more than 16 inch-ounces.

11. Depress plunger and remove locking pin.

12. Loosen knurled screw securing band tool to drive arm bracket and remove tool.

13. Apply glyptal cement (or equivalent) to heads of the three screws to prevent working out.

14. Install analog pen (Para. 4.3).

4.6 PEN PRESSURE MEASUREMENT AND ADJUSTMENT

Analog or event marker pen pressure should be checked if the ink trace is excessively wide (bleeding), indicating low pen pressure or if pen gouges the chart paper, indicating excessive pen pressure.

NOTE: Wide trace may also indicate an improperly lapped pen. Refer to Paragraph 4.7 for pen lapping procedures.

The gram gage (part number 240601-910) is used to measure the pressure of the analog and event marker pen as follows:

1. Depress power on button to turn on recorder.

2. Raise pen access cover (located above writing table) by pulling out the bottom of access cover.

3. Press the 5 MM/SEC chart speed button.

4. Place gram gage hook under pen shaft as close as possible to tip and form a right angle to pen shaft with gage hook (Fig. 4-10).

5. Pull pen from chart and take reading on gage the moment excessive ink starts to flow from pen.

6. Proper writing pressure for analog pens is 28 to 32 grams. Event marker pen pressure is 20 to 25 grams.

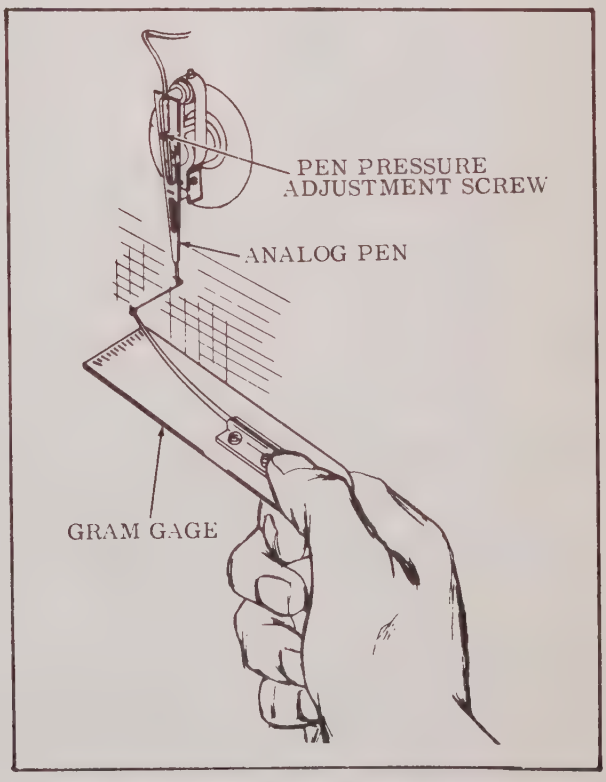

FIGURE 4-10 PEN PRESSURE MEASUREMENT

7. Use pen pressure adjustment wrench (part number 1-120922-18) and turn adjusting screw (Figs. 4-5 and 4-11) clockwise to increase pressure or counterclockwise to decrease pressure.

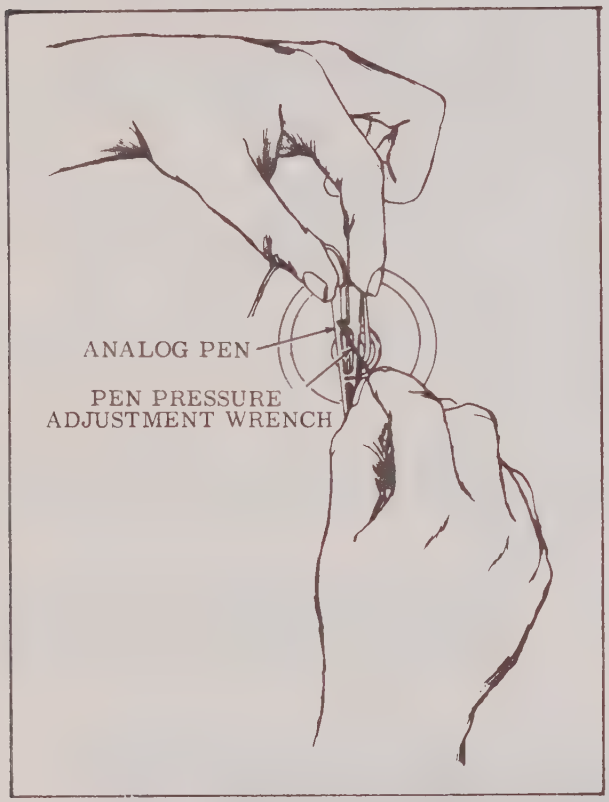

FIGURE 4-11 PEN PRESSURE ADJUSTMENT

8. Check pen pressure with gram gage and continue adjustment until proper reading is obtained.

9. If pen pressure is correct for analog and event pens, lower access cover. Recorder is ready for operation.

4.7 PEN LAPPING

NOTE: The Extended Life Analog Pen, Model 11-2823-34, must be lapped as described in Para. 4.10.

a. General

This paragraph describes and illustrates the proper procedures for lapping the analog and event pens. Intermittent or "wet" ink trace are indications that pen pressure is incorrect or that pen requires lapping. Check for "wet" writing by operating the recorder at five mm/sec chart speed, (no signal applied). Check pen trace by wiping index finger, with moderate pressure, across trace approximately one inch below pen tip. If ink does not smear, pen is properly lapped. If trace smears, check and adjust pen pressure (Para. 4.6.). Repeat test, and if trace continues to smear, lapping is required.

b. Lapping Procedure

NOTE: Lapping of pens should only be done when required.

1. Turn recorder off.

2. Raise pen access cover by pulling on bottom of access cover.

3. Carefully raise pen tip just enough to slide a small strip of emery paper (4/0) under pen tip. (Brush part number 141119) (see Fig. 4-12).

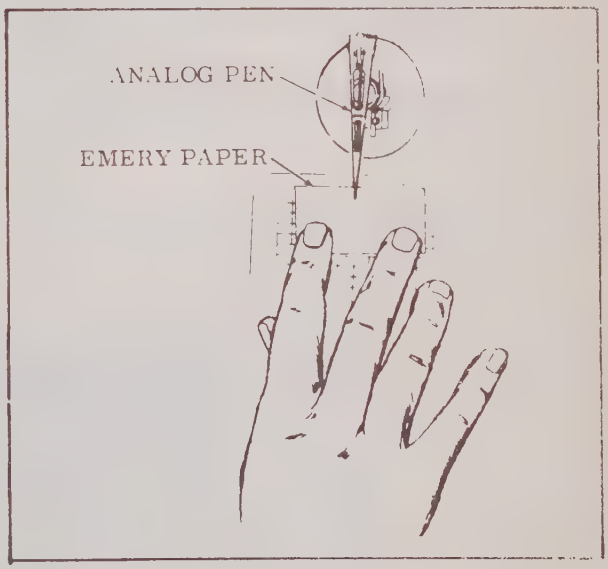

FIGURE 4-12 PEN LAPPING

CAUTION: DO NOT USE A COARSE OR VERY ABRASIVE TYPE OF EMERY PAPER. USE ONLY THE GRADE SPECIFIED.

4. Move pen back and forth for a total distance of approximately two inches.

CAUTION: MAKE SURE THAT EMERY PAPER IS HELD FLAT AGAINST THE CHART PAPER TO INSURE PROPER LAPPING OF PEN.

5. Remove emery paper, operate recorder at 5 mm/sec and check pen trace for dryness.

6. Repeat steps 3 thru 5 as required to obtain dry trace.

7. If pen tip should become blocked during lapping operation, touch pen at top of pen (above tip) with a hot soldering iron for a few seconds with the pen tip raised slightly off the paper. This will usually start ink flowing and flush out abrasive.

NOTE: If procedure is repeated more than three times, recheck pen pressure and repeat lapping. Strict adherence to above lapping procedures is imperative.

8. When dry trace is achieved, lower access cover.

4.8 INK CARTRIDGE REPLACEMENT

This paragraph describes and illustrates the procedures for replacing ink cartridges, Model 11-2730-01.

a. Removal

WARNING: CHECK TO BE SURE RECORDER IS TURNED OFF AND DISCONNECTED FROM POWER SOURCE.

1. Recorder must be removed from case, Model No. 11-1115-30 or slid out of rack when using Kit, Model No. 11-1202-20. To remove unit from case, rest recorder on either side, and remove four rubber feet, two at front edge and two at center of case. Now remove four front panel screws and slide recorder forward out of the case. To slide recorder from a rack, remove four front panel screws and slide recorder forward.

2. Remove top cover by removing four pan-head screws. (Fig. 4-13).

3. Turn activating screw clockwise until compression spring in ink plunger has been drawn up tight into ink plunger assembly and ink flow stopped.

4. Remove two screws (see Fig. 4-14) securing mounting bracket to support bar.

5. Raise ink plunger assembly free of unit.

6. Carefully remove ink tube from ink cartridge being careful not to drop ink tube back inside recorder.

7. Unscrew ink cartridge from plunger assembly and discard cartridge

b. Installation

1. Remove and discard piston retainer from replacement cartridge (see Fig. 4-15).

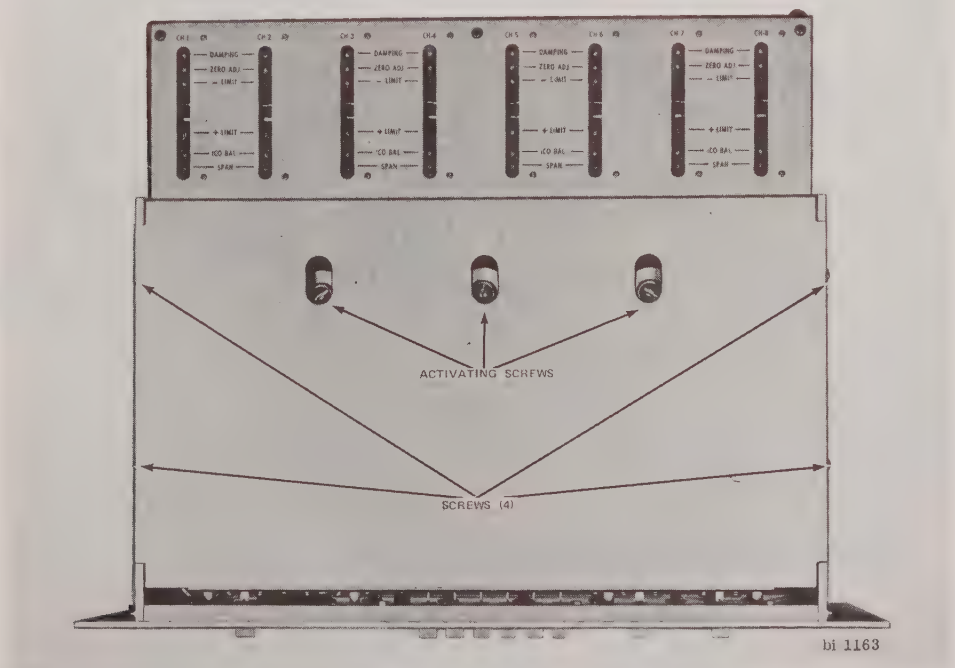

FIGURE 4-13 REPLACING INK CARTRIDGE

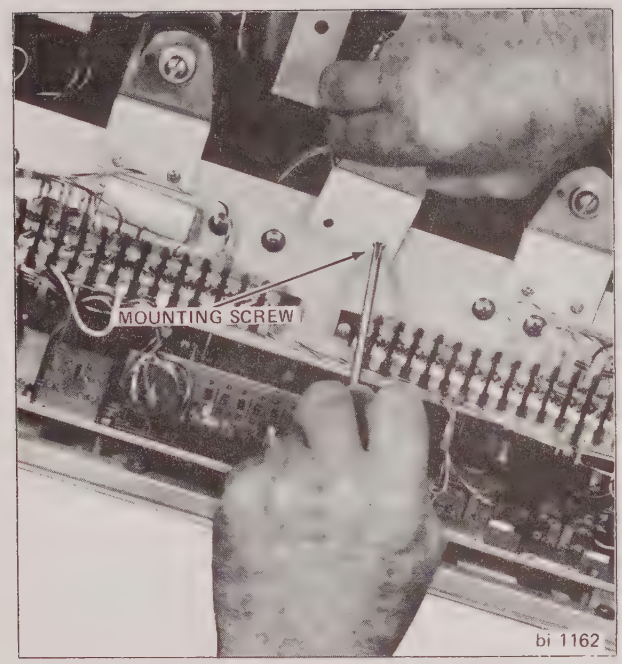

FIGURE 4-14 REPLACING INK CARTRIDGE

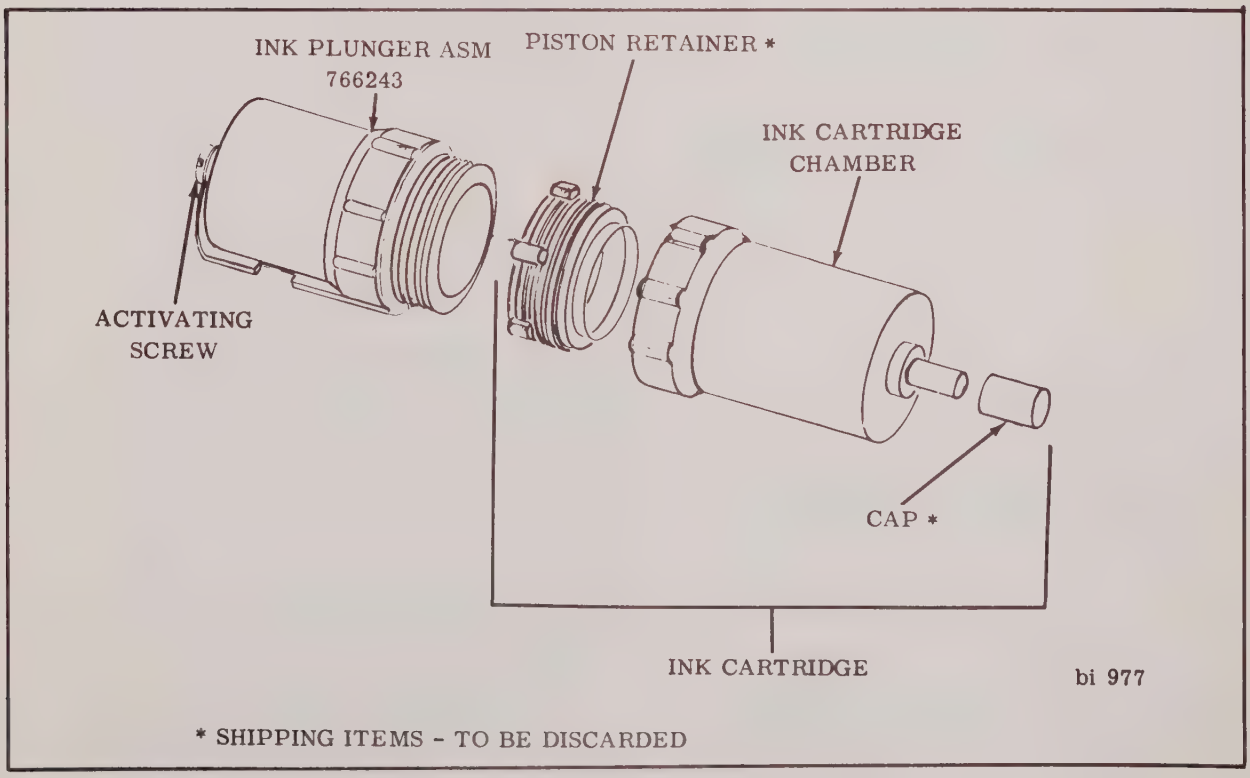

FIGURE 4-15 REPLACING INK CARTRIDGE

2. Install ink cartridge on plunger assembly and tighten securely.

3. Remove and discard shipping cap from ink cartridge.

4. Install ink tube on cartridge.

NOTE: Do not use tweezers or other sharp instruments to install tubing.

5. Carefully lower ink plunger assembly into unit and secure using two screws removed in step a.3 above.

6. Turn activating screw counterclockwise until snug to pressurize ink system.

7. This completes the ink cartridge replacement procedure.

8. Install top cover by installing four pan-head screws.

9. Recorder should now be installed in portable case or in rack using hardware removed in step a.1 above.

4.9 PEN CLEANING

In the event that a pen should fail to write or displays intermitten writing, it may be caused by a clogged pen. The procedure outlined below is intended as a guide to flush pens, but may not always prove effective.

1. Turn recorder off.

2. Close ink valve on affected channel.

3. Remove ink tubing from manifold (Fig. 4-6).

4. Remove pen (Para. 4.3a or 4.4a).

NOTE: Do not remove tubing from pen unless tubing is kinked or suspected of being defective.

5. Modify No. 18 hypodermic needle per Figure 4-16.

6. Attach modified needle onto 2cc hypodermic syringe.

7. With syringe plunger depressed, insert needle in pen tubing.

8. Immerse pen tip in cleaning agent (Isopropyl Alchohol, Cell-O-Solve or equivalent).

9. Back-flush by slowly withdrawing syringe plunger.

NOTE: It may be necessary to allow the pen to remain for a brief period in the cleaning agent to dissolve dried ink at pen tip.

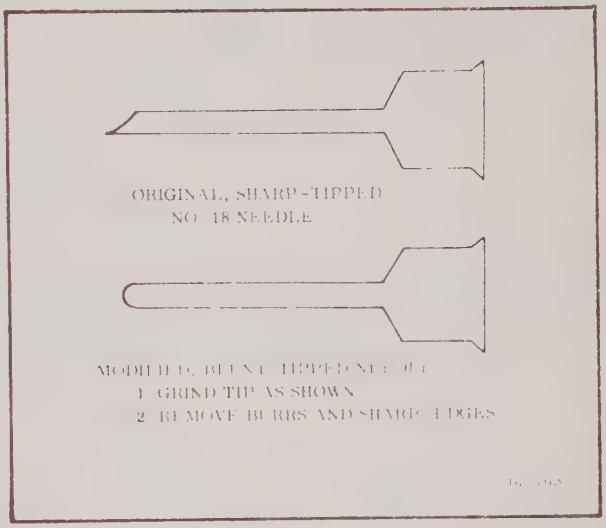

FIGURE 4-16 HYPODERMIC NEEDLE MODIFICATION

10. Install pen (Para. 4.3b or 4.4b).

NOTE: Clogging of pens occurs only when proper adjustment, operation and/or handling as per Brush Operating Manual has not been adhered to.

4.10 LAPPING PROCEDURES FOR EXTENDED LIFE PEN, MODEL 11-2823-34

The Gould Model 11-2823-34 Extended Life Pen requires a different lapping procedure from that described in Para. 4.7. Install pen as described in Para. 4.3, but disregard lapping instructions referred to.

Lap Extended Life Pen as follows:

1. Raise pen access cover.

2. Shut off ink manifold knobs of all channels by rotating all knobs counterclockwise.

3. Raise writing table and rewind chart paper so that no paper is left under pen tips. Be sure sufficient paper is on roll to energize interlock switch to permit recorder operation.

4. Now set pen pressure to 30 grams against writing bar.

5. Place coarser of two lapping papers supplied (Gould part number 668965) under pen tip and drive pen at 60 Hz, 1/2 of full scale.

6. Simultaneously move lapping paper back and forth under pen. Lap in this manner for 90 seconds.

7. Now repeat procedure using finer lapping paper (Brush part number 668963) for 90 seconds.

8. Return recorder to normal operating condition (thread chart paper over writing bar and turn ink control knobs on).

NOTE: In most cases, one lapping will suffice, but occasionally two or three will be required to effect a proper seal.

9. If pen tip should become blocked during lapping operation, touch pen at top of bend (above tip) with a hot soldering iron for a few seconds with pen tip slightly raised off paper. This will usually start ink flowing and flush out abrasive.

10. Lower pen access cover.

4.11 SCHEMATICS

Before attempting electrical troubleshooting of the Gould 481, check to be sure the schematic number and revision letter stamped on rear of unit corresponds with schematic and revision letter found at the rear of this manual.

Model No	Schematic
15-6687-01	282993
15-6687-06	283224

SECTION V

THEORY OF OPERATION

5.1 GENERAL

The Gould 481 Recorder consists of eight analog channels, associated penmotor drive amplifiers and power supplies (Fig. 5-1). The input signal to each channel is balanced–to–guard.

Penmotor drive amplifier is a complete servo-type system utilizing a Metrisite Transducer in the penmotor to develop position and a Tachometer Generator to derive velocity.

5.2 DRIVE AMPLIFIER NETWORK ASM 869223

a. Regulated D.C. Power Supply Circuit (Fig. 5-2)

Primary power to each channel is applied to transformers T-301 thru T-308 and rectified by full wave rectifier bridge, CR-215. The common output point of transformers, T-301 thru T-308, is tied to ground. The output voltages, plus and minus 32 volts D.C. are applied to the output stages of the drive amplifier. Regulated plus and minus 18 volts D.C. to preamplifier and to amplification stages of drive amplifier are derived from resistors R-230 and R-231, and zener diodes CR-209 and CR-210. Regulated minus 5.6 volts, derived from resistor, R-245, and zener diode, CR-208, and regulated plus 5.6 volts, an output of oscillator A-201, are applied to pen POSITION control, R-302.

b. Drive Amplifier and A.C. Feedback Circuit (Fig. 5-2)

The drive amplifier acts as an error amplifier in that the input signal is constantly compared with pen position and assures that pen position on the chart accurately displays the input signal.

The summing of the amplifier is at the input of amplifier IC-201. The input signal is summed thru resistor, R-218. The demodulated signal from the position sensing transducer (Metrisite) is summed thru resistor R-226. Resistor, R-225, serves as a summing resistor for the zero adjustment current thru ZERO control, R-223. Resistor, R-228, serves as the open-loop feedback path for the amplifier. Resistor, R-227, sums the velocity feedback signal

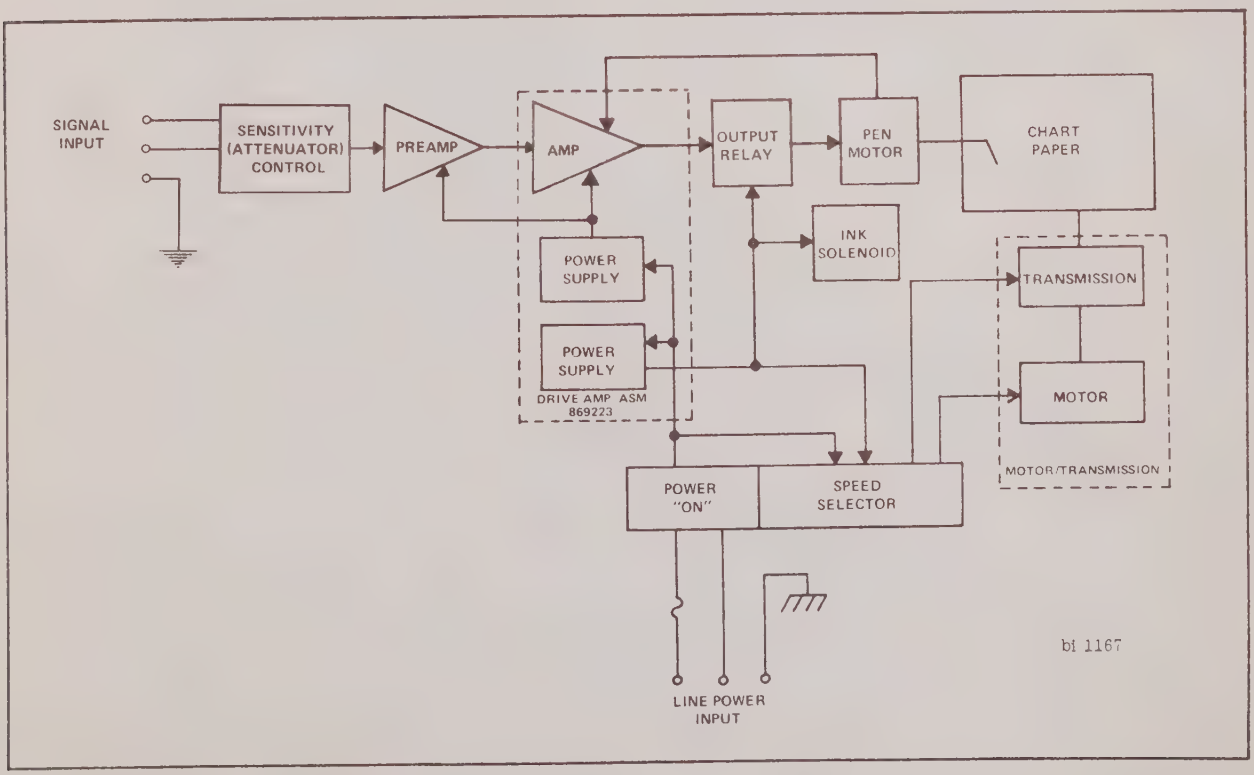

FIGURE 5-1 FUNCTIONAL BLOCK DIAGRAM

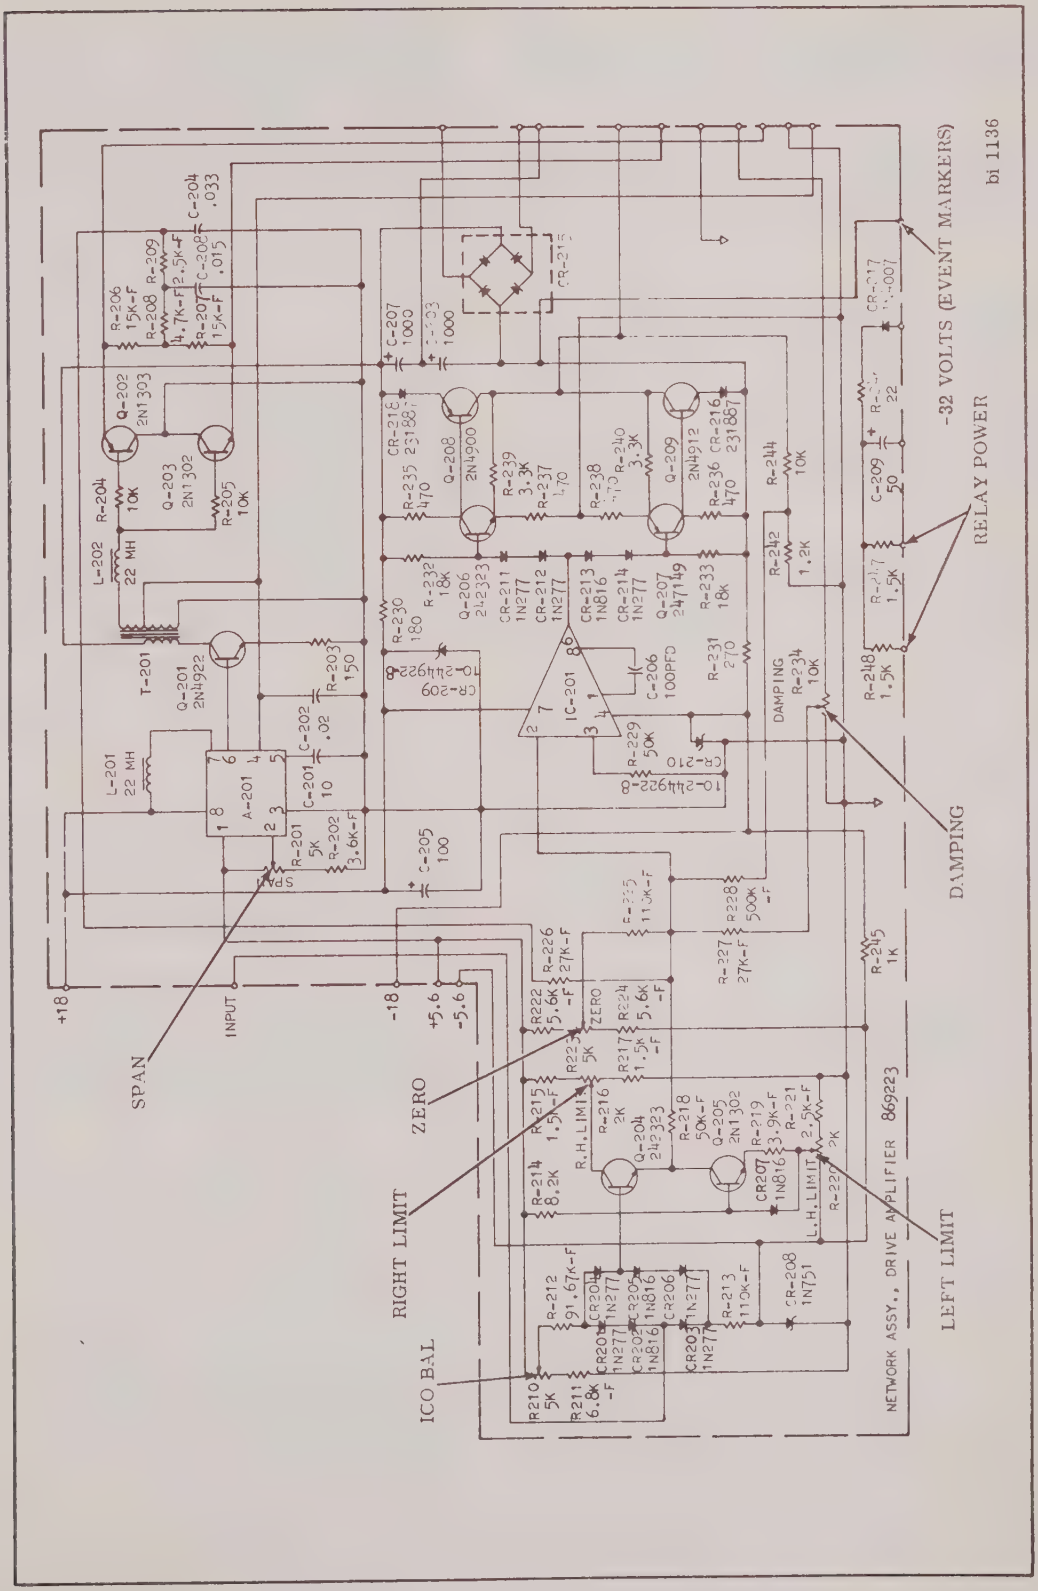

FIGURE 5-2 AMPLIFIER AND POWER SUPPLIES NETWORK ASSEMBLY 869223

which is derived from a tachometer generator within the penmotor. DAMPING control, R-234, permits adjustment for optimum frequency response and waveform reproduction. Any error voltage is amplified by amplifier, IC-201, transistors, Q-206 and Q-207, which form a phase-splitting driver stage for the output transistors, Q-208 and Q-209.

c. Left and Right Limiter Circuit (Fig. 5-2)

The output of the preamplifier is applied to the base of an emitter-follower transistor, Q-204, through diode network CR-201, CR-202, CR-203, CR-204, CR-205 and CR-206. The diode network provides the necessary bias and temperature compensation to assure a stable output from the limiters. Transistor Q-205 functions as a current source and emitter load for transistor Q-204. RIGHT LIMIT adjust, R-216, and LEFT LIMIT adjust, R-220, limit the voltage swing of transistor Q-204 which instantaneously clips any excess voltage applied to the limiters.

d. 20 KHz Oscillator and Demodulator Circuits (Fig. 5-2)

Oscillator, A-201, contains the 20 KHz circuit. Amplitude adjustment is provided by applying a variable D.C. voltage from variable resistor, R-201, to terminal 2 of the module. An additional terminal (pin 4) is provided to allow additional components to be added to oscillator control loop.

The oscillator output voltage is amplified by transistor, Q-201 and further stepped up by transformer, T-201, which has a tapped secondary winding providing two outputs. One output (tap) is applied to primary of position-sensing transducer (Metrisite). This same output is applied to Oscillator, Q-201, to correct for any change in output amplitude from transformer, T-201.

The second output voltage of transformer, T-201 is applied thru reactor, L-202, (phase-shifting coil) to the phase-sensitive demodulator consisting of transistors, Q-202 and Q-203, and resistors R-204 and R-205.

The varing output voltage from the Metrisite is then applied to the demodulator circuit across resistors, R-202 and 207. The demodulated and filtered output of the Metrisite circuit is then applied to the error amplifier thru resistor, R-226.

5.3 SENSITIVITY (ATTENUATOR) CONTROL & PREAMPLIFIER CIRCUITS (Fig. 5-3)

Input signals are applied to the balanced attenuator network consisting of resistors R-101 thru R-126. The differential input signal from the attenuator network is applied to the input of the preamplifier module, AR-401, thru protective resistors, R-401 and R-402.

With the variable SENSITIVITY control (R-410/S-410) in the detent (X1) position, the preamplifier assembly operates at a gain of 100 which is set by resistor, R-403. The variable SENSITIVITY control places a portion of resistor, R-403, and varies the gain down to 40. The single-ended output of the preamplifier assembly is applied to the drive amplifier thru the limiter circuit.

Pen position voltage, from the wiper arm of POSITION control, R-419 is applied to a reference terminal of preamplifier module, AR-401.

SECTION VI

CALIBRATION

6.1 GENERAL

The Gould 481 Recorder has been factory calibrated, and under normal conditions will not require calibration. However, because of parts replacement or repair, calibration may be necessary. This section describes and illustrates the correct calibration procedures. It should be pointed out that calibration should only be performed by qualified personnel familiar with procedures and standards.

6.2 TEST EQUIPMENT REQUIRED

The following is a list of recommended test equipment necessary for calibration.

NOTE: Specific manufacturer need not be adhered to, but comparable equipment is mandatory, since accuracy stated is imperative.

a. Function Generator (Hewlett-Packard, Model 202A, or equivalent).

b. D.C. Power Supply, 0 to 5 volts ±0.1% (floating).

NOTE: A precision voltmeter (Fluke 883A or equivalent) may be used to monitor D.C. Power Supply to insure accuracy if precision D.C. Power Supply is not available.

6.3 CALIBRATION PROCEDURE

NOTE: Procedure outlined is typical of all channels.

1. Remove unit from case (Para. 4.3) or slide unit forward out of rack to expose calibration controls (Fig. 6-1).

2. Connect unit to proper power source as indicated on unit nameplate.

3. Depress POWER ON on pushbutton and allow a fifteen minute warm-up-time.

4. Set pen to exact chart center with pen POSITION control.

5. Remove the four (4) screws and lockwashers which secure the Event Marker Input Panel to the chassis (Refer to Fig. 3-2).

6. Depress the 5MM/SEC chart speed button. Disconnect preamplifier signal output by carefully removing the coaxial lead (both conductor and shield) from the two (2) spade lugs corresponding to channel to be calibrated.

7. Connect one end of test clip lead to HI lug of terminal strip.

8. Alternately open and short HI and LO lugs together.

9. Adjust ICO BAL (Balance) control for minimum pen movement when opening and shorting terminals.

10. Clip HI and LO lugs together.

11. Center pen by adjusting ZERO control located on amplifier board.

12. Remove test clip lead and reconnect coaxial cable.

13. Turn SENSITIVITY control to OFF position.

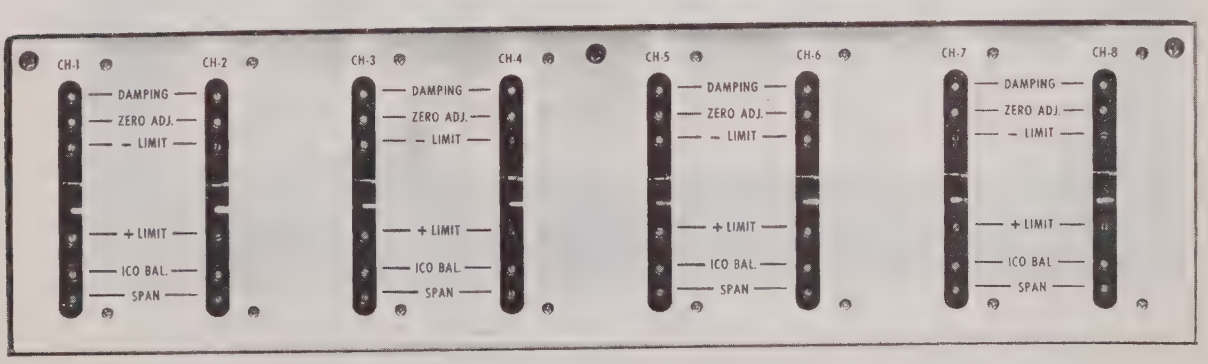

FIGURE 6-1 CALIBRATION CONTROLS

14. Continue to operate recorder at chart speed of five millimeters per second.

15. Verify that pen is at exact chart center; if not, use pen POSITION control and set pen at exact chart center.

16. Rotate variable SENSITIVITY X1 control throughout its entire range several times and check for any pen deflection.

17. If no pen deflection is observed, preamplifier is properly balanced.

18. If observed pen deflection is greater than 1/4 division, adjust preamplifier BALANCE control for no pen deflection while rotating SENSITIVITY X1 control throughout its entire range.

NOTE: Refer to Figure 6-2. Balance controls for channels 1 through 8 are accessible through holes in rear panel.

19. Set SENSITIVITY control to 100 mv/div position.

20. Apply ±2.5 V d-c ±0.1% to input terminals. Adjust SPAN control for exactly ±25 divisions of pen deflection. (Fig. 6-1)

NOTE: If input signal will be primarily square wave, perform steps in 6.4. If input singal will be primarily sine wave, perform steps in 6.5 (page 6.3).

6.4 SQUARE WAVE FREQUENCY RESPONSE

21. Apply a 1 Hz squarewave of 25 divisions peak-to-peak amplitude. Adjust DAMPING control for best wave-from reproduction.

22. Check frequency response by applying a 10 Hz square wave 10 divisions peak-to-peak. Increase frequency to 100 Hz; amplitude response must remain flat (± 1 division). Increase frequency to 125 Hz; amplitude should be 7 divisions. Adjust DAMPING control if necessary.

23. Apply a 4 Hz square wave, 50 divisions peak-to-peak. Increase frequency to 40 Hz. Amplitude should remain flat at 50 divisions, ± 1 division.

24. Apply positive 3 volts d-c to input and adjust LEFT LIMIT control to bring pen 1-½ to 2 divisions beyond chart edge.

25. Apply negative 3 volts d-c to input and adjust RIGHT LIMIT control to bring pen 1-½ to 2 divisions beyond chart edge.

This completes unit calibration. Depress chart STOP button and disconnect all test equipment. Replace unit in case (Para. 4.3) or slide unit into rack. Unit is ready for operation.

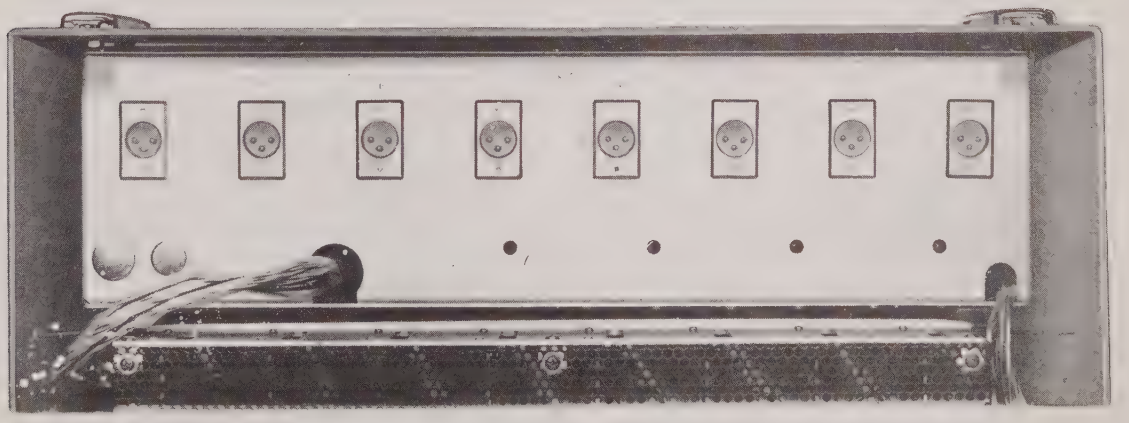

bi 1453

FIGURE 6-2 PREAMPLIFIER BALANCE CONTROLS

6.5 SINE WAVE FREQUENCY RESPONSE

21. Apply a 1 Hz sine wave of 25 divisions peak-to-peak amplitude. Adjust DAMPING control for best wave-form reproduction.

22. Check frequency response by applying a 10 Hz sine wave 10 divisions peak-to-peak. Increase frequency to 100 Hz; amplitude response must remain flat (± 1 division). Increase frequency to 125 Hz; amplitude should be 7 divisions. Adjust DAMPING control if necessary.

23. Apply a 4 Hz sine wave, 50 divisions peak-to-peak. Increase frequency to 40 Hz. Amplitude should remain flat at 50 divisions, ± 1 division.

24. Apply positive 3 volts d-c to input and adjust LEFT LIMIT control to bring pen 1-½ to 2 divisions beyond chart edge.

25. Apply negative 3 volts d-c to input and adjust RIGHT LIMIT control to bring pen 1-½ to 2 divisions beyond chart edge.

SECTION VII

PARTS IDENTIFICATION

7.1 GENERAL

This recorder has been accurately calibrated and adjusted before shipment from the factory and should give long, trouble-free service. For servicing beyond the scope of the instructions contained in this manual or the technical equipment available, contact your nearest Gould Service Engineer listed on the warranty card shipped with the recorder.

The following parts lists and schematic diagrams are designed to assist in servicing and repairing the recorder.

NOTE: Check to be sure the schematic number and revision letter stamped on the rear of the recorder agree with the number and revision letter on the schematic contained in this section.

To assure prompt and satisfactory delivery of replacement parts, include the following with the purchase order:

1. Name, model number, and serial number of the instrument.

   For example: Gould 481 Recorder, Model 15-6687-01, Serial Number

2. Description of the part as listed in the manual

3. Gould part number

NOTE: Do not use the SYMBOL NUMBER from the parts list for identifying desired parts on the order.

GOULD 481 RECORDER
EXPLODED VIEW PARTS LIST FIGURE 7-1

ITEM NO.	PART NUMBER	DESCRIPTION
1	883148	Preamplifier Assem. * (Figure 7-12)
2	11-1115-31	Case Assem.
3	243485	Handle
4	245244-02	Nut - Floating
5	264080	Bumper
6	1-216741-420	Lockwasher
7	31-119918-6210	Screw, Pan Head
8	15-6687-00	Recorder Assem. (Figure 7-2)
9	128967-1	Washer
10	126138-9	Washer
11	31-120650-10	Washer
12	31-121534-0216	Oval Head
13		Chassis Assy*(Figure 7-13)

*Completed assemblies not available. See detail figures for individual pieces.

bi 1471

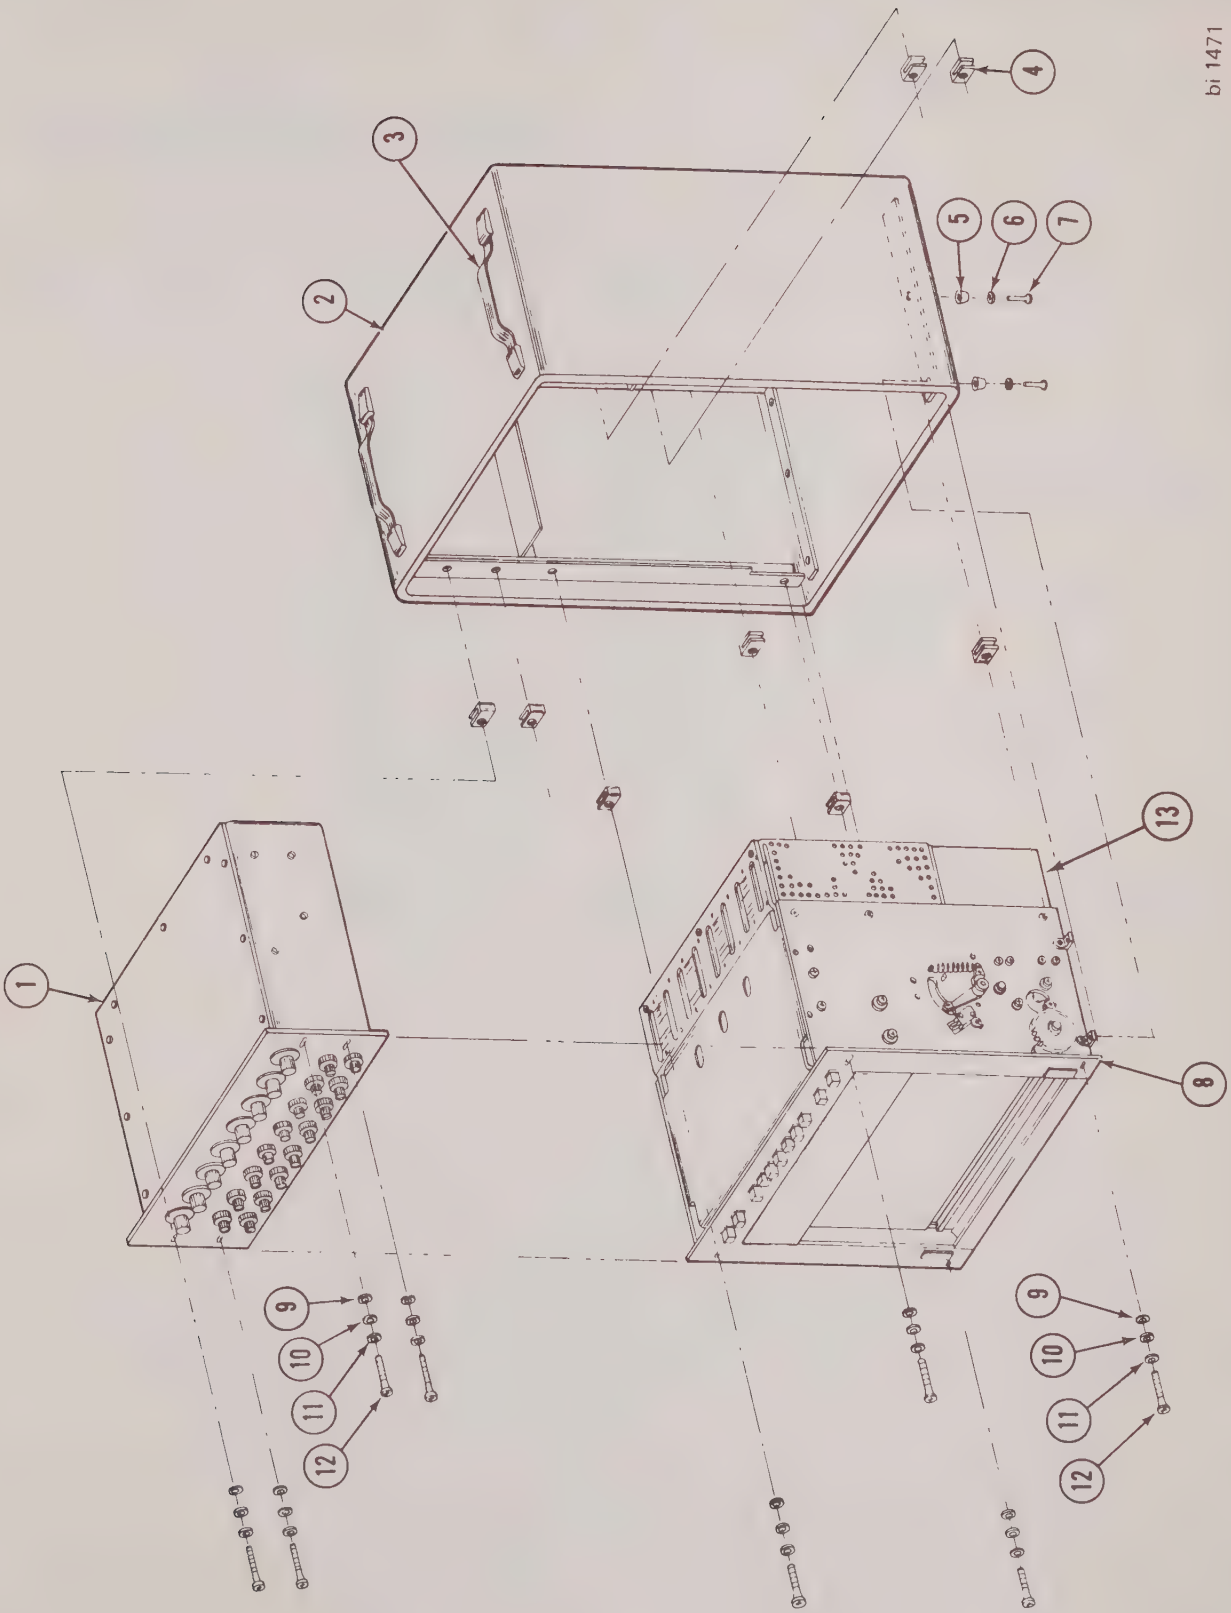

GOULD 481 RECORDER
EXPLODED VIEW PARTS LIST - FIGURE 7-2

ITEM NO	PART NUMBER	DESCRIPTION
1	869736	Cover, Top
2	232660-5	Clamp, Loop
3	232660-4	Clamp, Loop
4	869677	Chassis Asm. Electrical (See Figure 7-10)* (-01 only)
4	869883	Chassis Asm. Electrical (See Figure 7-10)* (-06 only)
5	230820-1	Plastic, Open Cell
6	369589	Cover
7	869223	Network Asm. Drive Amp (See Figure 7-11)
8	465913-25	Plate, Identification (-01 only)
8	465913-164	Plate, Identification (-06 only)
9	130970-4	Bushing, Electrical
10	243440	Bumper
11	232660-8	Clamp, Loop
12	232660-4	Clamp, Loop
13	232660-7	Clamp, Loop
14	1-127657-5	Ring, Retaining
15	869675	Chassis Asm. Mechanical (See Figure 7-3)* (-01 only)
15	869885	Chassis Asm. Mechanical (See Figure 7-3)* (-06 only)

*Completed assemblies not available. See detail figures for individual pieces.

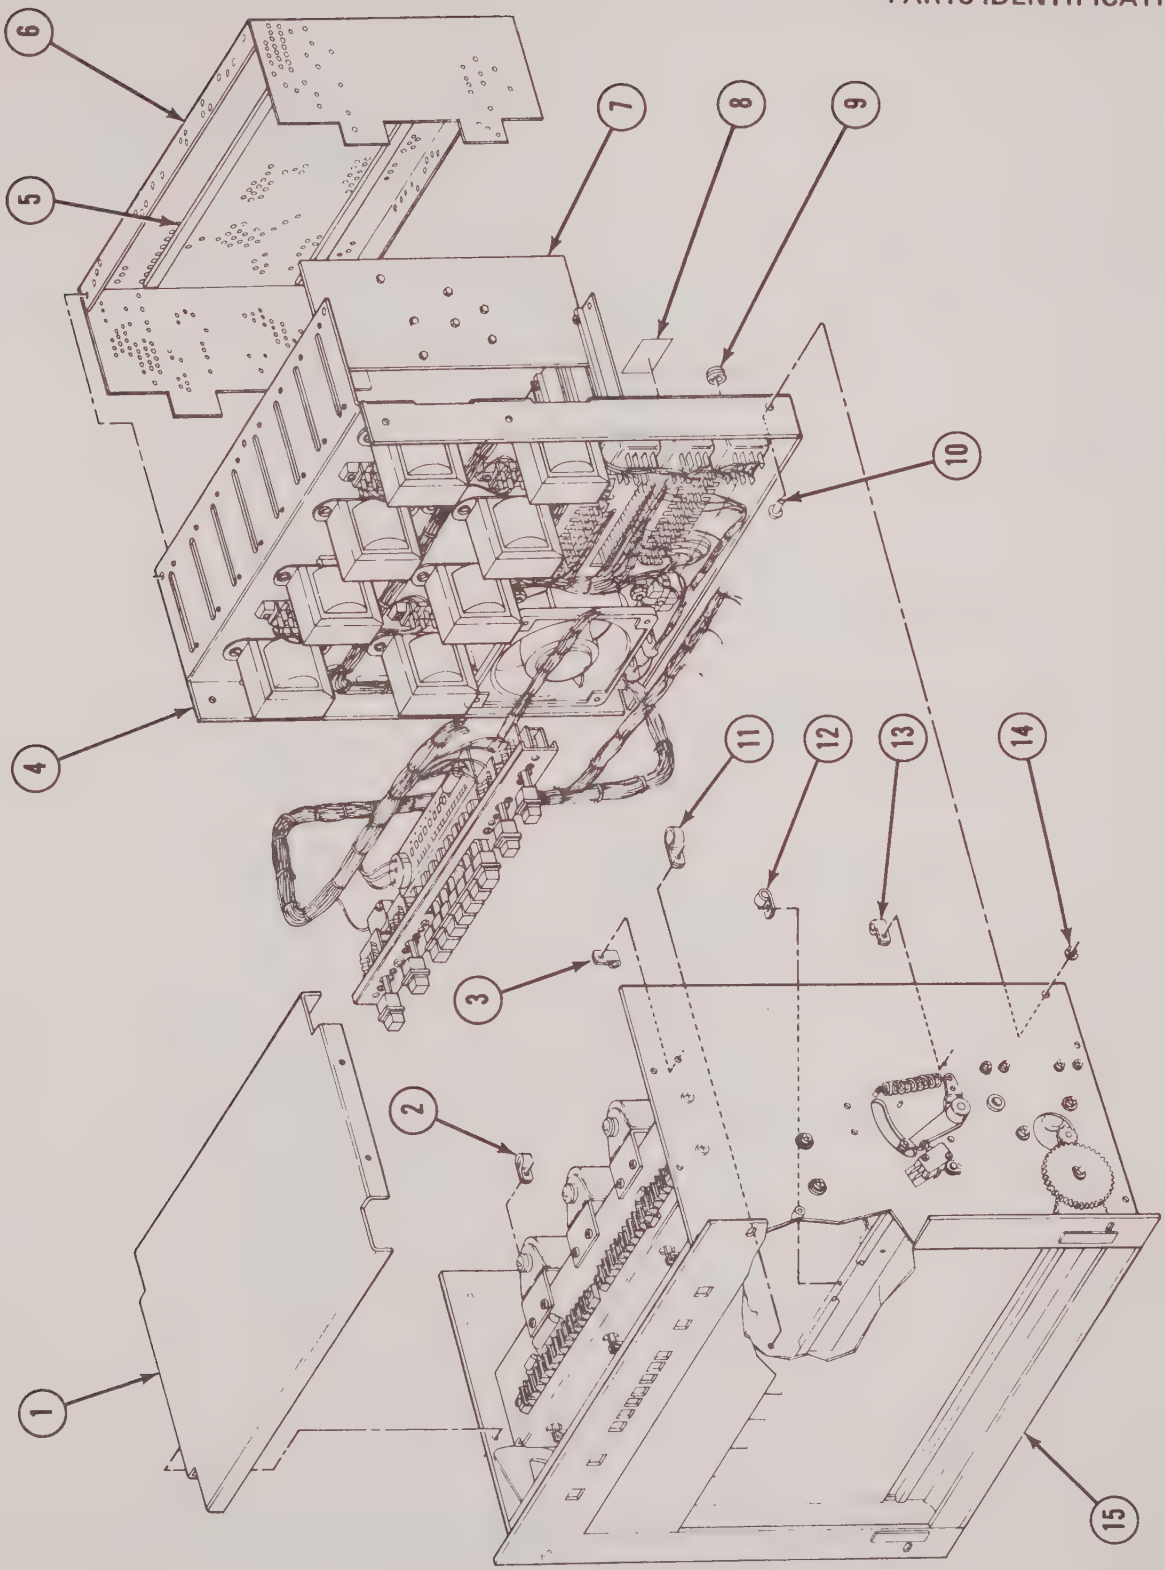

RECORDER ASSEMBLY
FIGURE 7-2

EXPLODED VIEW PARTS LIST
MECHANICAL CHASSIS ASM 869675 (-01)
MECHANICAL CHASSIS ASM 869885 (-06)
FIGURE 7-3

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	869478	Manifold Asm (Figure 7-8)	
2	265814-15	Terminal Board	TB-310, 311
3	10-241145-224	Capacitor	C-301, 302
4	10-261998-824	Capacitor	C-303
5	231887	Semiconductor, VT-910	CR-301
6	349487	Bracket, Ink Supply	
7	766243	Ink Plunger Asm	
8	11-2730-01	Ink Cartridge Asm	
9	869476	Penmotor Shield Asm (See Figure 7-6)*	
10	11-2873-20	Pen Asm, Event	
	666587-1	Tubing, Event Pen (Not Shown)	
11	11-2823-33	Pen Asm, Analog	
	666587-4	Tubing, Analog Pen (Not Shown)	
12	269488	Bar Support	
13	743915-10	Arm Asm, Sensor	
14	269484	Shaft	
15	869445	Plate Asm, RH (See Figure 7-5)*	
16	643919-10	Disc Asm, Friction	
17	269291	Spring Compression	
18	263358	Bushing, Rubber Cut to .37"	
19	31-129647-62	Nut, Hex	
20	0-240731-2	Washer, Retainer	
21	243457	Spring, Helical	
22	743913-10	Arm Subasm, Brake	
23	31-119924-6208	Screw, Machine, Hex Head	
24	1-227070-9	Ring, Retaining	
25	269491	Gear, Dual	
26	269499	Gear, Spur	
27	265741-1	Bearing, Ball	
28	127852	Capacitor (-01)	C-304
	128541	Bracket,Capacitor (-01)	

*Completed assemblies not available. See detail figures for individual pieces.

EXPLODED VIEW PARTS LIST (continued)
MECHANICAL CHASSIS ASM 869675 (-01)
MECHANICAL CHASSIS ASM 869885 (-06)
FIGURE 7-3

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
28	263890-505	Capacitor (-06)	C-304
	230014	Bracket, Capacitor (-06)	
29	269536	Bracket, Angle	
30	265814-10	Terminal Board	TB-309
31	369490	Bar, Mounting	
32	869496 (-01)	Drive Asm (See Figure 7-9)*	
32	869882 (-06)	Drive Asm (See Figure 7-9)*	
33	269498	Gear, Spur	
34	248102	Spacer, Motor	
35	669481	Roll, Drive	
36	267426-2	Deflector, Paper	
37	769492	Chute, Paper	
38	1-227070-9	Ring, Retaining	
39	127271	Washer	
40	869442	Panel Subasm, Front	
41	246388	Cover, Panel	
42	769475	Flange Asm, RH	
43	1-119820-815	Pin, Groove	
44	280159	Bearing, Insert	
45	269480	Shaft, Supply	
	769474	Shaft Asm (Not Shown, Includes Items 42, 43, 44 and 45)	
46	869452	Table Asm, Writing (See Figure 7-7)*	
47	769472	Flange Asm, LH	
48	782967	Cover Asm	
49	128327	Lamp	DS-301
50	266063	Lampholder	
51	265741-1	Bearing, Ball	
52	127271	Washer	
53	2-240731-10	Ring, Retaining	
54	869449	Plate Asm, LH (See Figure 7-4)*	
55	243443	Collar, Shaft	

*Completed assemblies not available. See detail figures for individual pieces.

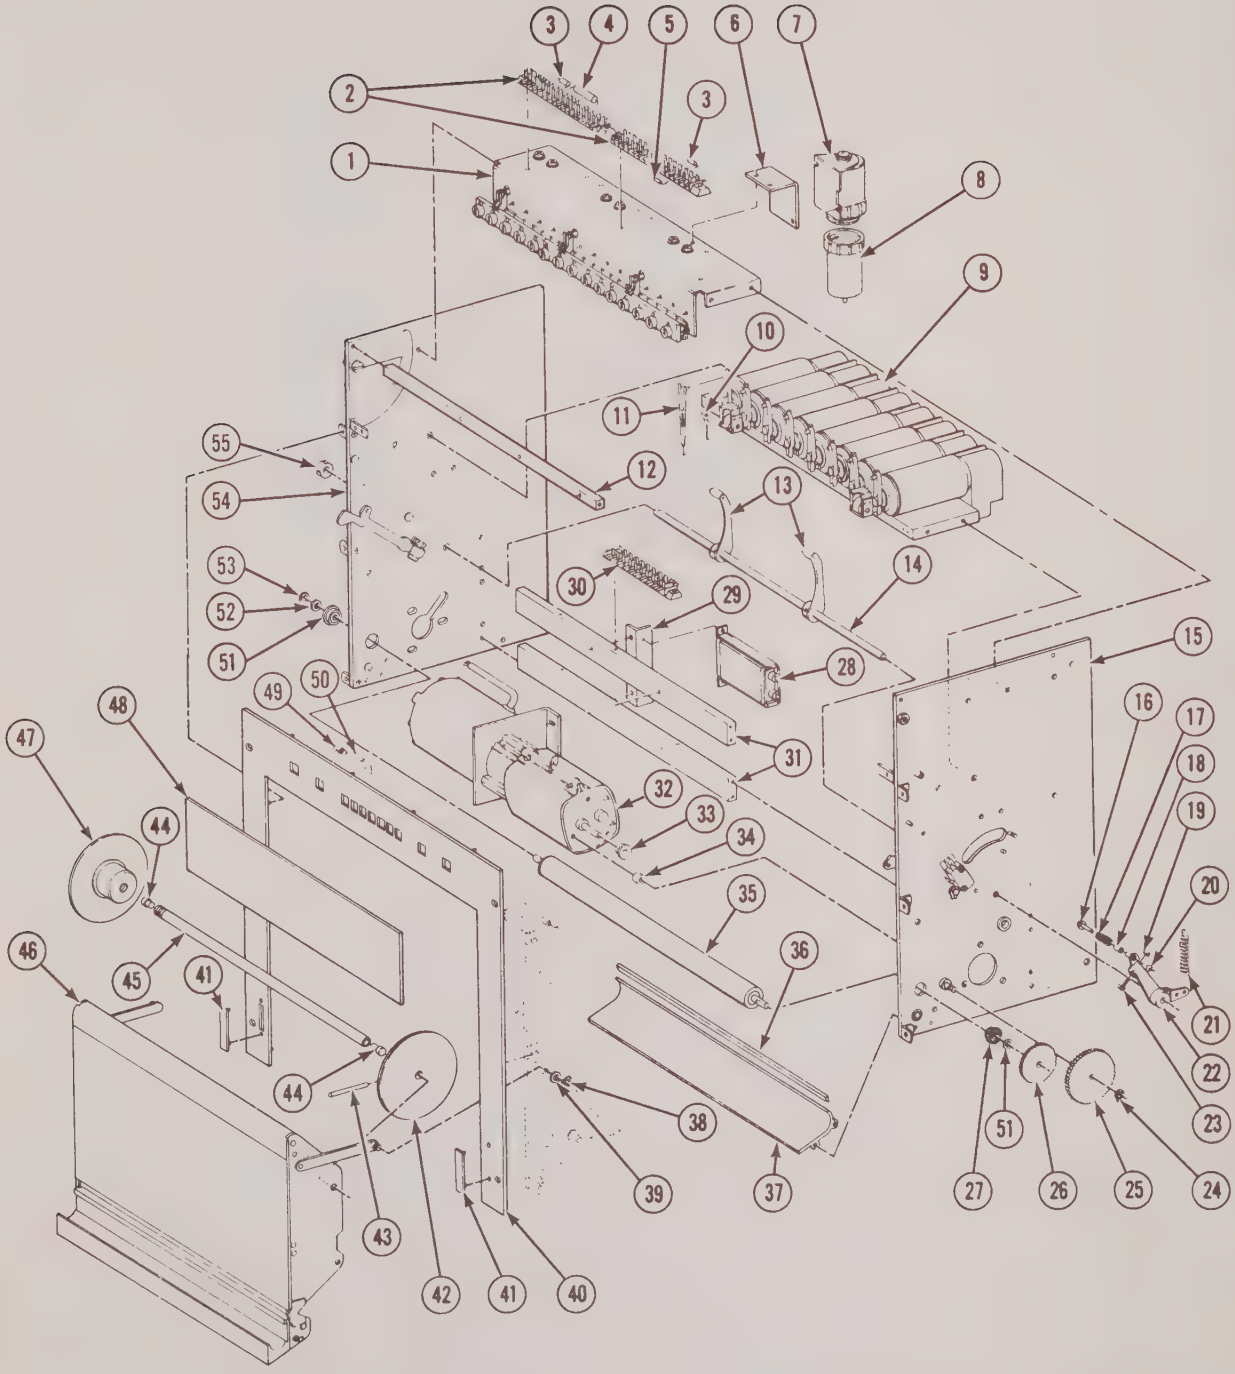

MECHANICAL CHASSIS ASM
FIGURE 7-3

EXPLODED VIEW PARTS LIST
PLATE ASM, LEFT HAND 869449 - FIGURE 7-4

ITEM NO	PART NUMBER	DESCRIPTION
1	243898-82	Nut, Assembled
2	869450	Side Plate Sub, LH
3	128967-1	Washer, Plain
4	267464	Hinge, LH
5	247659	Screw
6	269495	Spring, Positioning
7	243622	Pad, Friction
8	243611-910	Lever Asm, LH
9	127271	Washer
10	243507	Button, Detent
11	1-265849-4	Bracket, Angle
12	1-127657-5	Ring, Retaining
13	243440	Bumper
14	1-227070-9	Ring, Retaining
15	240161-310	Pin, Straight
16	267479	Button
17	242217-5	Catch, Ball

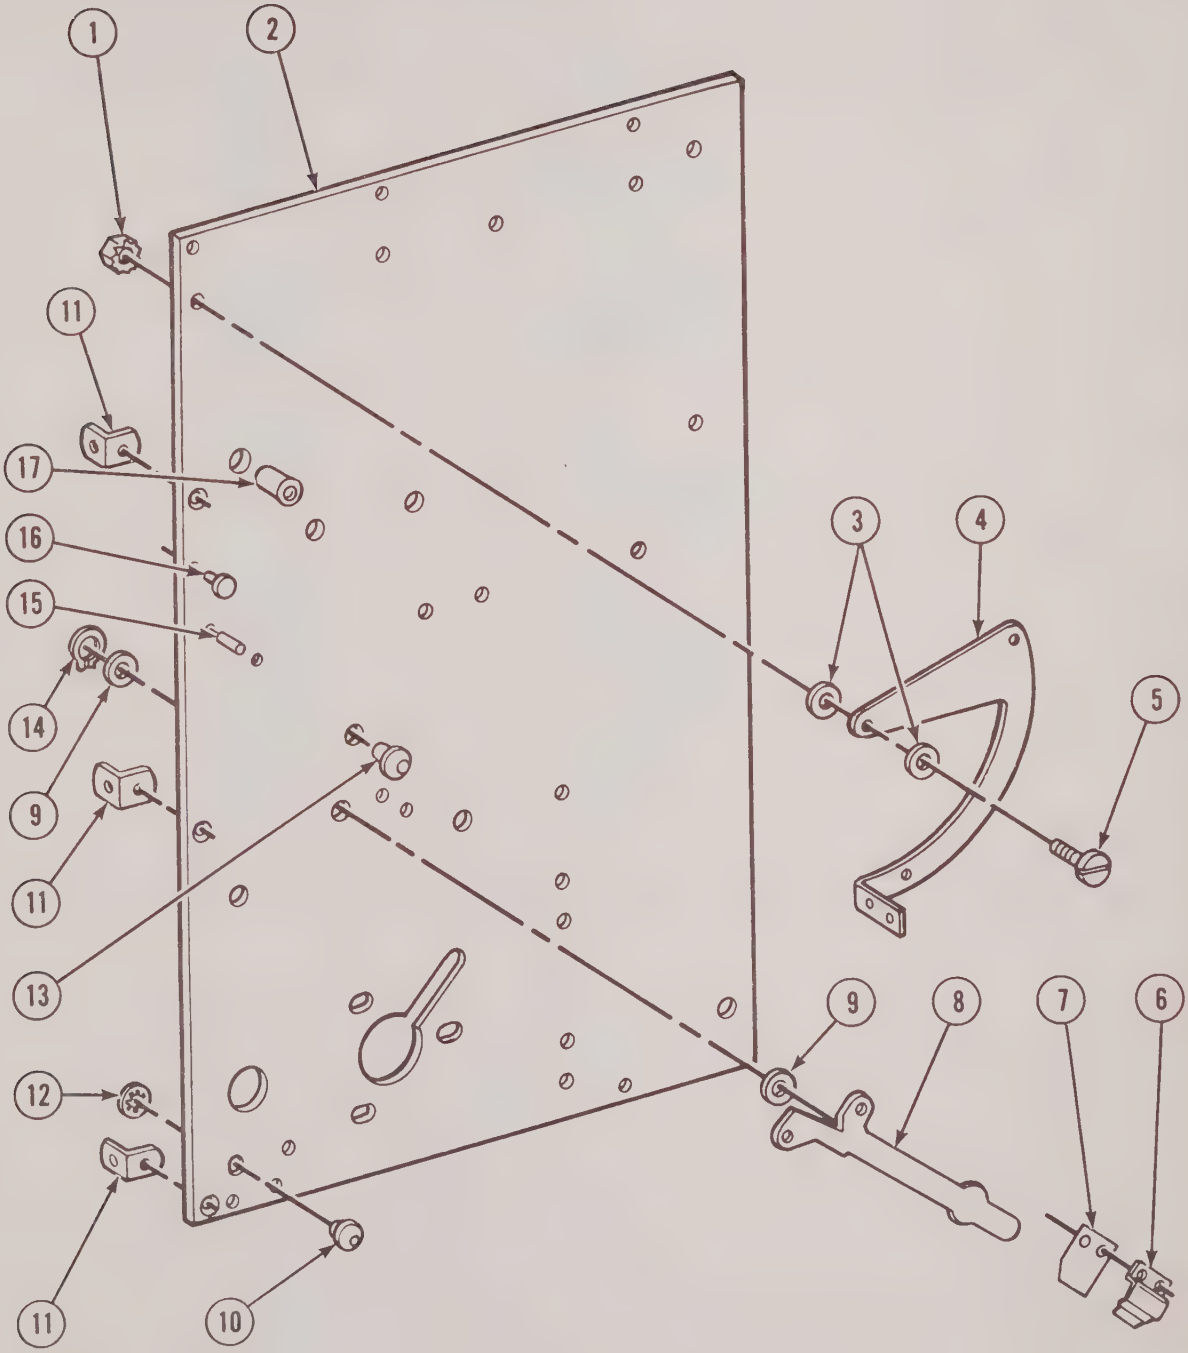

PLATE ASM, LEFT HAND 869449
FIGURE 7-4

EXPLODED VIEW PARTS LIST
PLATE ASM, RIGHT HAND 869445 - FIGURE 7-5

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	269495	Spring, Positioning	
2	243622	Pad, Friction	
3	247659	Screw	
4	128967-1	Washer, Plain	
5	267466	Hinge, RH	
6	242217-5	Catch, Ball	
7	243898-82	Nut, Assembled	
8	469447	Plate, Side RH	
9	127271	Washer	
10	1-227070-9	Ring, Retaining	
11	265874-1	Pin	
12	4-112468-7	Pin Roll	
13	130970-4	Bushing, Elec	
14	269467	Insulator, Microswitch	
15	266326	Switch, Sensitive	S-309
16	269448	Shaft, Idler	
17	1-127657-5	Ring, Retaining	
18	1-265849-4	Bracket, Angle	
19	243507	Button, Detent	
20	243898-82	Nut, Assembled	
21	240161-310	Pin, Straight	
22	267479	Button	
23	665789	Lever Asm, RH	

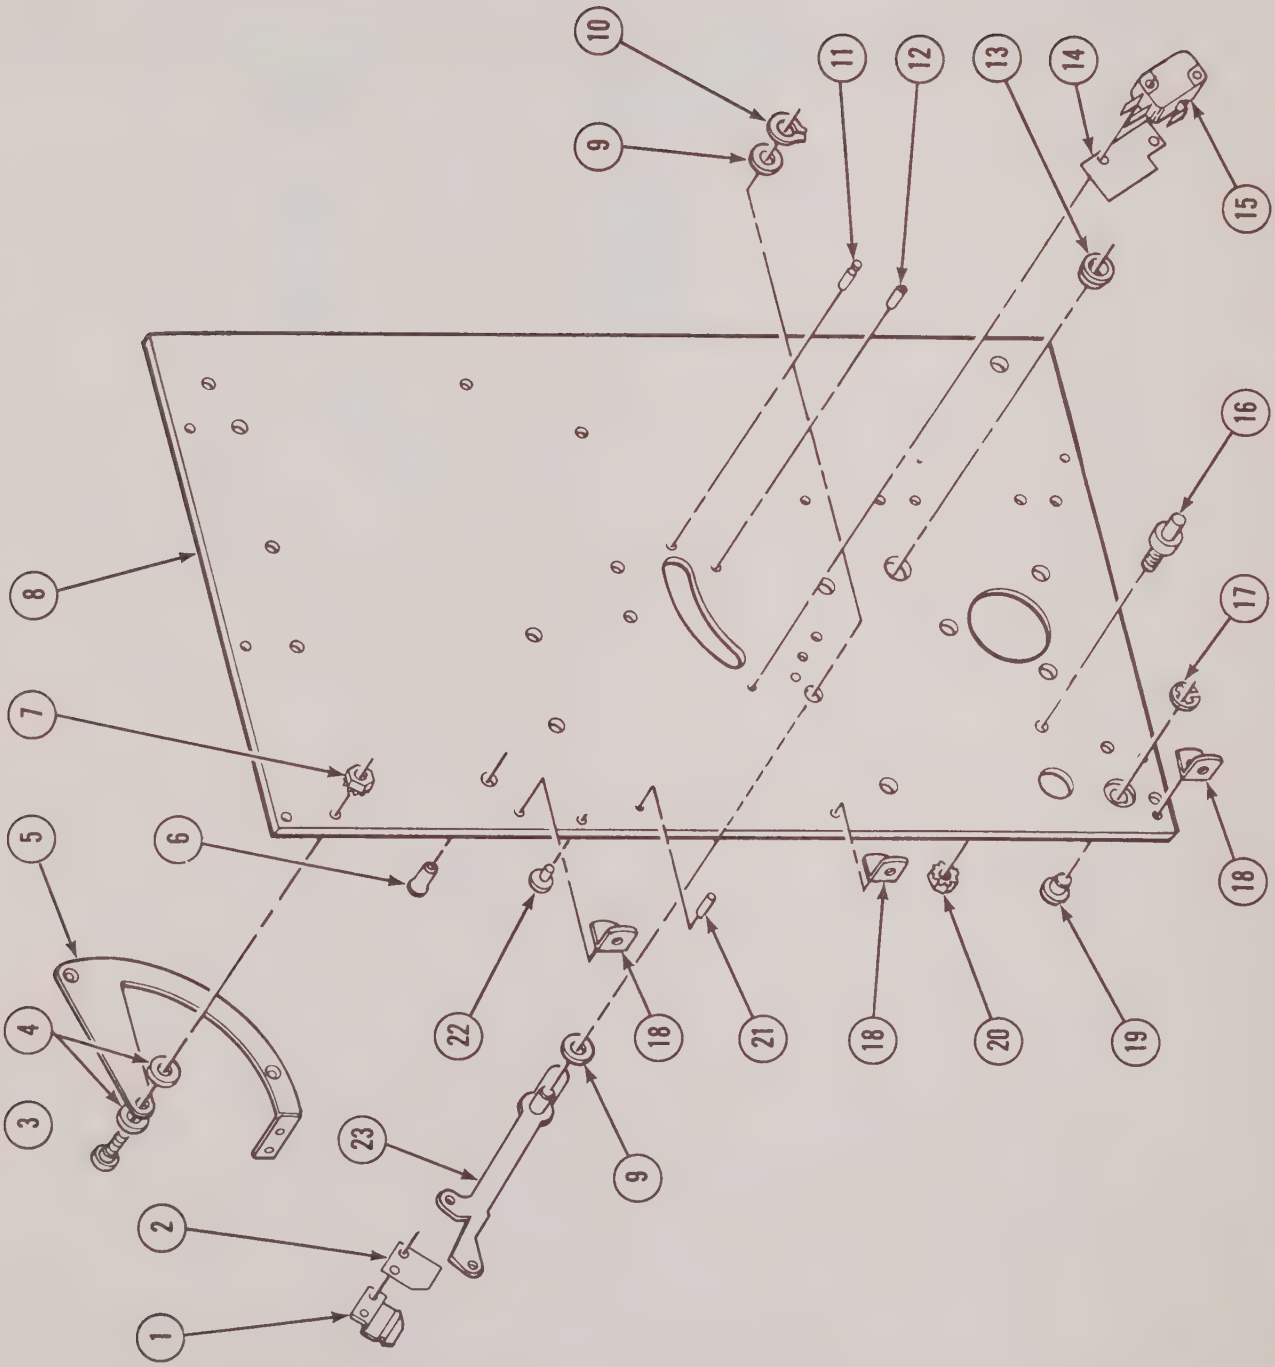

PLATE ASM, RIGHT HAND 869445
FIGURE 7-5

EXPLODED VIEW PARTS LIST
PENMOTOR SHIELD ASM 869476 - FIGURE 7-6

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	680294	Drive Band Asm	
2	867060	Penmotor Asm (includes Item 1)	M-301 thru M-308
3	266871	Shield	
4	469477	Bar Mtg, Penmotor	
5	280050	Spacer	
6	267189	Bracket	
7	11-2123-32	Event Marker Asm, RH	

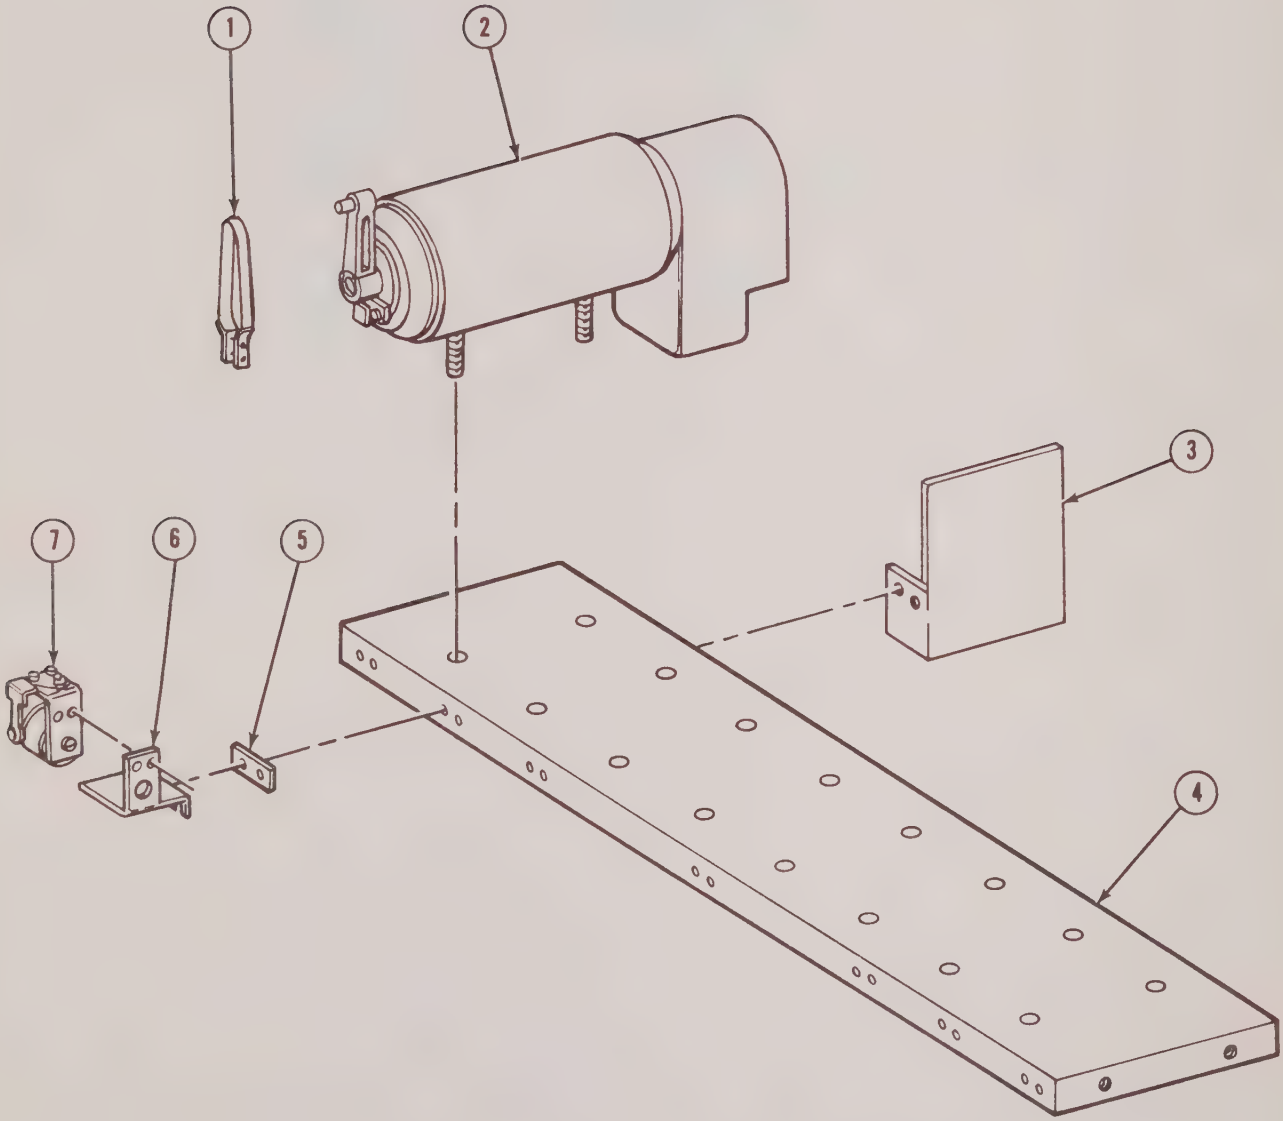

PENMOTOR SHIELD ASM 869476
FIGURE 7-6

EXPLODED VIEW PARTS LIST
TABLE ASM, WRITING 869452 - FIGURE 7-7

ITEM NO	PART NUMBER	DESCRIPTION
1	769464	Support Asm, Left
2	869456	Table Subasm
3	769454	Bar Writing
4	369458	Support Table
5	769469	Paper Release Asm
6	2-214148-102	Pin, Dowel
7	769459	Support Asm, Right
8	4-112468-9	Roll Pin
9	243855-1	Catch Ball
10	769468	Bar Subasm, Pull
11	265597-1	Bearing, Ball
12	369485	Roll, Pressure
13	243867-1	Packing, Preformed

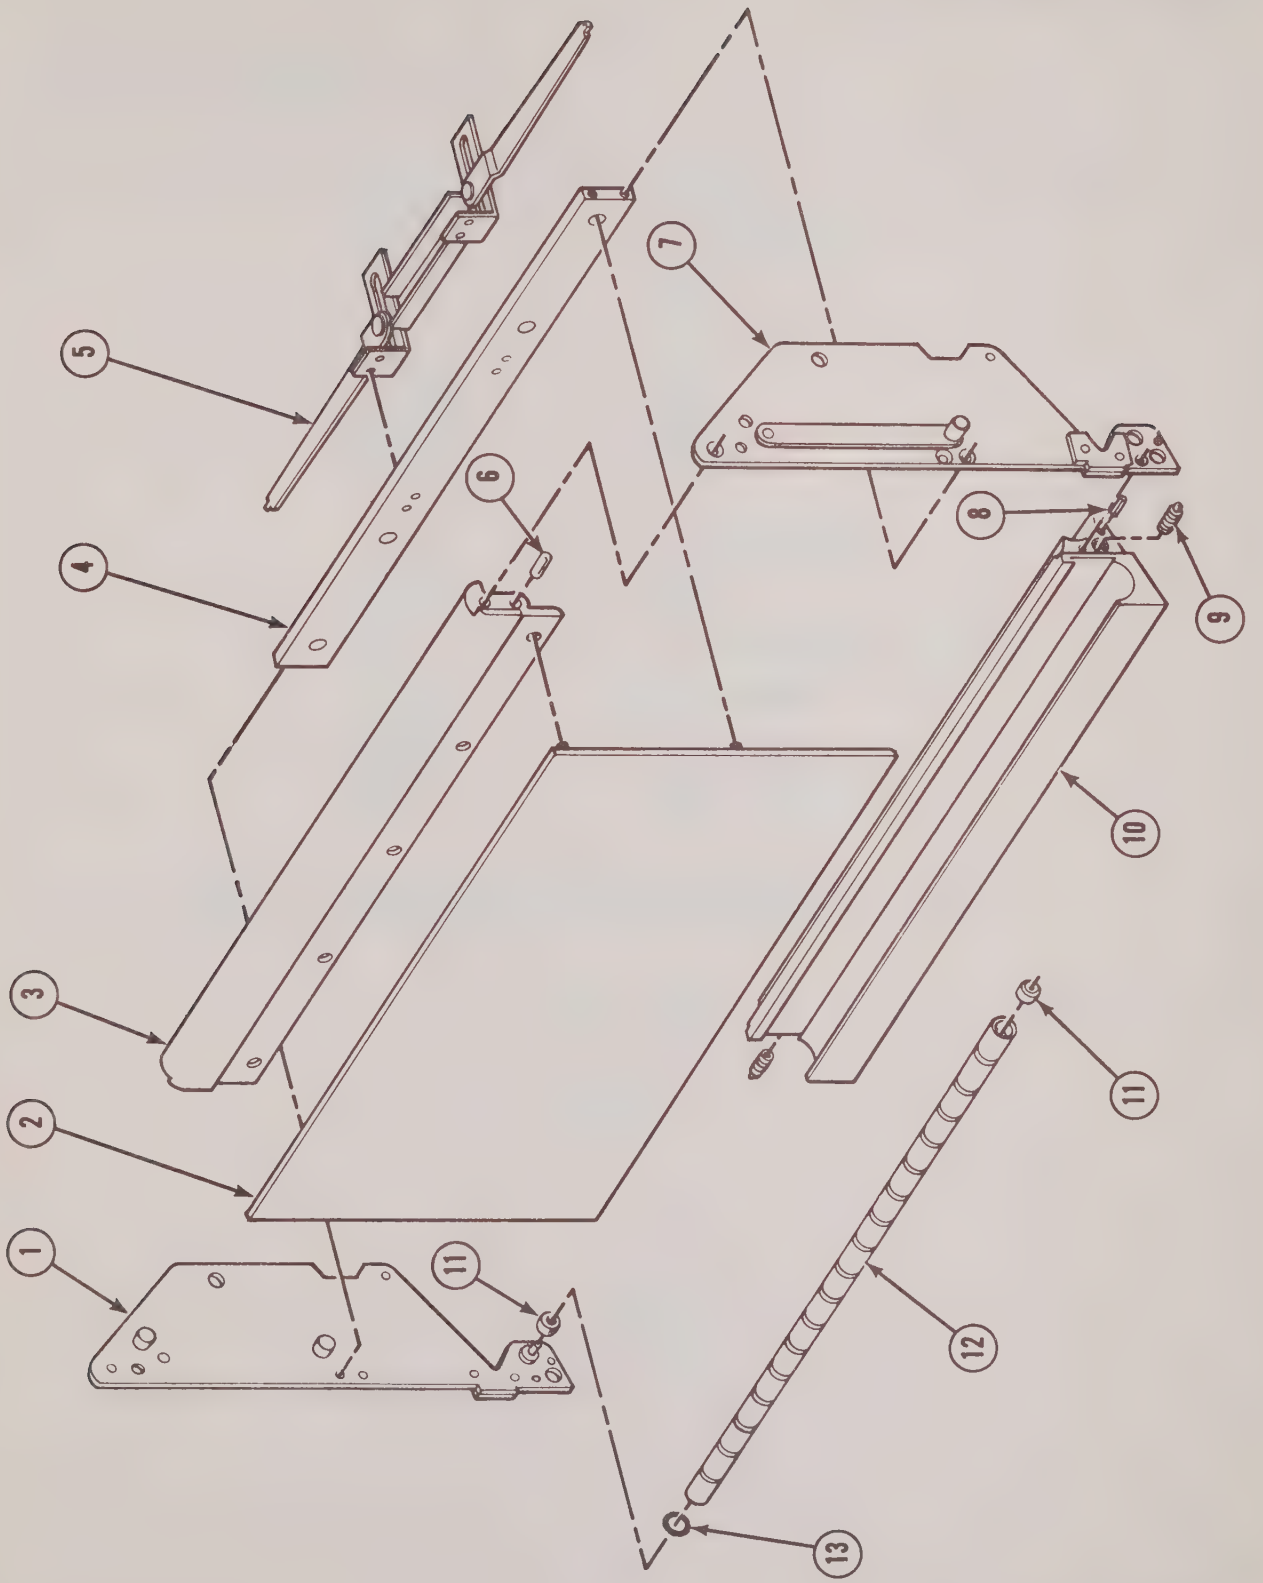

TABLE ASM, WRITING 869452
FIGURE 7-7

EXPLODED VIEW PARTS LIST
MANIFOLD ASSY 869478 - FIGURE 7-8

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL
1	467355-6	Knob, Ink Control	
2	467355-5	Screw, Operator	
3	236865-2	Cotter Pin	
4	269796	Shaft	
5	249360	Cap, Ink Outlet	
6	Not Used		
7	269805-1	Washer	
8	4-112468-33	Roll Pin	
9	2-128693-3	Grommet	
10	266888	Solenoid	L-301 thru 303
11	267414	Link, Connecting	
12	269549	Spring, Compression	
13	666582	Tube	
14	————	Not Used	
15	680141	Manifold, Supply Assy.	
16	684169*	Valve Assembly	
17	267858	Diaphram	
18	467355-2	Retainer, Diaphram	
19	365991	Lever, Operator	
20	269683	Spring	

*Because of problems in replacement, I.S.D. does not recommend replacing this item. I.S.D. cannot guarantee leak-proof operation and recommends replacement of entire Manifold Assy No. 869478

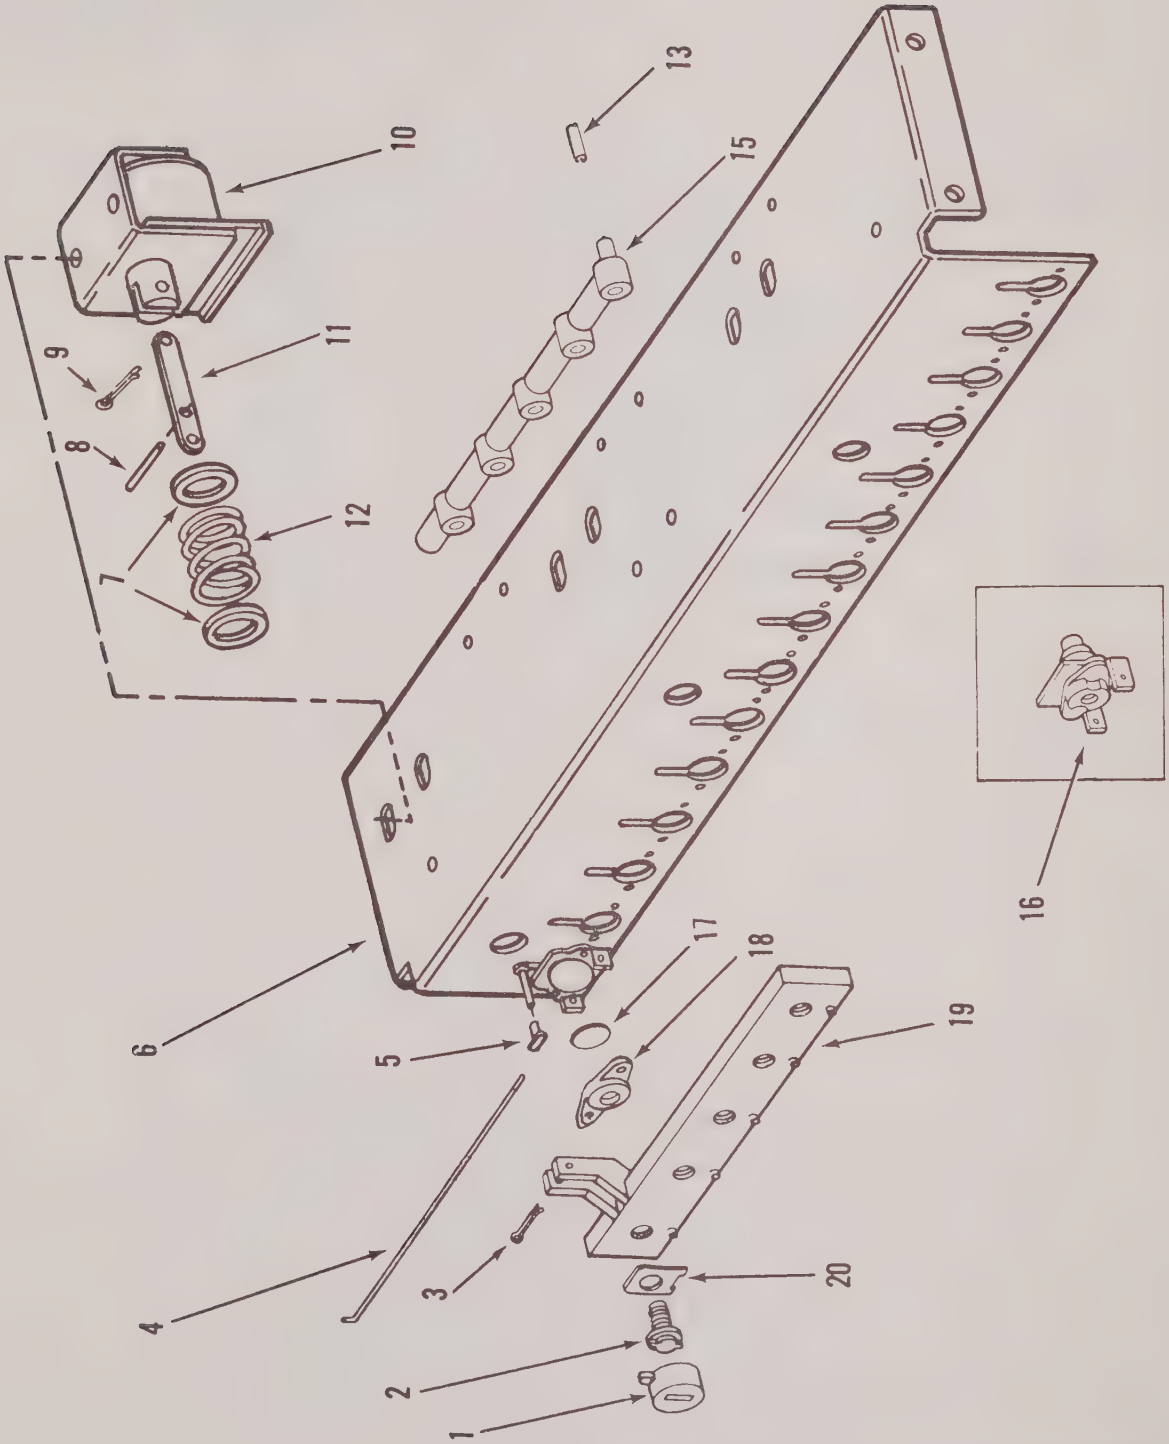

MANIFOLD ASM 869478
FIGURE 7-8

EXPLODED VIEW PARTS LIST
DRIVE ASSEMBLY 869496 (-01)
DRIVE ASSEMBLY 869882 (-06)
FIGURE 7-9

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	265840-2	Terminal Lug	
2	128844-22	Tubing, Plastic	
3	317713-2	Motor, Hysteresis (-01)	B-302
3	267590	Motor, Hysteresis (-06)	B-302
4	369486	Plate, Motor Mtg	
5	127911	Post Mtg, Transmission	
6	127912	Coupling, Universal	
7	123695	Core, Coupling	
8	127913	Coupling, Universal	
9	12-2143-16	Transmission Asm (-01)	A-302
9	12-2157-16	Transmission Asm (-06)	A-302
10	242164	Guard, Splash	A-302

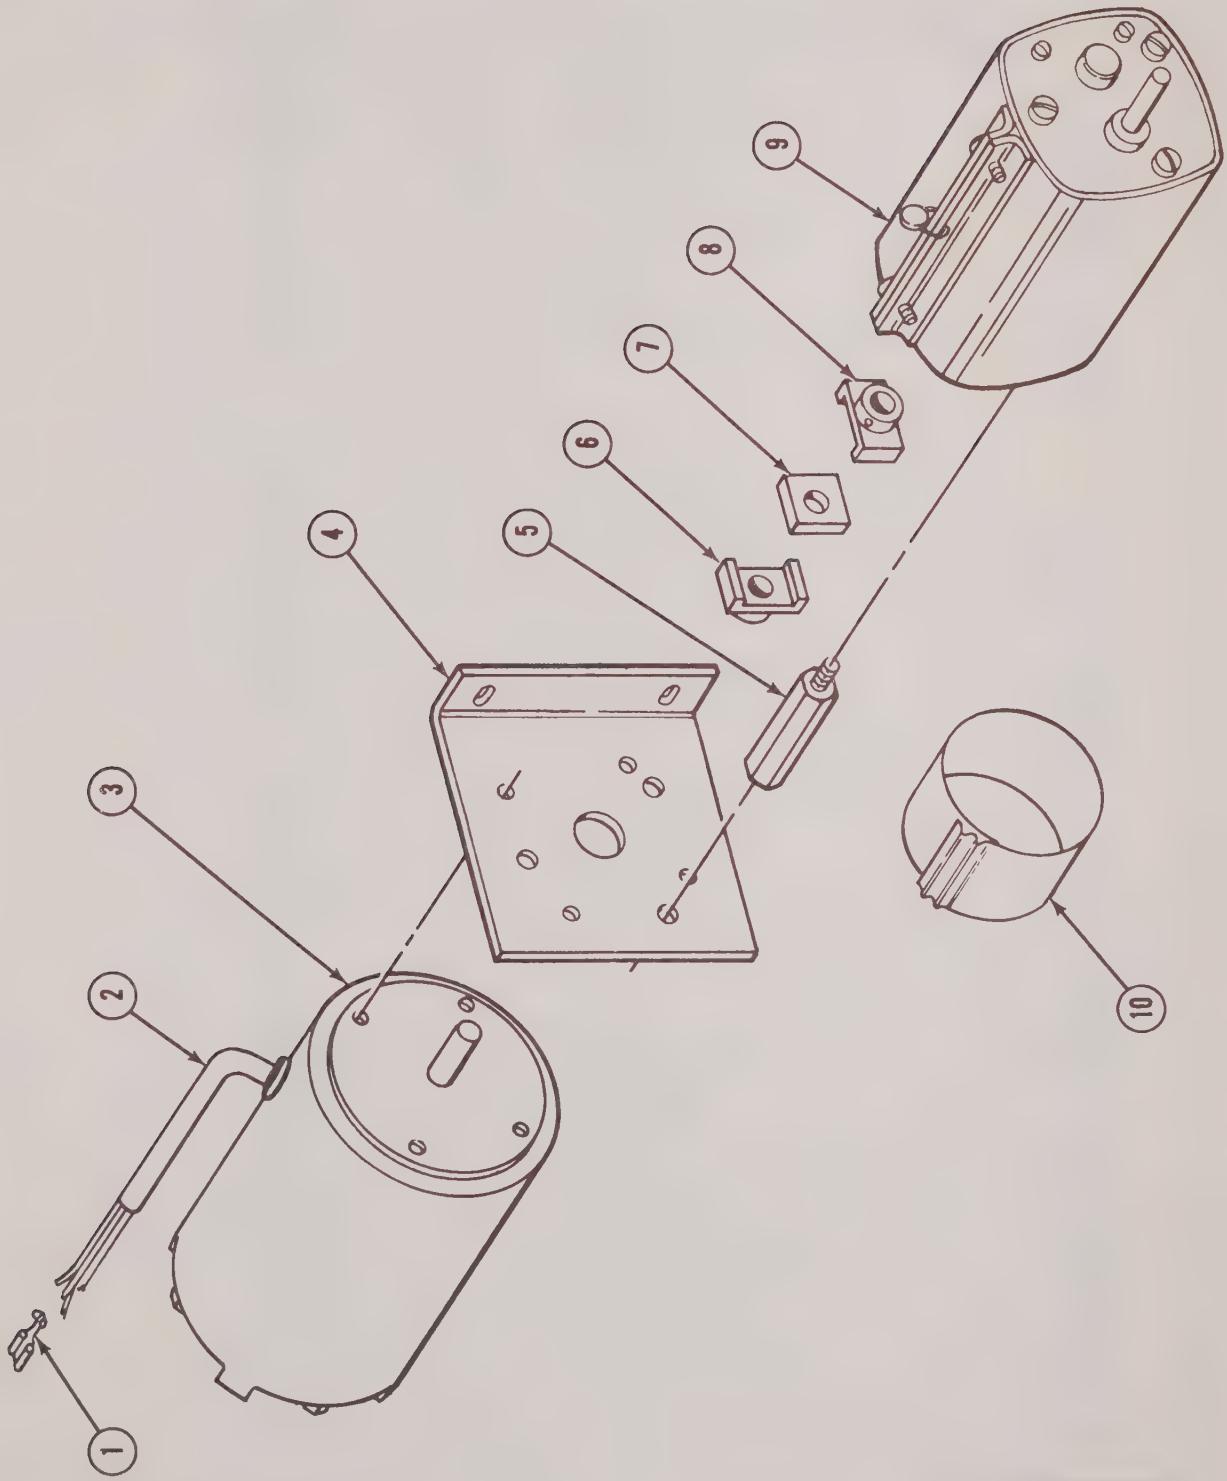

DRIVE ASM 869496
FIGURE 7-9

EXPLODED VIEW PARTS LIST
CHASSIS ASM, ELECTRICAL 869677 - FIGURE 7-10

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
	869627	Switch Assy (includes items 1 thru 10)	
1	246552-1	Button,Push	
2	369489	Bracket,Switch	
3	265840-1	Terminal Lug	
4	269257	Switch,Pushbutton	S-304 S-306
5	269259	Switch,Pushbutton	S-305 S-307
6	667373	Switch	S-303
7	269535	Bracket, Switch	
8	5-115557-182	Resistor	R-302
9	446357	Switch, Pushbutton	S-301 S-302
11	869680	Harness Asm	
12	265840-1	Terminal Lug	
13	265840-2	Terminal Lug	
14	369588	Bracket, Angle	
15	1-265849-4	Bracket, Angle	
16	269626	Retainer, PC Board	
17	130970-16	Bushing	
18	245808-1	Guide, PC Board	
19	267050-18	Terminal Board	TB-302 TB-303
20	244165	Connector	J-301
21	208572-11	Strain Relief	
22	869662	Chassis Subasm	
23	240224	Switch Slide	
24	5-115557-100	Resistor	R-303
25	126295-7	Cable, 3 Cord	P-302
26	267452	Relay, 3 PDT	K-301 K-302 K-303
27	265814-15	Terminal Board	TB-301
28	116198-14	Fuse (-01)	F-301
28	116198-29	Fuse (-06)	F-301
29	109669	Fuseholder	
30	116198-11	Fuse (-01)	F-302
30	116198-11	Fuse (-06)	F-302
31	265814-10	Terminal Board	TB-304
32	244887	Fan, Ventilation (-01)	B-301
32	263759-1	Fan, Ventilation (-06)	B-301
33	265814-6	Terminal Board	TB-305 thru TB-308
34	265542	Transformer, Power	T-301 thru T-308

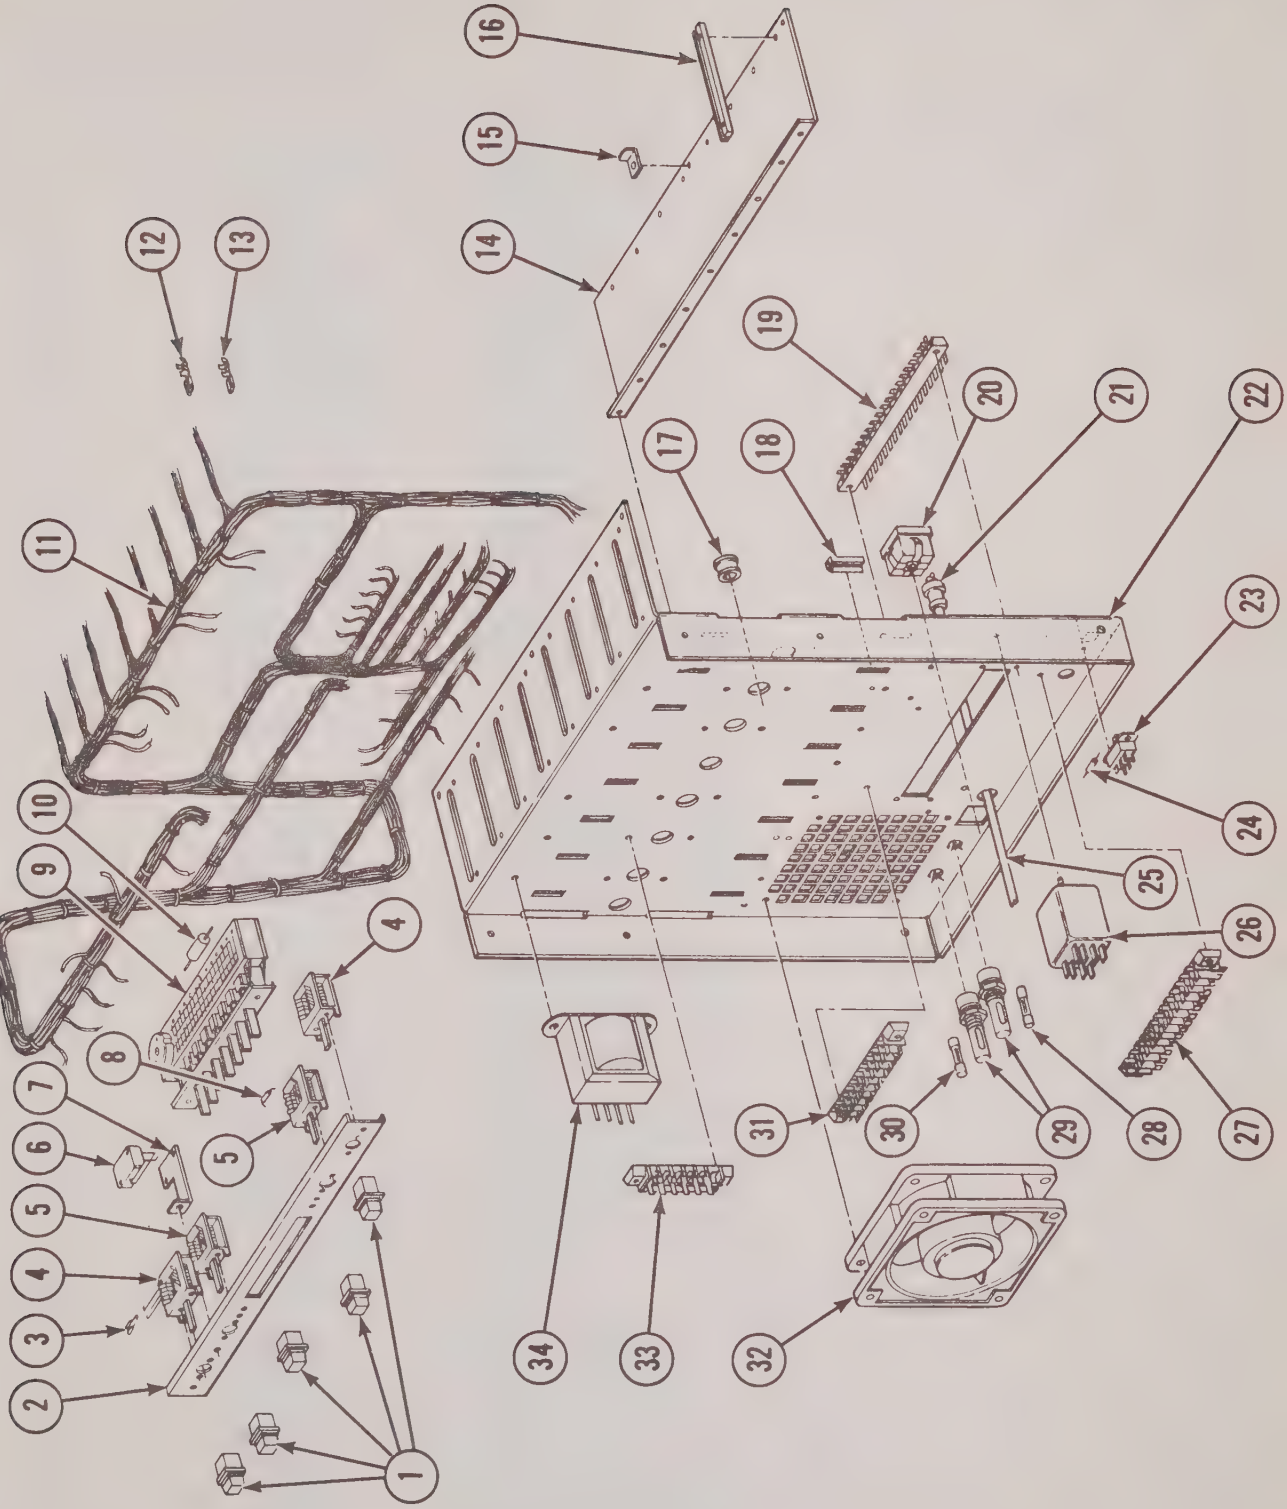

CHASSIS ASM, ELECTRICAL 869677
FIGURE 7-10

EXPLODED VIEW PARTS LIST
NETWORK ASSEMBLY 869223
FIGURE 7-11

SYMBOL NO	PART NUMBER	DESCRIPTION
A-201	269062	Oscillator Module
C-201	231922-106	Capacitor
C-202	287614-101	Capacitor
C-203	243037-108	Capacitor
C-204*	10-241145-333	Capacitor
C-204	10-247116-333	Capacitor
C-205	269255-107	Capacitor
C-206	240352-101	Capacitor
C-207	243037-108	Capacitor
C-208*	10-241145-163	Capacitor
C-208	10-247116-153	Capacitor
C-209	241513-506	Capacitor
CR-201	244311	Semiconductor, Diode
CR-202	231869	Semiconductor, Diode
CR-203	244311	Semiconductor, Diode
CR-204	244311	Semiconductor, Diode
CR-205	231869	Semiconductor, Diode
CR-206	244311	Semiconductor, Diode
CR-207	231869	Semiconductor, Diode
CR-208	241133	Semiconductor, Diode
CR-209	10-244922-20	Semiconductor, Diode
CR-210	10-244922-20	Semiconductor, Diode
CR-211	244311	Semiconductor, Diode
CR-212	231869	Semiconductor, Diode
CR-213	231869	Semiconductor, Diode
CR-214	244311	Semiconductor, Diode
CR-215	265420-2	Rectifier, Bridge
CR-216	231887	Semiconductor, Diode
CR-217	269256-7	Semiconductor, Diode
CR-218	231887	Semiconductor, Diode
CR-219	231887	Semiconductor, Diode
CR-220	231887	Semiconductor, Diode
F-201	116198-7	Fuse
F-202	116198-7	Fuse
IC-201 *	230062	Semiconductor, IC
IC-201	230062-1	Semiconductor, IC
L-201	263453-1	Coil
L-202	263453-1	Coil
Q-201	230057-2	Transistor, 2N4922
Q-202	240236	Transistor, 2N1303
Q-203	240237	Transistor, 2N1302
Q-204	242323	Transistor
Q-205	240237	Transistor, 2N1302

*Used on Assembly 869223, schematic 269587, Rev. D-1 (not shown)

EXPLODED VIEW PARTS LIST (continued)
NETWORK ASSEMBLY 869223
FIGURE 7-11

SYMBOL NO	PART NUMBER	DESCRIPTION
Q-206	242323	Transistor
Q-207	247149	Transistor
Q-208	267718-3	Transistor, 2N4900
Q-209	267716-3	Transistor, 2N4912
R-201	282299-502	Resistor, Variable
R-202	1-128182-3601	Resistor
R-203	5-115557-151	Resistor
R-204	5-115557-103	Resistor
R-205	5-115557-103	Resistor
R-206	1-128182-1502	Resistor
R-207	1-128182-1502	Resistor
R-208	1-128182-4701	Resistor
R-209	1-128182-2501	Resistor
R-210	282299-502	Resistor, Variable
R-211	1-128182-6801	Resistor
R-212	1-128182-91671	Resistor
R-213	1-128182-1103	Resistor
R-214	5-115557-822	Resistor
R-215	1-128182-1501	Resistor
R-216	282299-202	Resistor, Variable
R-217	1-128182-1501	Resistor
R-218	1-128182-5002	Resistor
R-219	1-128182-3901	Resistor
R-220	282299-202	Resistor, Variable
R-221	1-128182-2501	Resistor
R-222	1-128182-5601	Resistor
R-223	282299-502	Resistor, Variable
R-224	1-128182-5601	Resistor
R-225	1-128182-1103	Resistor
R-226	1-128182-2702	Resistor
R-227	5-115557-273	Resistor
R-228	1-128182-5003	Resistor
R-229	1-128182-5002	Resistor
R-230	5-115558-181	Resistor
R-231	5-115558-271	Resistor
R-232	5-115557-183	Resistor
R-233	5-115557-183	Resistor
R-234	282299-103	Resistor, Variable
R-235	5-115557-471	Resistor
R-236	5-115557-471	Resistor
R-237	5-115557-471	Resistor
R-238	5-115557-471	Resistor
R-239	5-115557-332	Resistor
R-240	5-115557-332	Resistor

EXPLODED VIEW PARTS LIST (continued)
NETWORK ASSEMBLY 869223
FIGURE 7-11

SYMBOL NO	PART NUMBER	DESCRIPTION
R-241	5-115557-103	Resistor
R-242	5-115557-122	Resistor
R-243	Not Used	
R-244	Not Used	
R-245	5-115557-102	Resistor
R-246	5-115558-220	Resistor
R-247	5-115559-152	Resistor
R-248	5-115559-152	Resistor
T-201	263516	Transformer

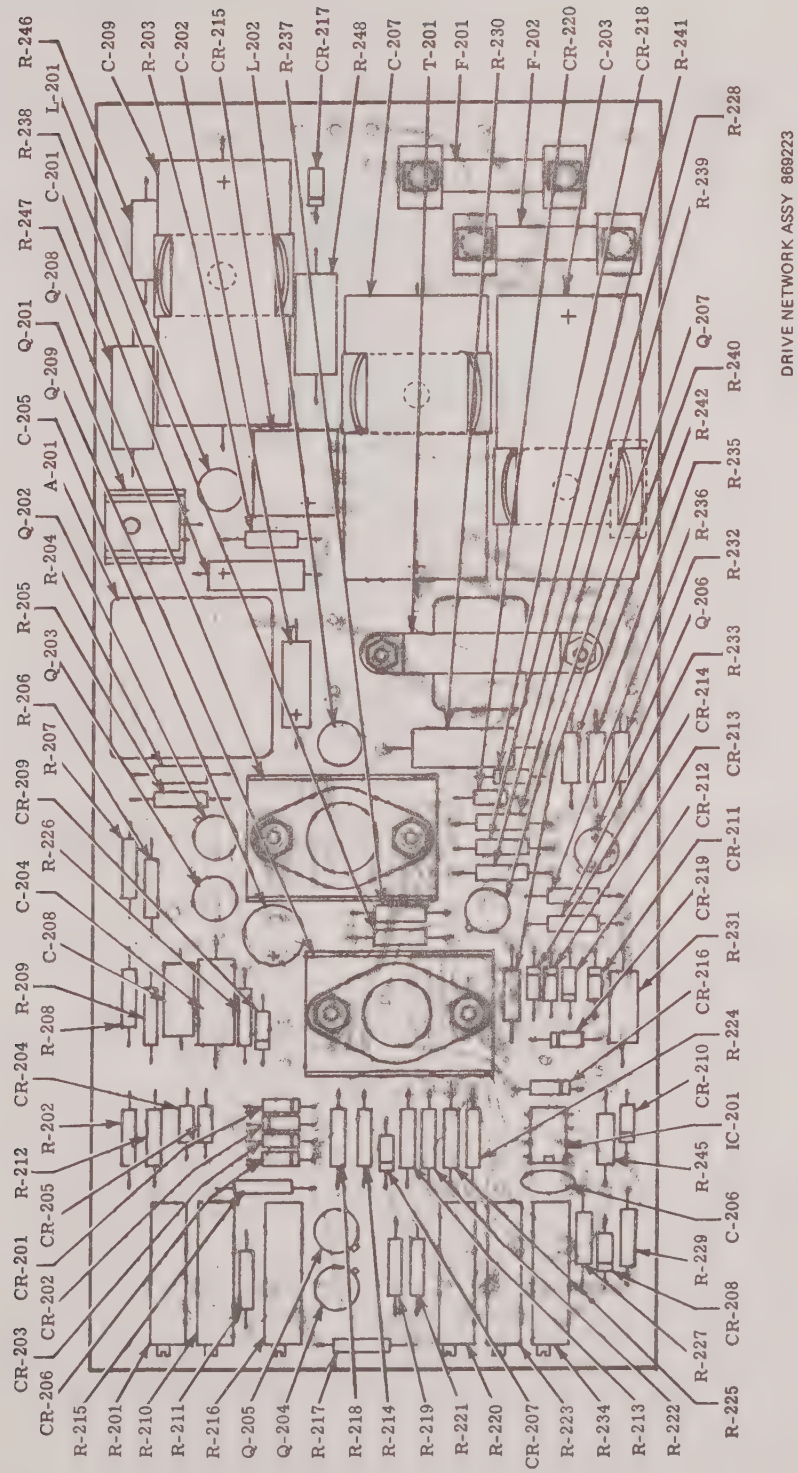

DRIVE NETWORK ASSY 869223

EXPLODED VIEW PARTS LIST
PREAMPLIFIER ASSEMBLY 883148
FIGURE 7-12 (SHEET 1 OF 3)

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	782965	Cover Asm, Top	
2	782043	Label	
3	123108-72	Grommet	
4	882973	Harness Asm	
5	123108-82	Grommet	
6	882968	Harness Asm	
7	234323	Connector, Recept, Male	P-401 thru 408
8	13-262715-4004	Screw, Self Tap, Flat Hd	
9	113294-44	Button, Plug	
10	113294-61	Button, Plug	
11	31-119918-4008	Screw, Mach, Pan Hd	
12	482970	Chassis	
13	2-128693-1	Grommet	
14	382964	Bottom Plate	
15	882969	Panel Asm	
16	31-129647-02	Nut	
17	124804-4	Clamp, Cable	
18	265814-10	Terminal Bd, Q.C.	TB-407
19	265814-14	Terminal Bd, Q.C.	TB-408
20	1-216741-411	Lockwasher, Spring	
21	31-119998-40	Nut, Hex	
22	240352-103	Capacitor	C-401 thru C-416

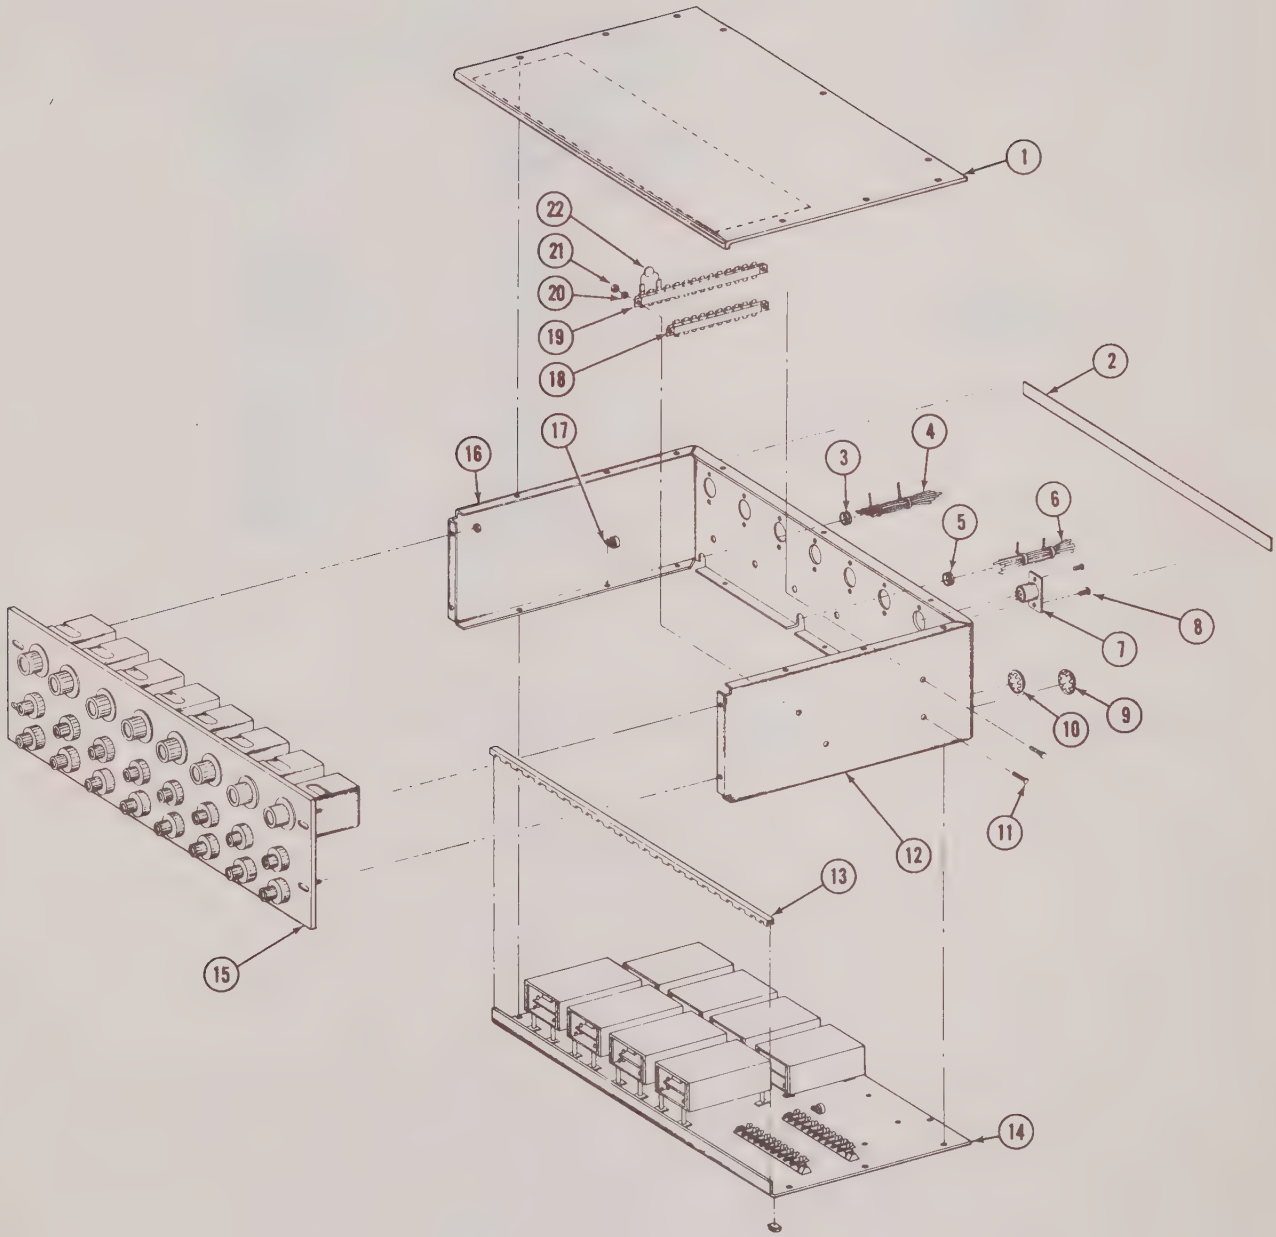

PREAMPLIFIER ASSEMBLY
883148 FIGURE 7-12 (1 OF 3)

EXPLODED VIEW PARTS LIST
PREAMPLIFIER ASSEMBLY 883148
FIGURE 7-12 (SHEET 2 OF 3)

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	682962	Plate, Modified	
2	281996	Plate, Mtg.	
3	882972	Switch (See Figure 7-15)	
4	281904	Insulator	
5	281902	Cover	
6	2-128693-1	Grommet	
7	31-119998-40	Nut, Hex	
8	246393-202	Resistor, Vari w/switch	R/S-410 thru 418
9	246394-502	Resistor, Vari	R-419 thru 426
10	31-129647-02	Nut, Hex	
11	882969	Panel Asm	
12	231182	Nut, Self Locking	
13	231183	Knob	
14	13-119923-6202	Screw, Set	
15	665563	Knob Asm	

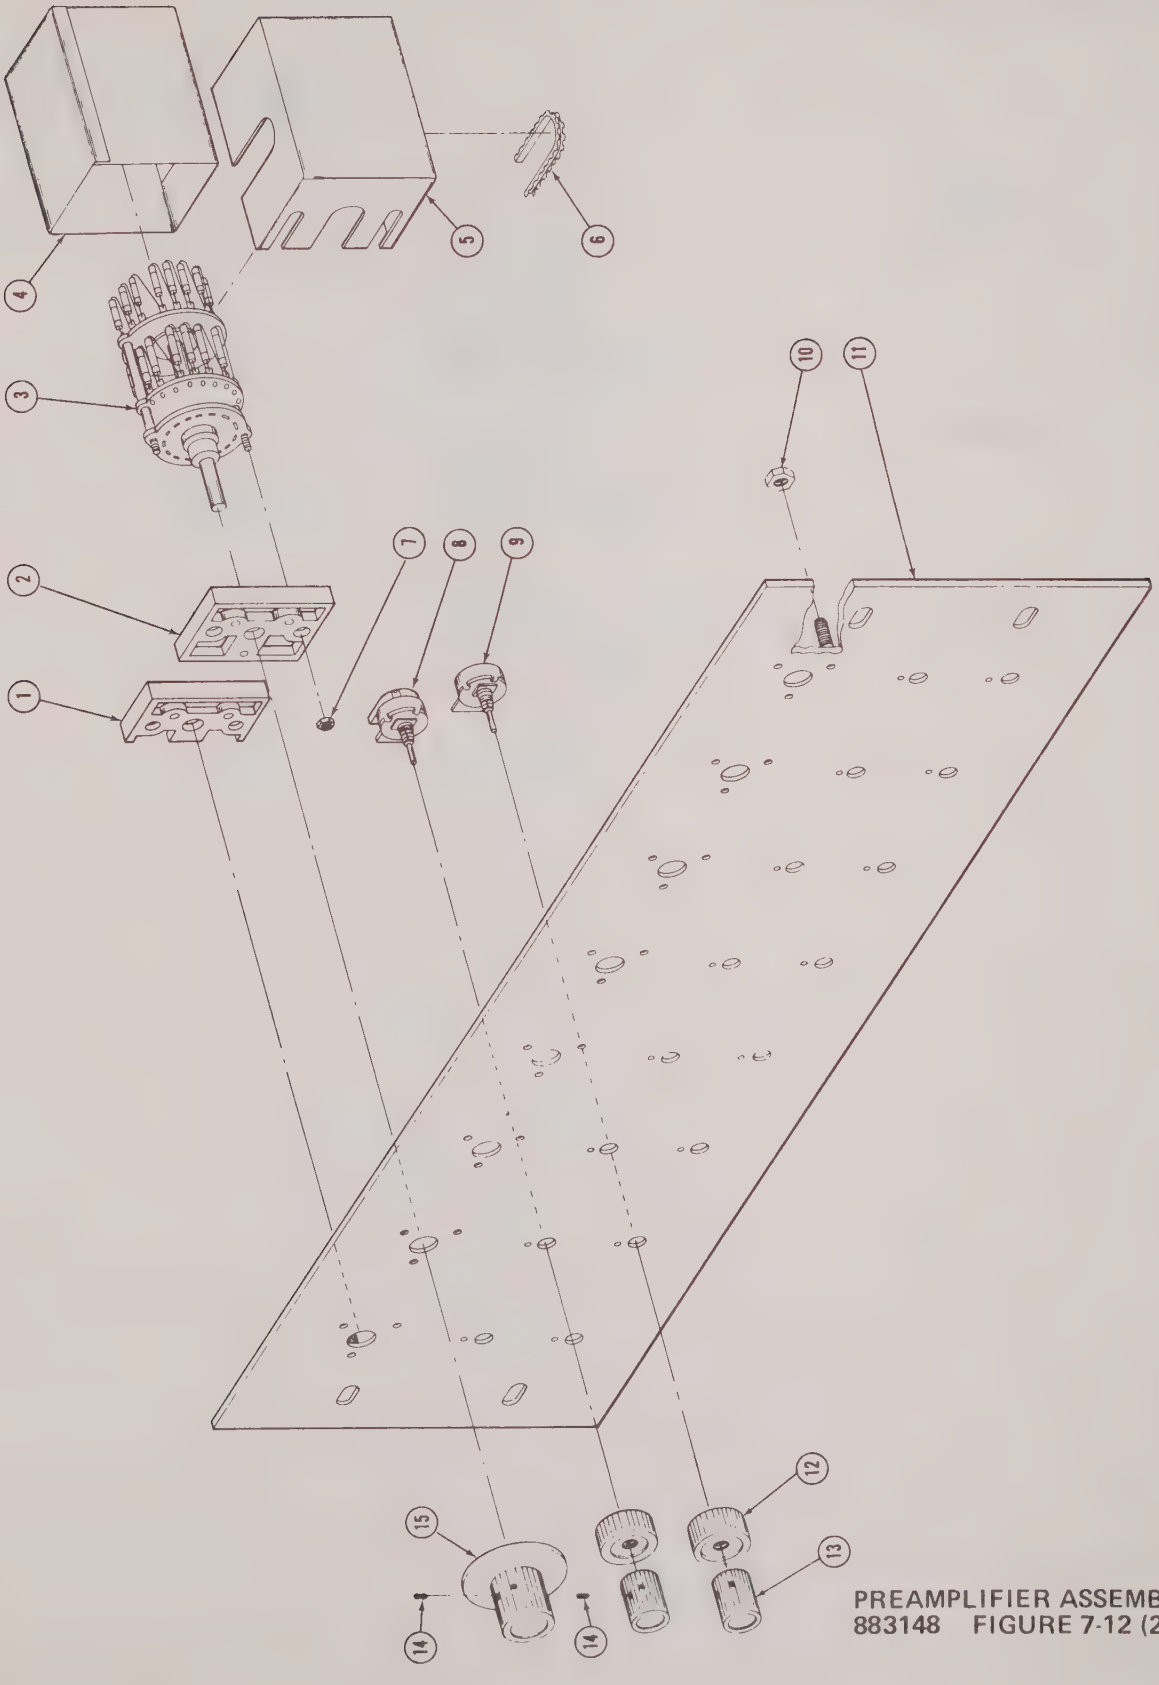

PREAMPLIFIER ASSEMBLY
883148 FIGURE 7-12 (2 OF 3)

EXPLODED VIEW PARTS LIST
PREAMPLIFIER ASSEMBLY 883148
FIGURE 7-12 (SHEET 3 OF 3)

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	13-262716-4004	Screw, Self Tap	
2	282963	Cover, Preamp	
3	766409	Preamp Assy (See Figure 7-14)	
4	282961	Holder, Preamp	
5	124804-3	Clamp, Cable	
6	265814-10	Terminal Bd, Q.C.	TB-405, 406
7	230076	Bumper, Rubber	
8	382964	Plate, Bottom	
9	31-119918-4008	Screw, Mach, Pan Hd	
10	2-128693-1	Grommet	
11	265840-1	Terminal Lug	
12	240352-103	Capacitor (Same as Fig. 7-12, Sheet 1 of 1, Item 22)	
13	31-119998-40	Nut, Hex	
14	1-216741-411	Lockwasher, Spring	
15	281515-7	Support Spacer	
16	124804-2	Clamp, Cable	
17	281515-2	Support Spacer	

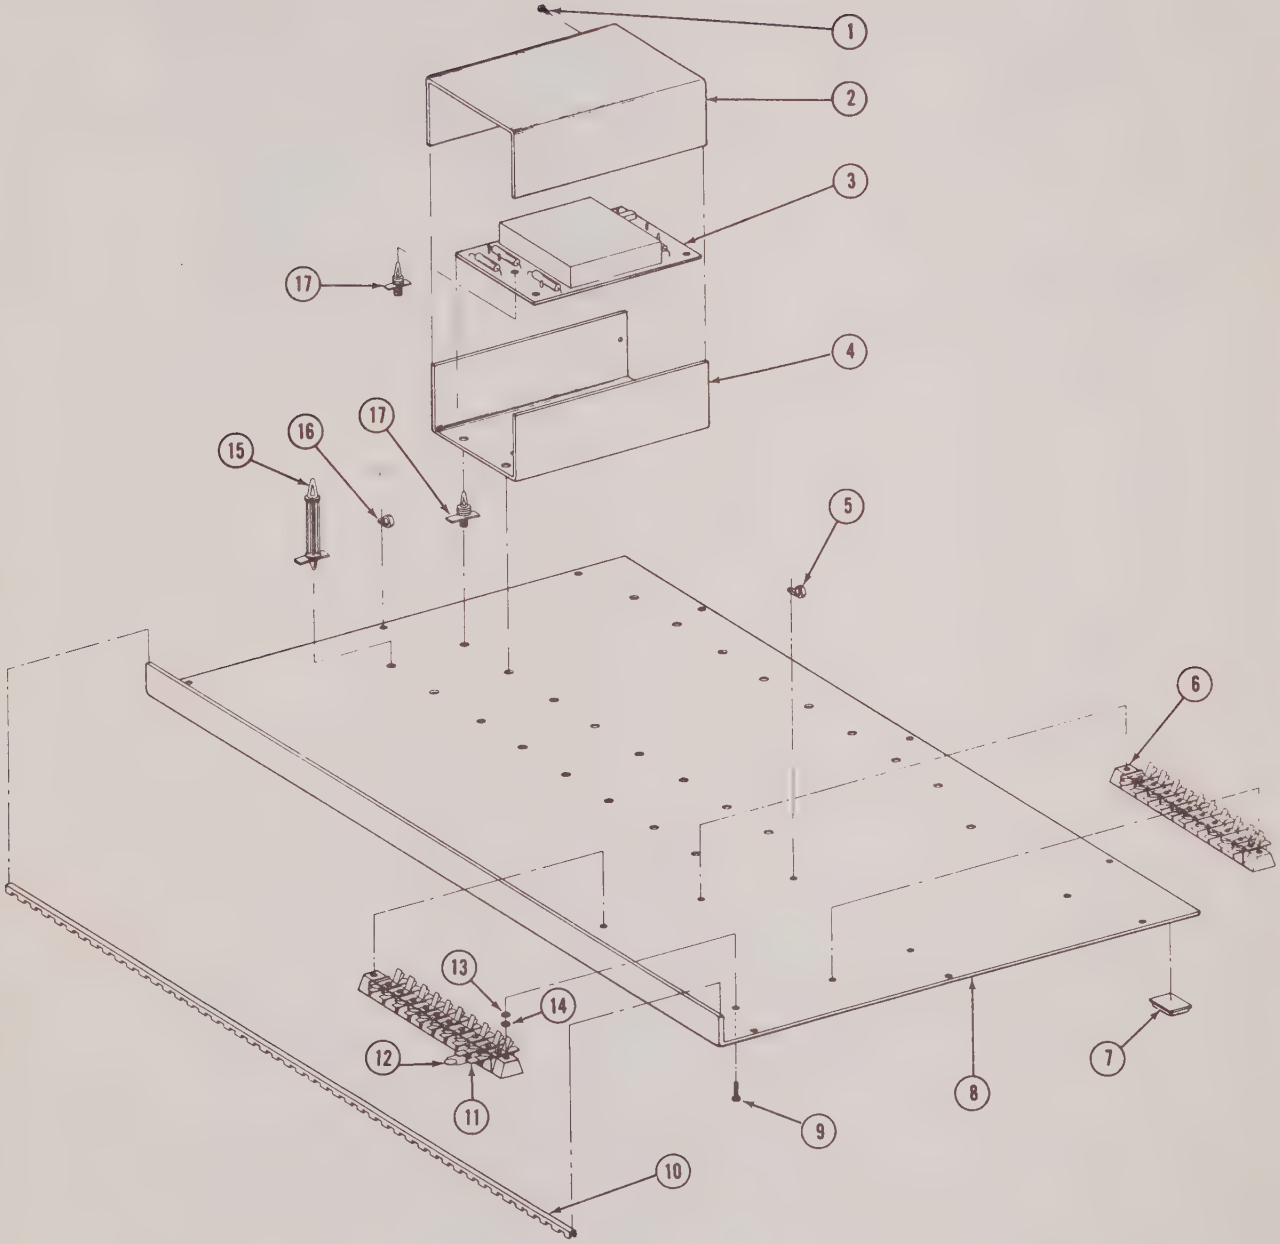

PREAMPLIFIER ASSEMBLY
883148 FIGURE 7-12 (3 OF 3)

FIGURE 7-13
EXPLODED VIEW PARTS LIST
CHASSIS SUBASSEMBLY–

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	Part of item 5	Lock Ring	
2	265840-1	Terminal	
3	782987	Harness	
4	782966	Chassis Assy	
5	265873-2	Jack, Banana	
6	267050-10	Terminal Board	TB-401 thru 404

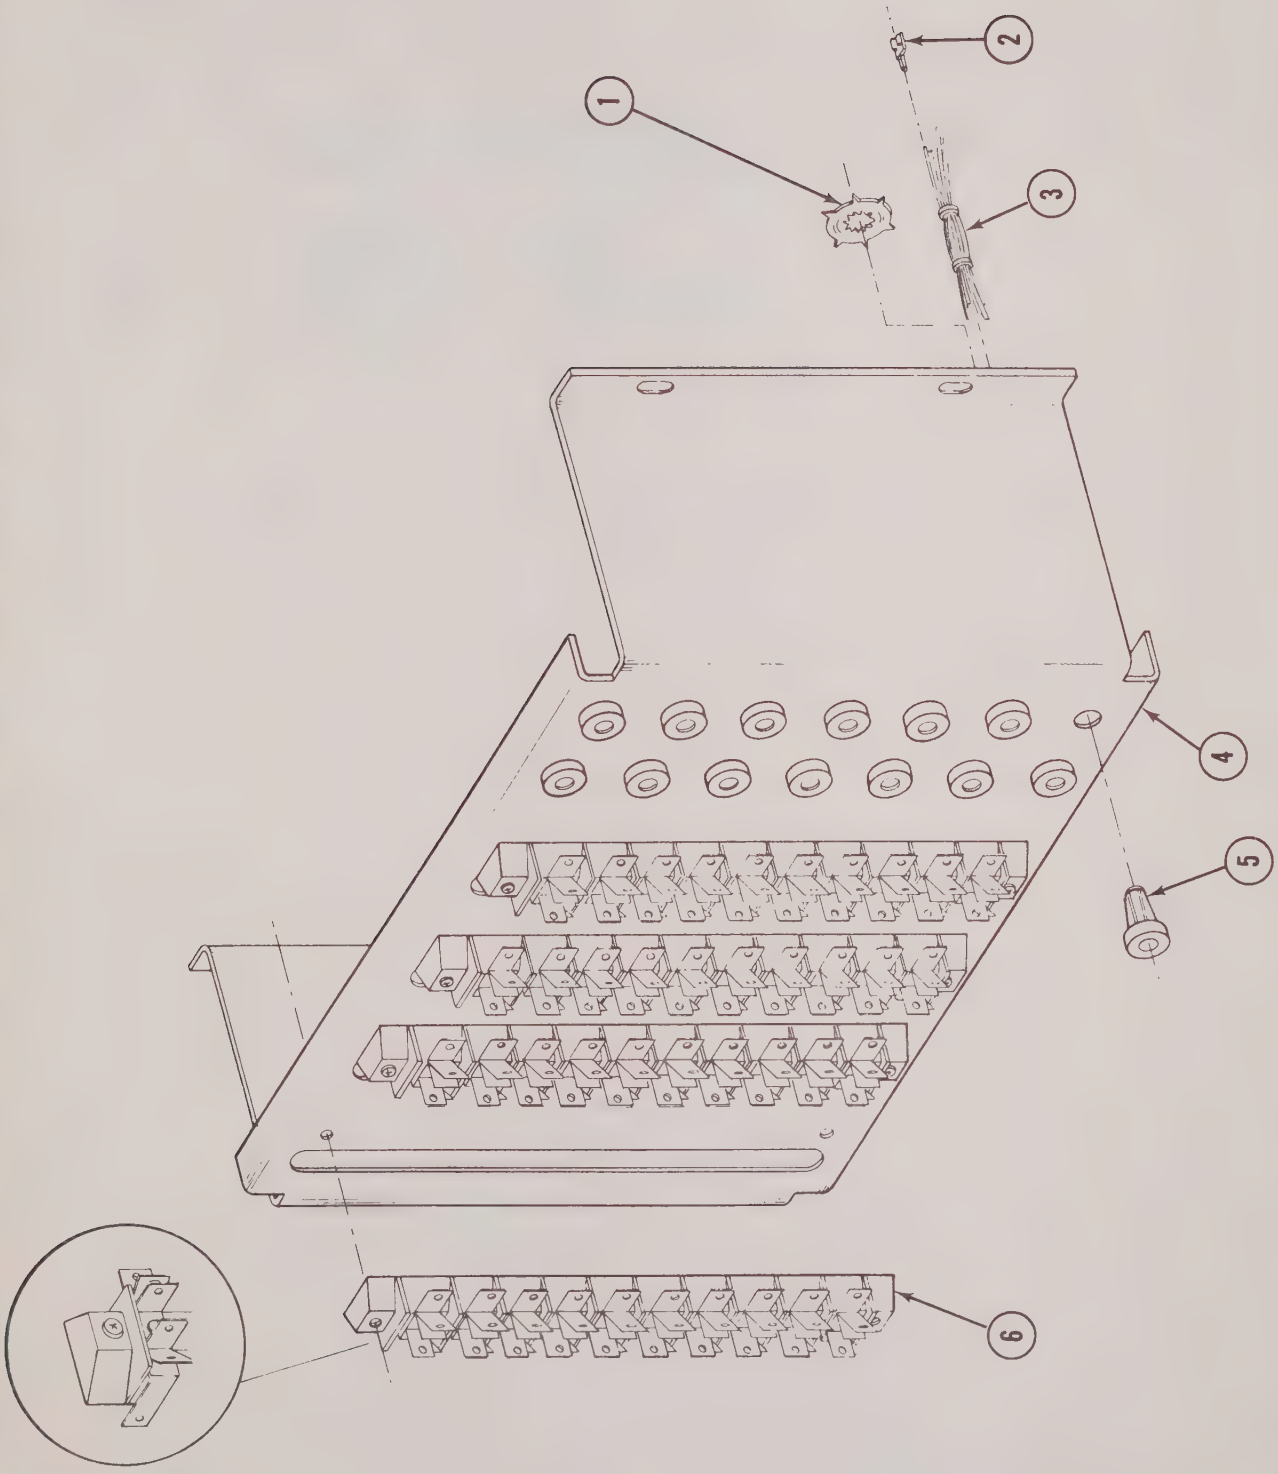

FIGURE 7-13
CHASSIS SUBASSEMBLY

EXPLODED VIEW PARTS LIST
PREAMPLIFIER ASSEMBLY 766409
FIGURE 7-14

SYMBOL NO	PART NUMBER	DESCRIPTION
AR-401	266002	Transducer Amplifier
R-401	1-117802-5003	Resistor
R-402	1-117802-5003	Resistor
R-403	1-128182-1001	Resistor
R-406	266337-503	Resistor, Variable
R-407	5-115557-331	Resistor

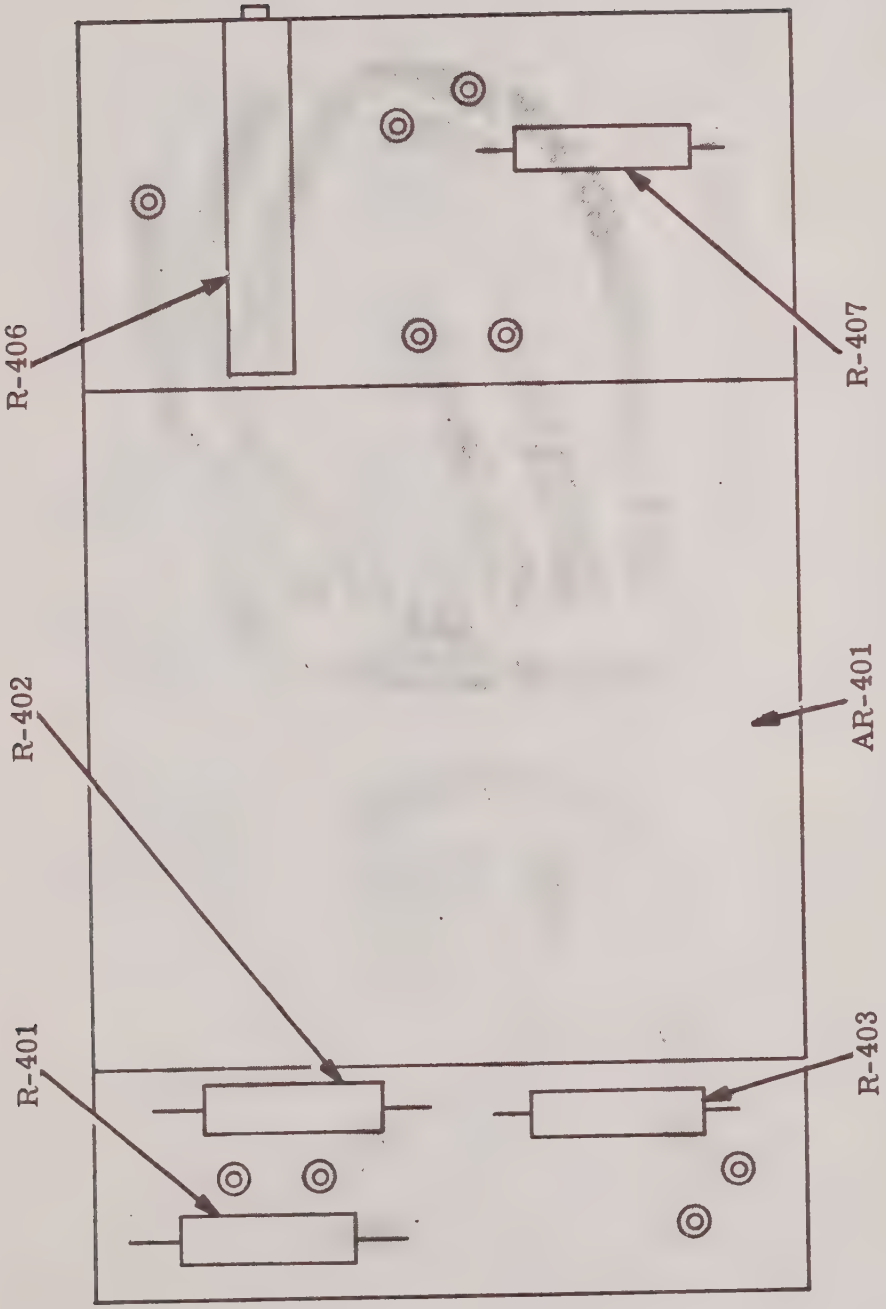

PREAMPLIFIER ASSEMBLY 766409
FIGURE 7-14

EXPLODED VIEW PARTS LIST
SWITCH ASSEMBLY 882972
FIGURE 7-15

SYMBOL NO	PART NUMBER	DESCRIPTION
R-101	50-128182-2504	Resistor
R-102	50-128182-1504	Resistor
R-103	50-128182-5003	Resistor
R-104	50-128182-2503	Resistor
R-105	50-128182-1503	Resistor
R-106	50-128182-5002	Resistor
R-107	50-128182-2502	Resistor
R-108	50-128182-1502	Resistor
R-109	50-128182-5001	Resistor
R-110	50-128182-2501	Resistor
R-111	50-128182-1501	Resistor
R-112	50-128182-5000	Resistor
R-113	50-128182-5000	Resistor
R-114	50-128182-2504	Resistor
R-115	50-128182-1504	Resistor
R-116	50-128182-5003	Resistor
R-117	50-128182-2503	Resistor
R-118	50-128182-1503	Resistor
R-119	50-128182-5002	Resistor
R-120	50-128182-2502	Resistor
R-121	50-128182-1502	Resistor
R-122	50-128182-5001	Resistor
R-123	50-128182-2501	Resistor
R-124	50-128182-1501	Resistor
R-125	50-128182-5000	Resistor
R-126	50-128182-5000	Resistor
S-101	281955	Switch

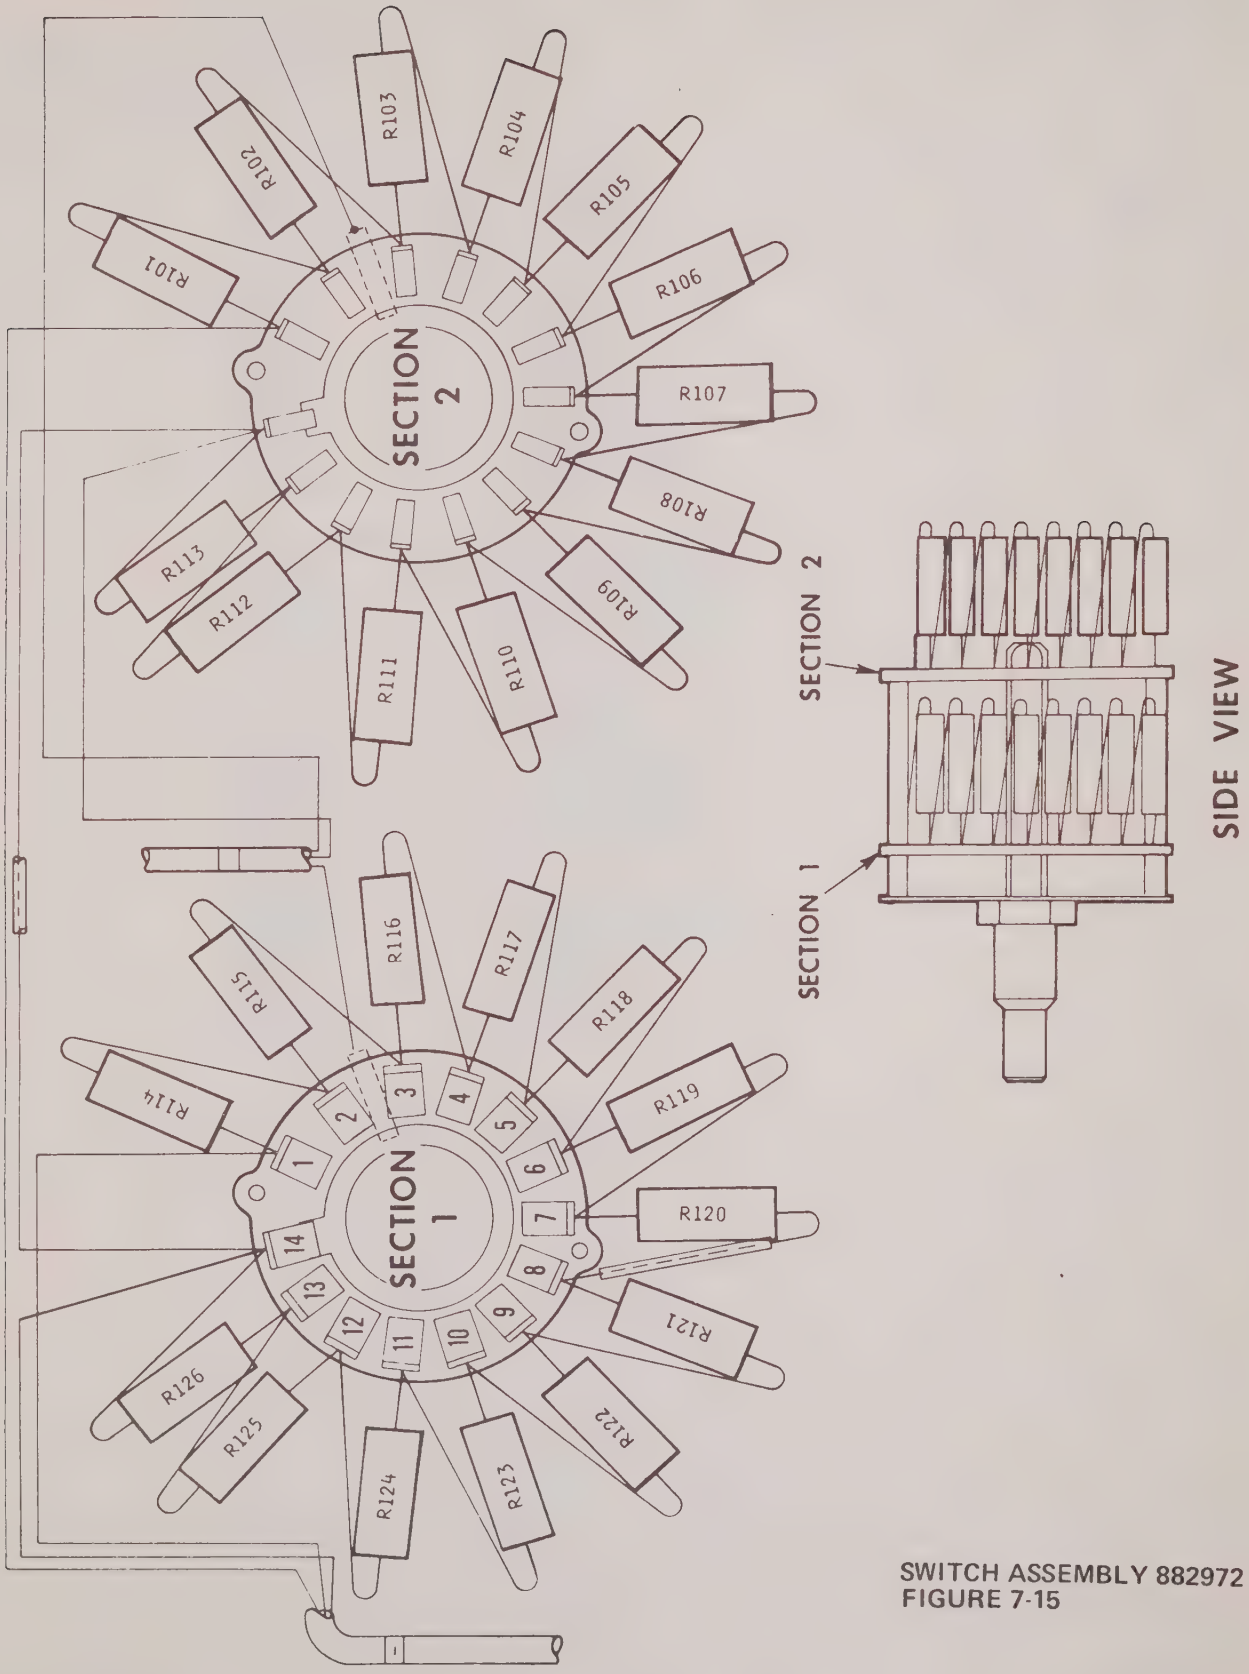

SWITCH ASSEMBLY 882972
FIGURE 7-15

EXPLODED VIEW PARTS LIST
CHART TAKE-UP ASSEMBLY
MODEL 11-6402-06
FIGURE 7-16

ITEM NO	PART NUMBER	DESCRIPTION	SYMBOL NO
1	680147	*Pulley Assy	
	269997	Shaft	
	680190	Pulley	
	236865-4	Cotter Pin	
2	747033	Gear Case, Motor	
3	246307	Block, Threaded	
4	669982-2	Plate, Cover, Right	
5	1-249616-6203	Screw, Pan Head	
6	267253	Spring, Compression	
7	280048	Shaft, Shouldered	
8	769981-2	Arm, Right Hand	
9	669598	Shaft Assy	
10	4-112468-14	Pin, Roll	
11	243740	Collar, Shaft	
12	769979-2	Arm, Left Hand	
13	269986	Shaft, Shouldered	
14	280049	Pulley, Timing	
15	269945	Belt, Timing	
16	669985-20	Plate, Cover, Left	
	248880-1	Bearing (for use with Item 16)	
17	280021	Pulley, Idler	
18	246307	Block, Threaded	
19	1-249640-8206	Screw	

* This Item is not procurable. Order indented items instead.

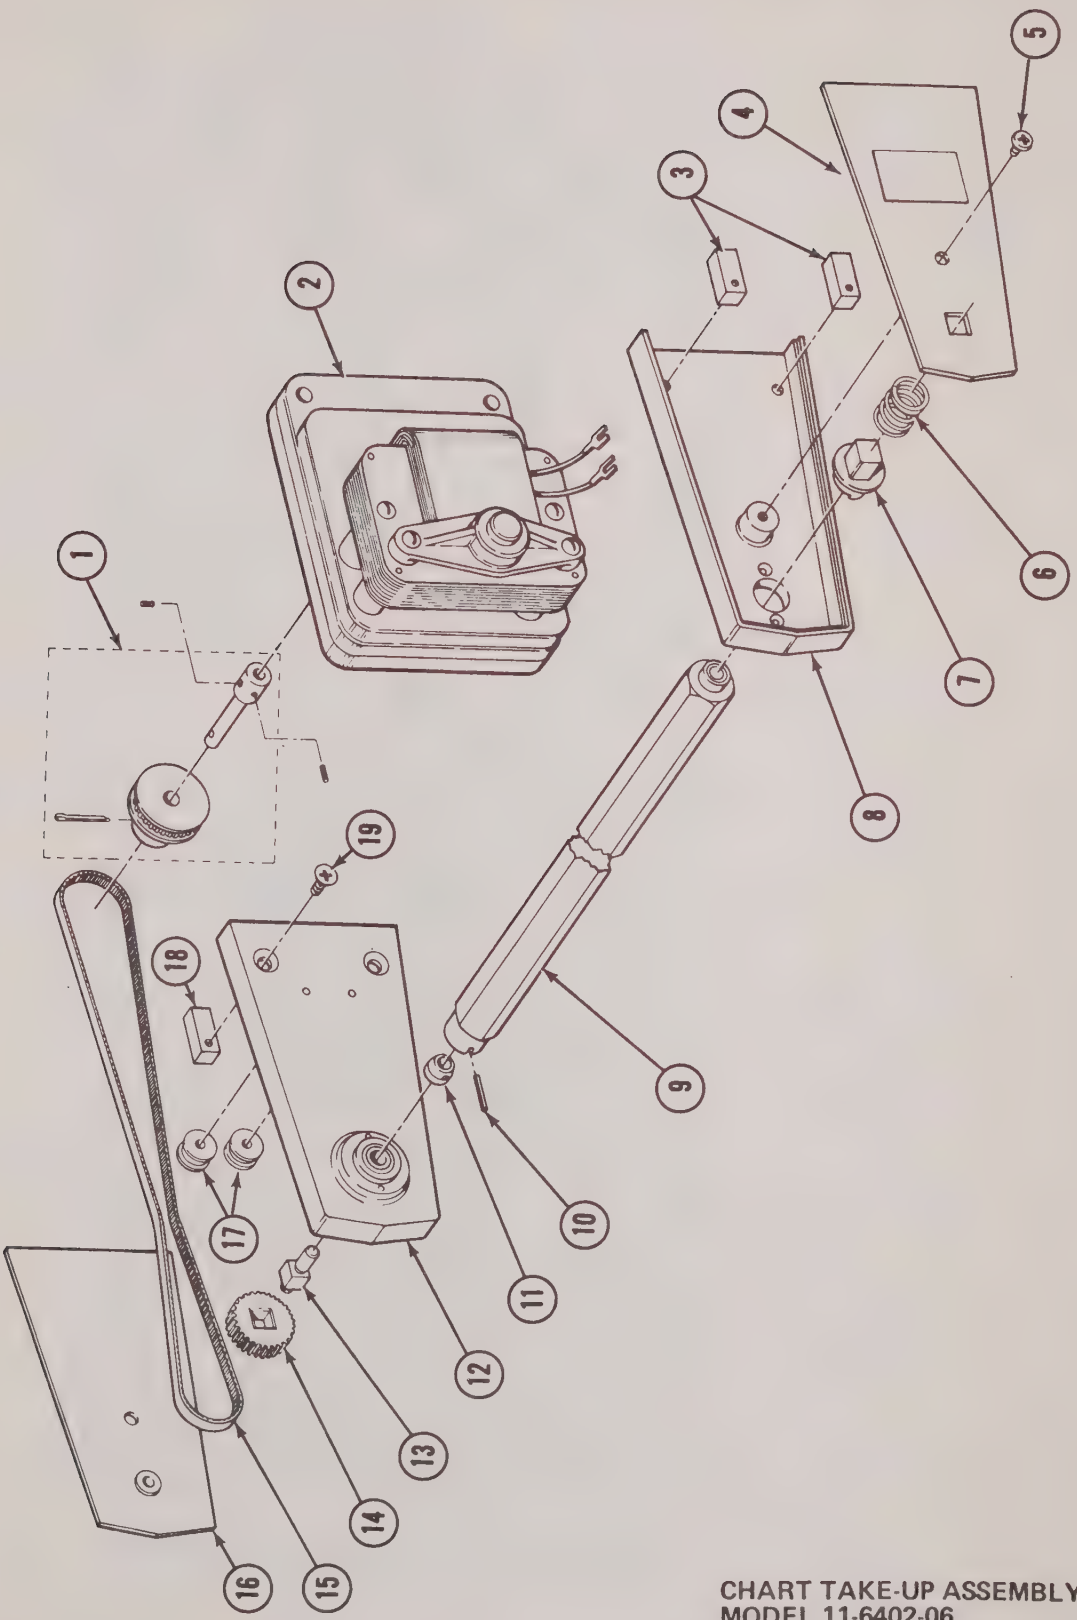

CHART TAKE-UP ASSEMBLY
MODEL 11-6402-06
FIGURE 7-16

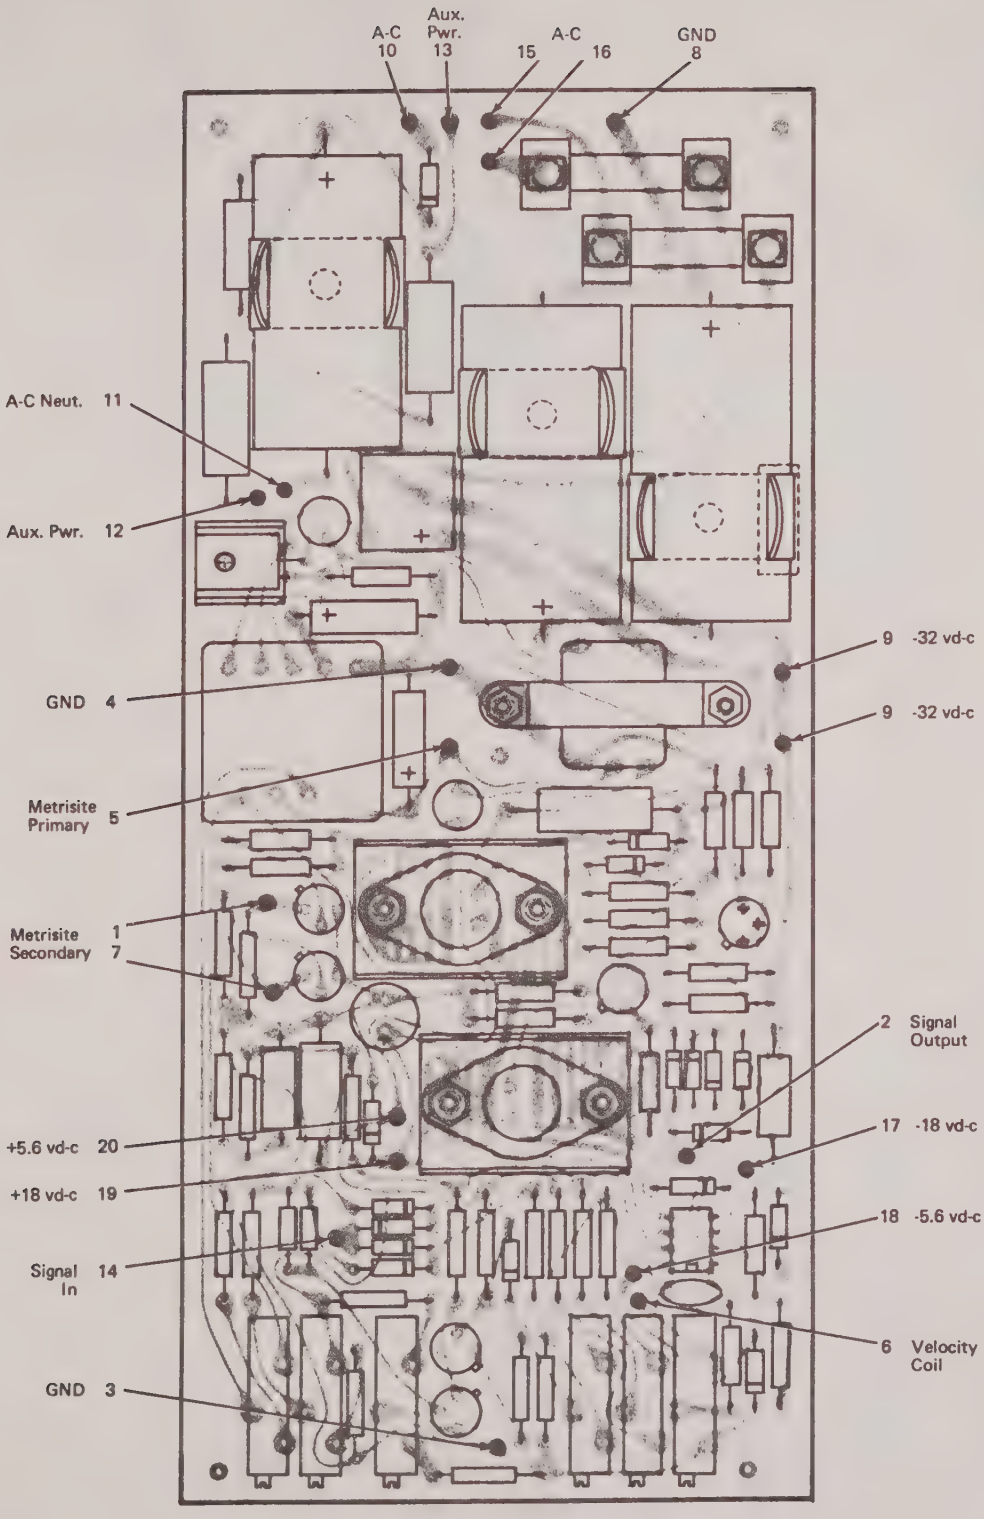

The numbers and voltages on this page refer to the numbers and voltages on schematic 269587.

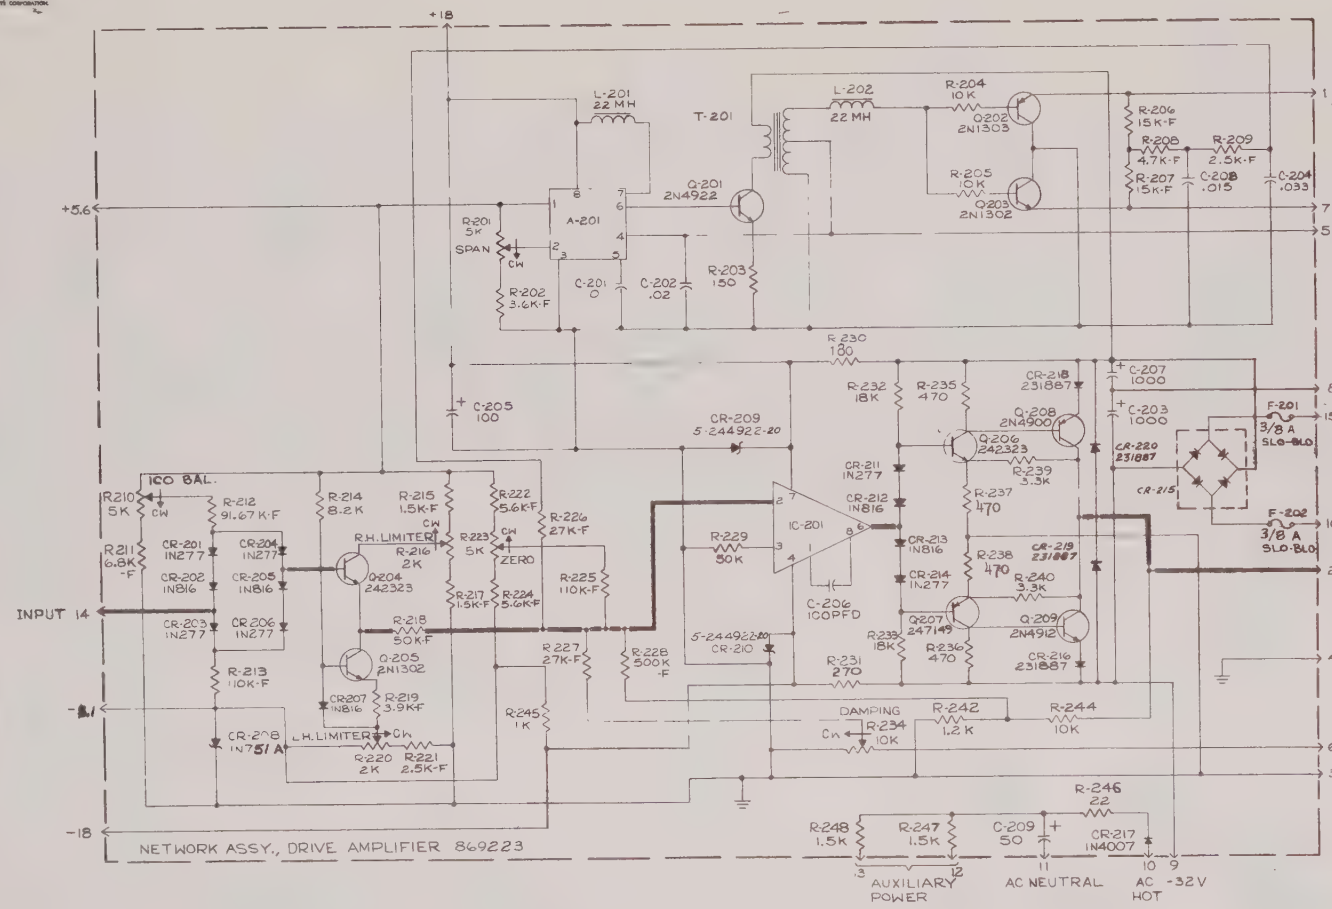

REVISIONS		
EVN	DESCRIPTION	DATE
B-1	REDRAWN PER E. VAUGHN R-237 & R-238 WAS: 1K DCN 12409 E. PREDOVIC	11-6-69
C-1	REVISED PER DCN 12421	11-10-69
C-2	REVISED PER DCN 12432	11-18-69
D-1	REV. PER DCN 12444	11-21-69
E-1	ADDED F-201 & F-202 PER DCN 15572 HOTCHKISS	1-5-71
F-1	F-201, F-202 WAS: 3/4 A DCN 15943 EP	2-8-71
G-1	ADDED CR-219 & CR-220 PER DCN 14890	JLK 8-27-72
H-1	CR-209, CR-210 WERE 10-244922-8 DCN 16058	JLK 10-5-73
J-1	CR-208 WAS 1N-751 DCN 21258	MS 3-9-76
K-1	T.C.O. DIODE WAS: -5.6 ; CR-208 , IN751A DCN 22115	11/22/76 SMOTZER

Gould Inc.
Instrument Systems Division
Cleveland, Ohio 44114 U.S.A.

BY	DATE	NAME	SCHEMATIC ASSEMBLY NO. 869223	
DR SALVATORE/				
CH V.L.	9-16-69			
APP T.J.W.	9-16-69			
		CODE IDENT.	SIZE CODE G	DWG. 269587

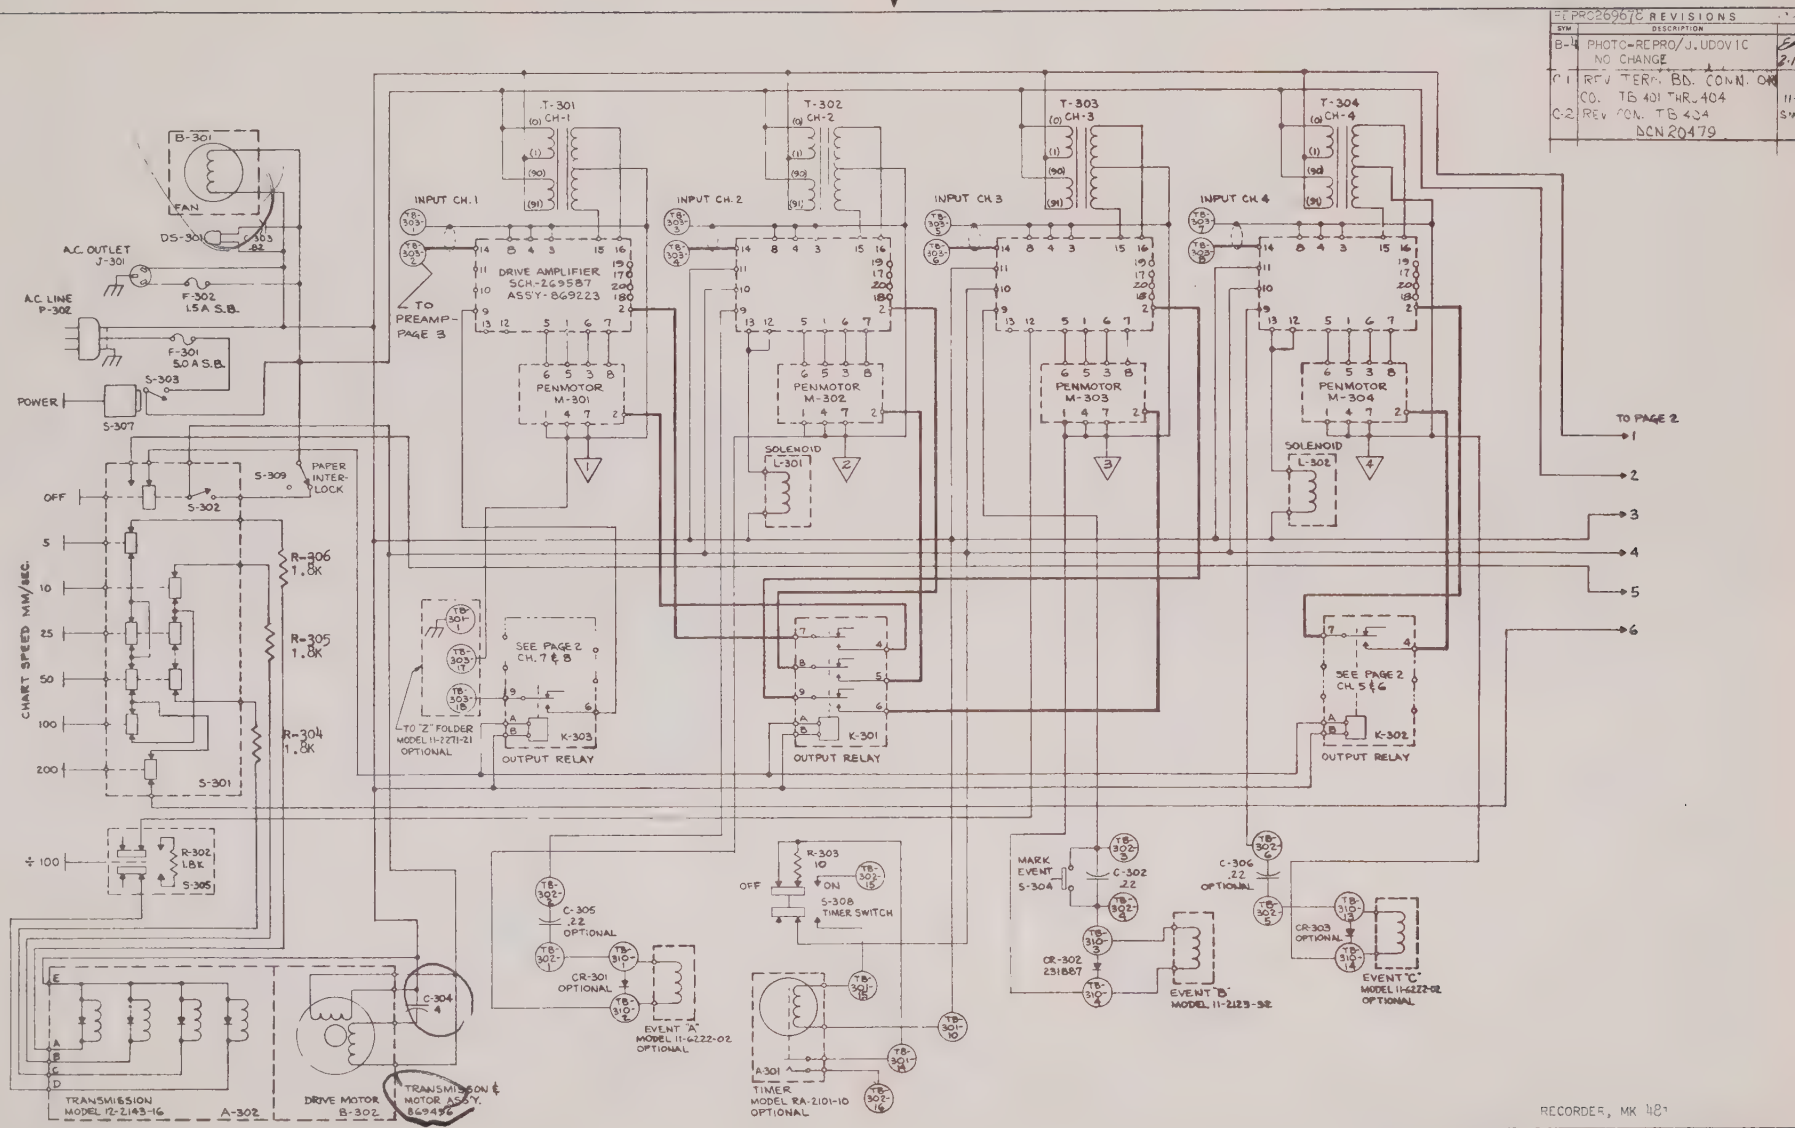
REPRO26967C REVISIONS
SYM DESCRIPTION
B-4 PHOTO-REPRO/J.UDOVIC
NO CHANGE
C-1 REV TERM. BD. CONN. CKT CO. TB 401 THRU 404
C-2 REV CON. TB 404
DCN 20479
T-301 (0) CH-1
T-302 (0) CH-2
T-303 (0) CH-3
T-304 (0) CH-4
INPUT CH. 1
INPUT CH. 2
INPUT CH. 3
INPUT CH. 4
DRIVE AMPLIFIER SCH-269587 ASS'Y-869223
TO PREAMP-PAGE 3
PENMOTOR M-301
PENMOTOR M-302
PENMOTOR M-303
PENMOTOR M-304
SOLENOID L-301
SOLENOID L-302
TO PAGE 2
B-301 FAN
DS-301
C-303 .02
A.C. OUTLET J-301
A.C. LINE P-302
F-302 1.5A S.B.
F-301 5.0A S.B.
S-303
POWER
S-307
S-309
PAPER INTER-LOCK
S-302
OFF
5
10
25
50
100
200
CHART SPEED MM/SEC.
R-306 1.8K
R-305 1.8K
R-304 1.8K
S-301
÷ 100
R-302 1.8K
S-305
SEE PAGE 2 CH. 7 & 8
TO "Z" FOLDER MODEL 11-2271-21 OPTIONAL
K-303
OUTPUT RELAY
K-301
OUTPUT RELAY
SEE PAGE 2 CH. 5 & 6
K-302
OUTPUT RELAY
C-305 .22 OPTIONAL
CR-301 OPTIONAL
EVENT "A" MODEL 11-6222-02 OPTIONAL
R-303 10
OFF
ON
S-308 TIMER SWITCH
A-301
TIMER MODEL RA-2101-10 OPTIONAL
MARK EVENT S-304
C-302 .22
CR-302 231887
EVENT "B" MODEL 11-2123-SE
C-306 .22 OPTIONAL
CR-303 OPTIONAL
EVENT "C" MODEL 11-6222-02 OPTIONAL
C-304 .1
TRANSMISSION MODEL 12-2143-16 A-302
DRIVE MOTOR B-302
TRANSMISSION & MOTOR ASS'Y. 869496
RECORDER, MK 481
SCHEMATIC
MODEL NO. 15-6687-01
DR. KISNER
CODE IDENT 96795
ISSUE CODE G
Gould Inc Instrument Systems
Cleveland Ohio 4411
DWG NO. 28299

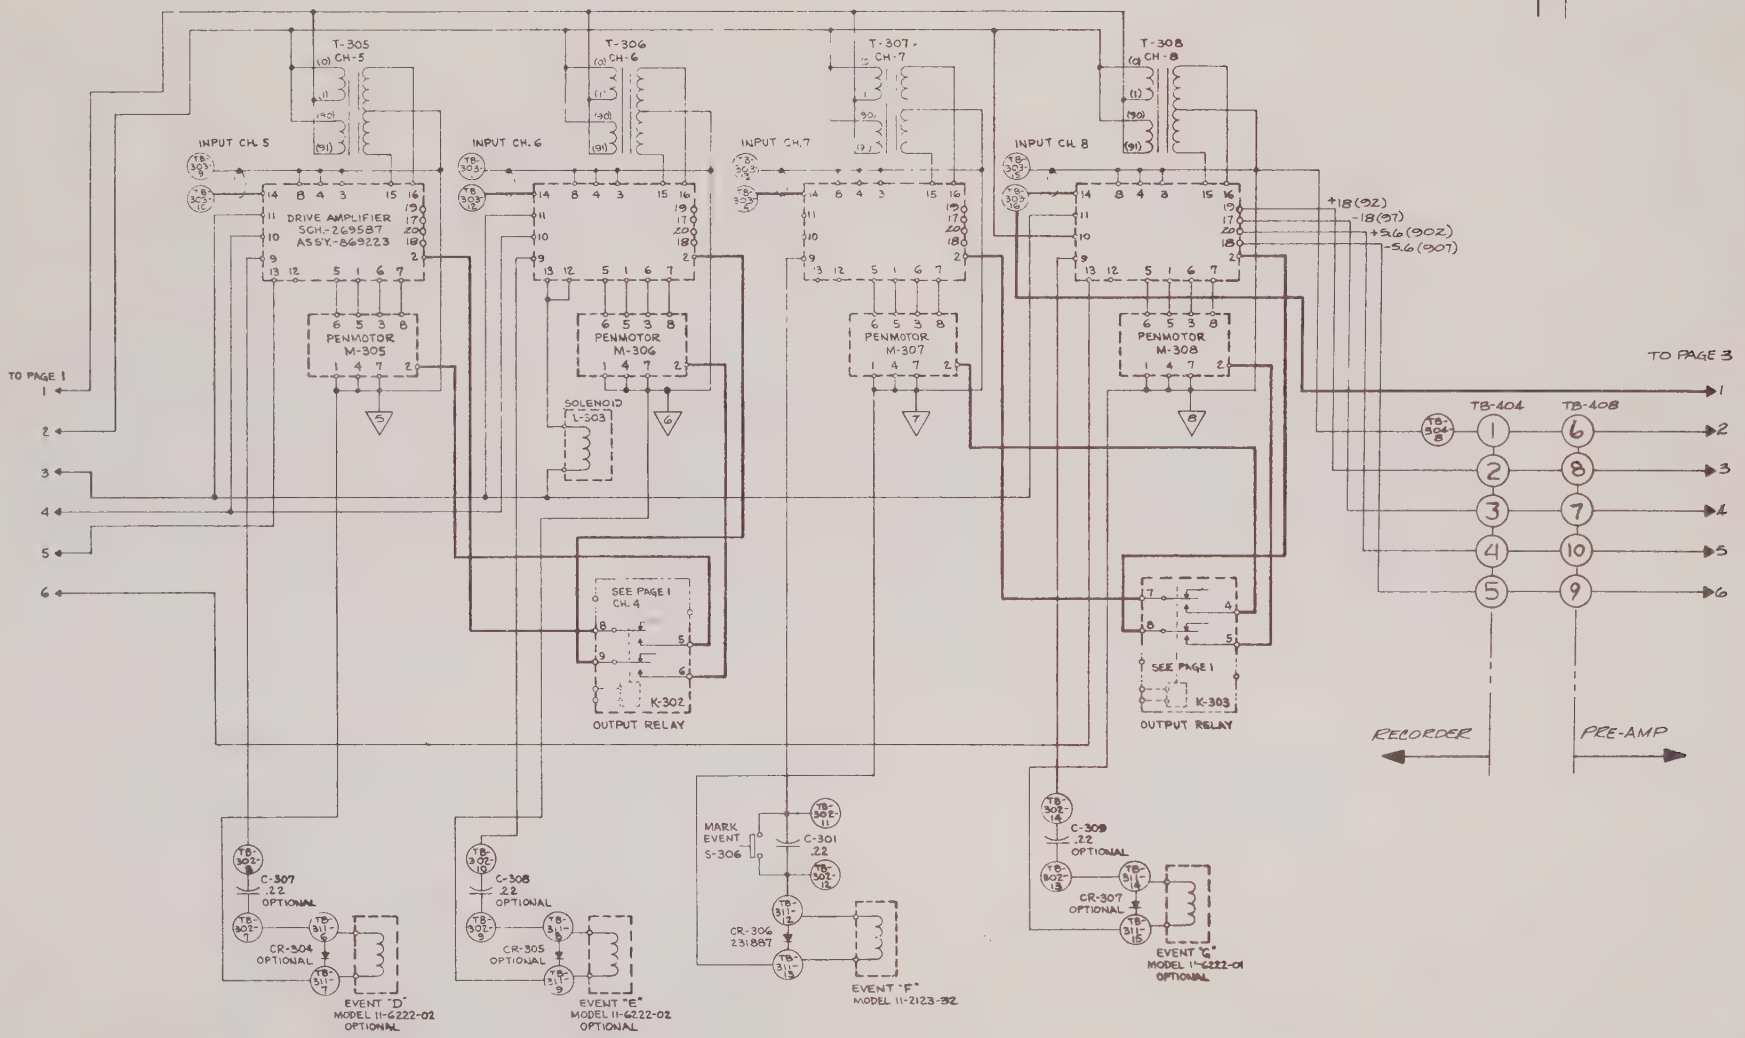

SYM	DESCRIPTION
	REVISIONS

RECORDER, MK 481

	BY	DATE	NAME
DR	J.NER	3/16/72	SCHEMATIC
CH		3/16/72	MODEL NO. 15-6687-01
APP	J.CAMP	3/16/72	CODE IDENT 96795

Gould Inc
Instrument Systems D
Cleveland, Ohio 44114

DWG. NO. 28299

SIZE C

PAGE 3 C

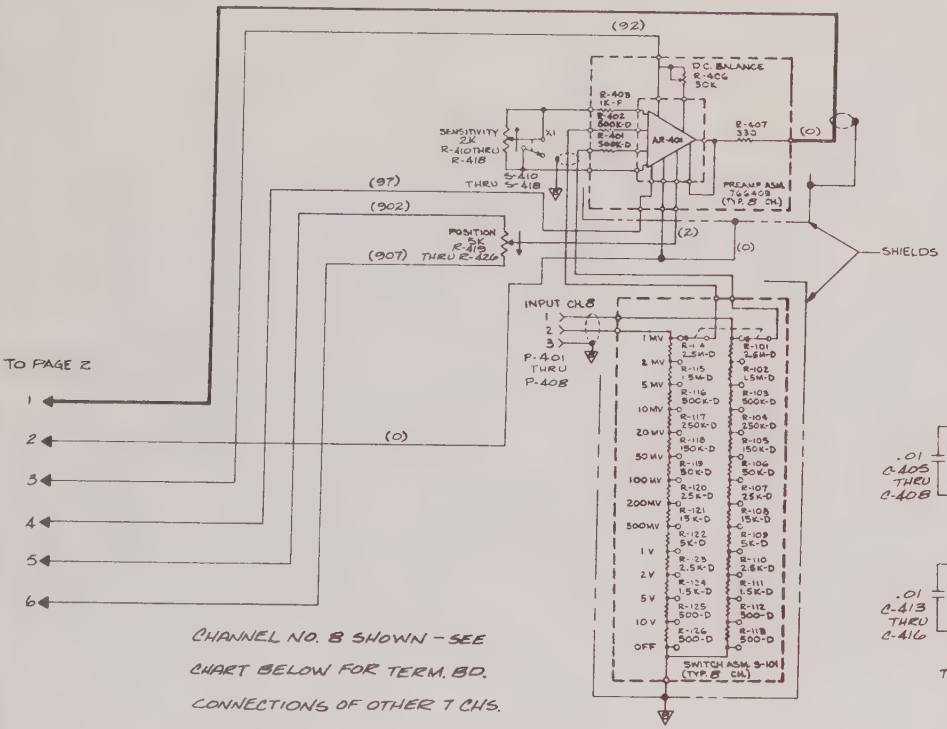

CHANNEL NO. 8 SHOWN - SEE CHART BELOW FOR TERM. BD. CONNECTIONS OF OTHER 7 CHS.

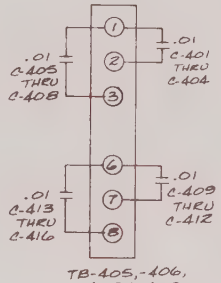

TB-405, -406, -407 & -408

DRIVE AMPLIFIER CONNECTIONS

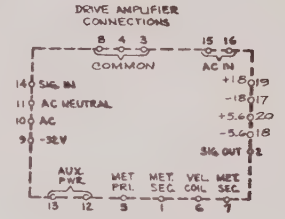

PENMOTOR ASS'Y. NO. BG7060

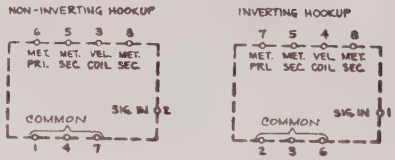

TERM. BD.	304	401	402	403	404	405	406	407	408	303
CONTACT 1	1 0	1 0	3 0	5 0	7 0	1 0	3 0	5 0	7 0	1 DOWN
2	2 0	1 92	3 92	5 92	7 92	1 97	3 97	5 97	7 97	1 0
3	3 0	1 97	3 97	5 97	7 97	1 902	3 902	5 902	7 902	2 DOWN
4	4 0	1 902	3 902	5 902	7 902	1 907	3 907	5 907	7 907	2 0
5	5 0	1 907	3 907	5 907	7 907	1 902	3 902	5 902	7 902	3 DOWN
6	6 0	2 0	4 0	6 0	8 0	2 0	4 0	6 0	8 0	3 0
7	7 0	2 92	4 92	6 92	8 92	2 97	4 97	6 97	8 97	4 DOWN
8	8 0	2 97	4 97	6 97	8 97	2 902	4 902	6 902	8 902	4 0
9		2 902	4 902	6 902	8 902	2 907	4 907	6 907	8 907	5 DOWN
CONTACT 10		2 907	4 907	6 907	8 907	2 902	4 902	6 902	8 902	5 0

WIRE COLOR
CH. NO.
TYP. 8 CHS.

NOTES:
1. UNLESS OTHERWISE INDICATED:
   ALL RESISTOR VALUES IN OHMS.
   ALL RESISTORS 5% TOLERANCE.
   ALL CAPACITOR VALUES IN MICROFARADS.
2. HEAVY LINES REPRESENT SIGNAL FLOW.
3. SCHEMATIC ILLUSTRATES NON-INVERTING HOOKUP TO PENMOTOR.
4. WIRE COLORS IN EIA COLOR CODE SHOWN IN PARENTHESIS ( ).

REVISIONS

SYM	DESCRIPTION

RECORDER, MK 481

BY	DATE	NAME	
DR ISNER	9/25/72	SCHEMATIC	
CH	9/29/72	MODEL NO. 15-6687-01	
APP	10/5/72	CODE IDENT 96795	ISSUE CODE G

Gould Inc.
Instrument Systems Division
Cleveland, Ohio 44114 U.S.A.
DWG NO. 282993

Form 27 371

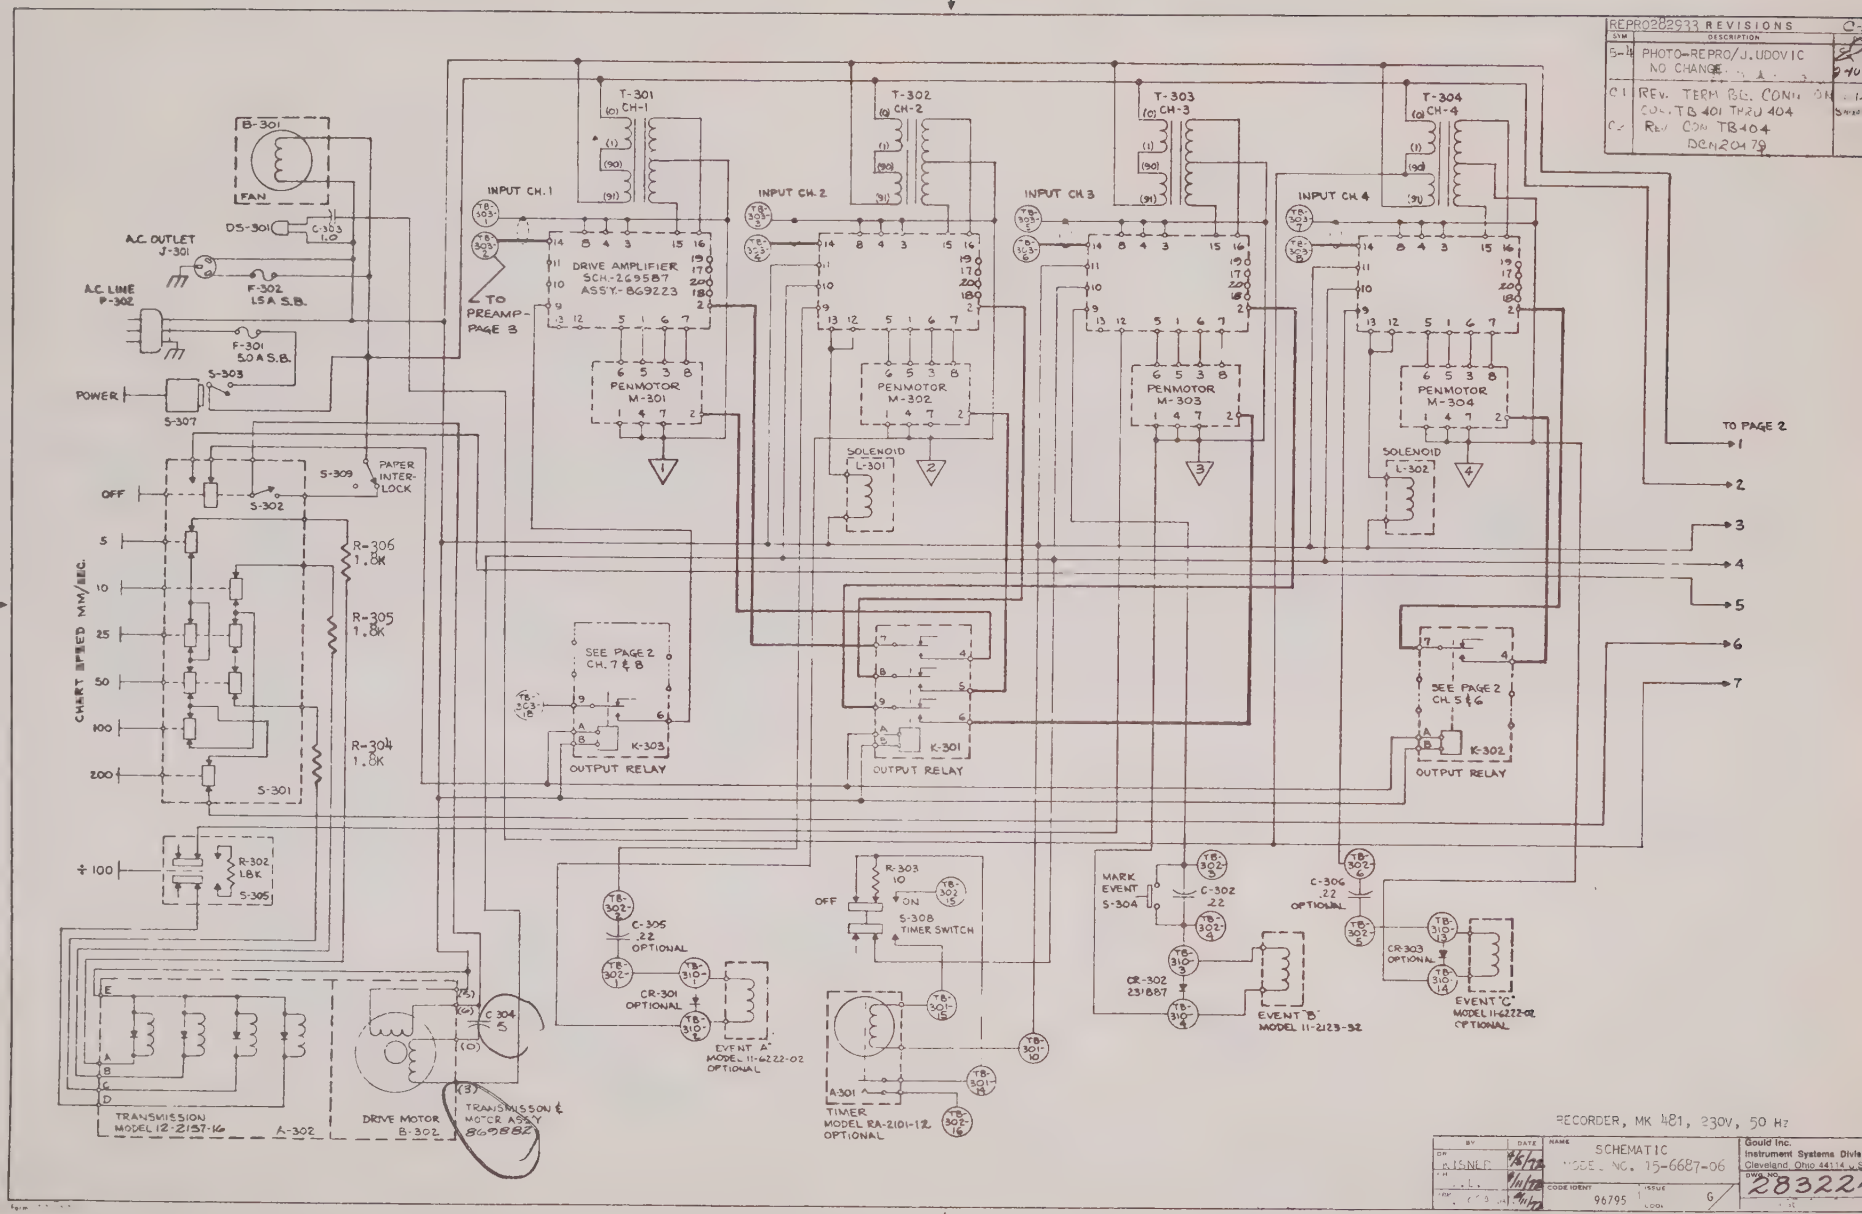
REPRO2B2933 REVISIONS
DESCRIPTION
B-4 PHOTO-REPRO/J.UDOVIC NO CHANGE
C1 REV. TERM BL. CONN SH. 2 COL. TB 401 THRU 404
C2 REV. CON TB404 DCN20179
T-301 CH-1
T-302 CH-2
T-303 CH-3
T-304 CH-4
INPUT CH. 1
INPUT CH. 2
INPUT CH. 3
INPUT CH. 4
DRIVE AMPLIFIER SCH-269587 ASSY-869223
TO PREAMP-PAGE 3
PENMOTOR M-301
PENMOTOR M-302
PENMOTOR M-303
PENMOTOR M-304
SOLENOID L-301
SOLENOID L-302
TO PAGE 2
B-301 FAN
D5-301
C-303 1.0
A.C. OUTLET J-301
A.C. LINE P-302
F-302 LSA S.B.
F-301 5.0 A S.B.
S-303
POWER
S-307
S-309 PAPER INTER-LOCK
S-302
OFF
CHART SPEED MM/SEC.
5
10
25
50
100
200
S-301
R-306 1.8K
R-305 1.8K
R-304 1.8K
÷ 100
R-302 1.8K
S-305
SEE PAGE 2 CH. 7 & 8
K-303
OUTPUT RELAY
K-301
OUTPUT RELAY
SEE PAGE 2 CH. 5 & 6
K-302
OUTPUT RELAY
C-305 .22 OPTIONAL
CR-301 OPTIONAL
EVENT 'A' MODEL 11-6222-02 OPTIONAL
R-303 10
S-308 TIMER SWITCH
TIMER MODEL RA-2101-12 OPTIONAL
MARK EVENT S-304
C-302 .22
CR-302 231887
EVENT 'B' MODEL 11-2123-32
C-306 .22 OPTIONAL
CR-303 OPTIONAL
EVENT 'C' MODEL 11-6222-02 OPTIONAL
TRANSMISSION MODEL 12-2157-16
A-302
DRIVE MOTOR B-302
C-304 .5
TRANSMISSON & MOTOR ASSY 869882
RECORDER, MK 481, 230V, 50 Hz
SCHEMATIC
MODEL NO. 15-6687-06
CODE IDENT 96795
ISSUE G
Gould Inc. Instrument Systems Divis
Cleveland, Ohio 44114 U.S.
DWG NO. 28322

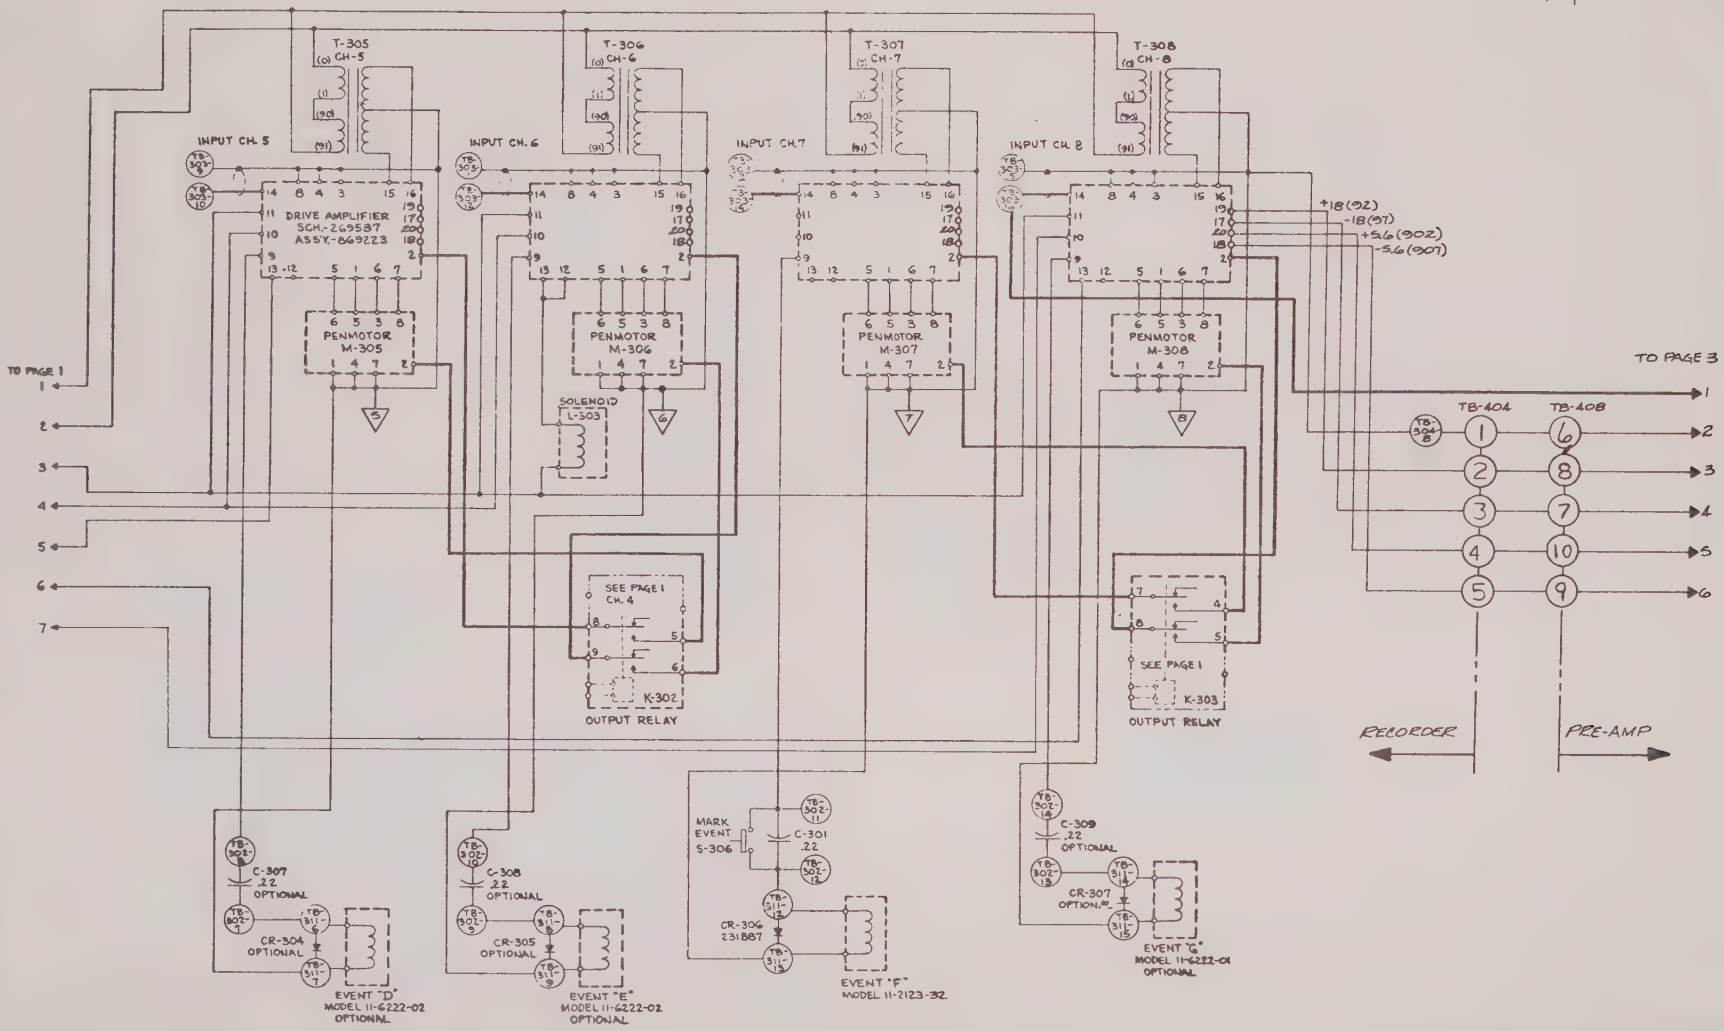

REPRO 262095 REVISIONS

RECORDER, MK 481, 230V, 50Hz

BY	DATE	NAME	SCHEMATIC
DR GISNER	9/6/72		MODEL NO. 15-6667-06
CH	9/11/72	CODE IDENT	ISSUE
APP	9/11/72	96795	G

Gould Inc. Instrument Systems Division Cleveland, Ohio 44114 U.S.A.

DWG. NO. 283224

REVISIONS			C 2
SYM	DESCRIPTION		DATE

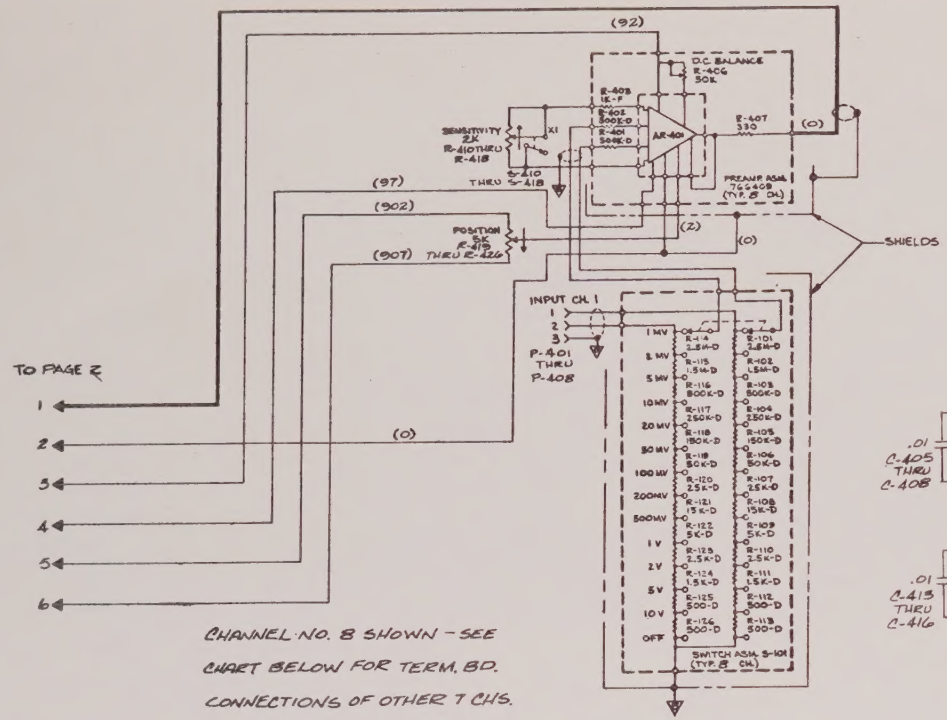

CHANNEL NO. 8 SHOWN - SEE CHART BELOW FOR TERM. BD. CONNECTIONS OF OTHER 7 CHS.

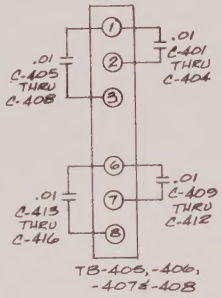

DRIVE AMPLIFIER CONNECTIONS

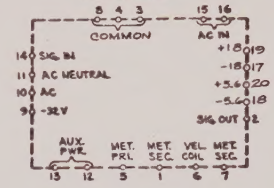

PENMOTOR ASS'Y. NO. 867060

NON-INVERTING HOOKUP

INVERTING HOOKUP

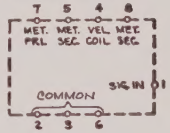

TERM. BD.	304		401		402		403		404		405		406		407		408		303	
CONTACT 1	1	0	1	0	3	0	5	0	7	C	1	0	3	0	5	0	7	0	1	TERM
2	2	0	1	92	3	92	5	92	7	92	1	97	3	97	5	97	7	97	1	0
3	3	0	1	97	3	97	5	97	7	97	1	92	3	92	5	92	7	92	2	TERM
4	4	0	1	902	3	902	5	902	7	902	1	907	3	907	5	907	7	907	2	0
5	5	0	1	907	3	907	5	907	7	907	1	902	3	902	5	902	7	902	3	TERM
6	6	0	2	0	4	0	6	0	8	0	2	0	4	0	6	0	8	0	3	0
7	7	0	2	92	4	92	6	92	8	92	2	97	4	97	6	97	8	97	4	TERM
8	8	0	2	97	4	97	6	97	8	97	2	92	4	92	6	92	8	92	4	0
9			2	902	4	902	6	902	8	902	2	907	4	907	6	907	8	907	5	TERM
CONTACT 10			2	907	4	907	6	907	8	907	2	902	4	902	6	902	8	902	5	0

TYP. 8 CHS.

WIRE COLOR

CH. NO.

NOTES:
1. UNLESS OTHERWISE INDICATED:
   ALL RESISTOR VALUES IN OHMS.
   ALL RESISTORS 5% TOLERANCE.
   ALL CAPACITOR VALUES IN MICROFARADS.
2. HEAVY LINES REPRESENT SIGNAL FLOW.
3. SCHEMATIC ILLUSTRATES NON-INVERTING HOOKUP TO PENMOTOR.
4. WIRE COLORS IN EIA COLOR CODE SHOWN IN PARENTHESIS ( ).

RECORDER, MK 481, 230V, 50 Hz

BY	DATE	NAME	SCHEMATIC	Gould Inc. Instrument Systems Division Cleveland, Ohio 44114 U.S.A.
DR K'ISNER	4/14/72			
CH V.L.	4/21/72	MODEL NO. 15-6687-06		DWG. NO. 283224
APP P. McCAHA	5/11/72	CODE IDENT 96795	ISSUE CODE G	

www.manualsplus.com
1026388

Gould Inc., Instruments Division
3631 Perkins Avenue, Cleveland, Ohio 44114
Telephone (216) 361-3315

GOULD
Electronics & Electrical Products